


How to Assemble:

The Acton Slat Bench


Components

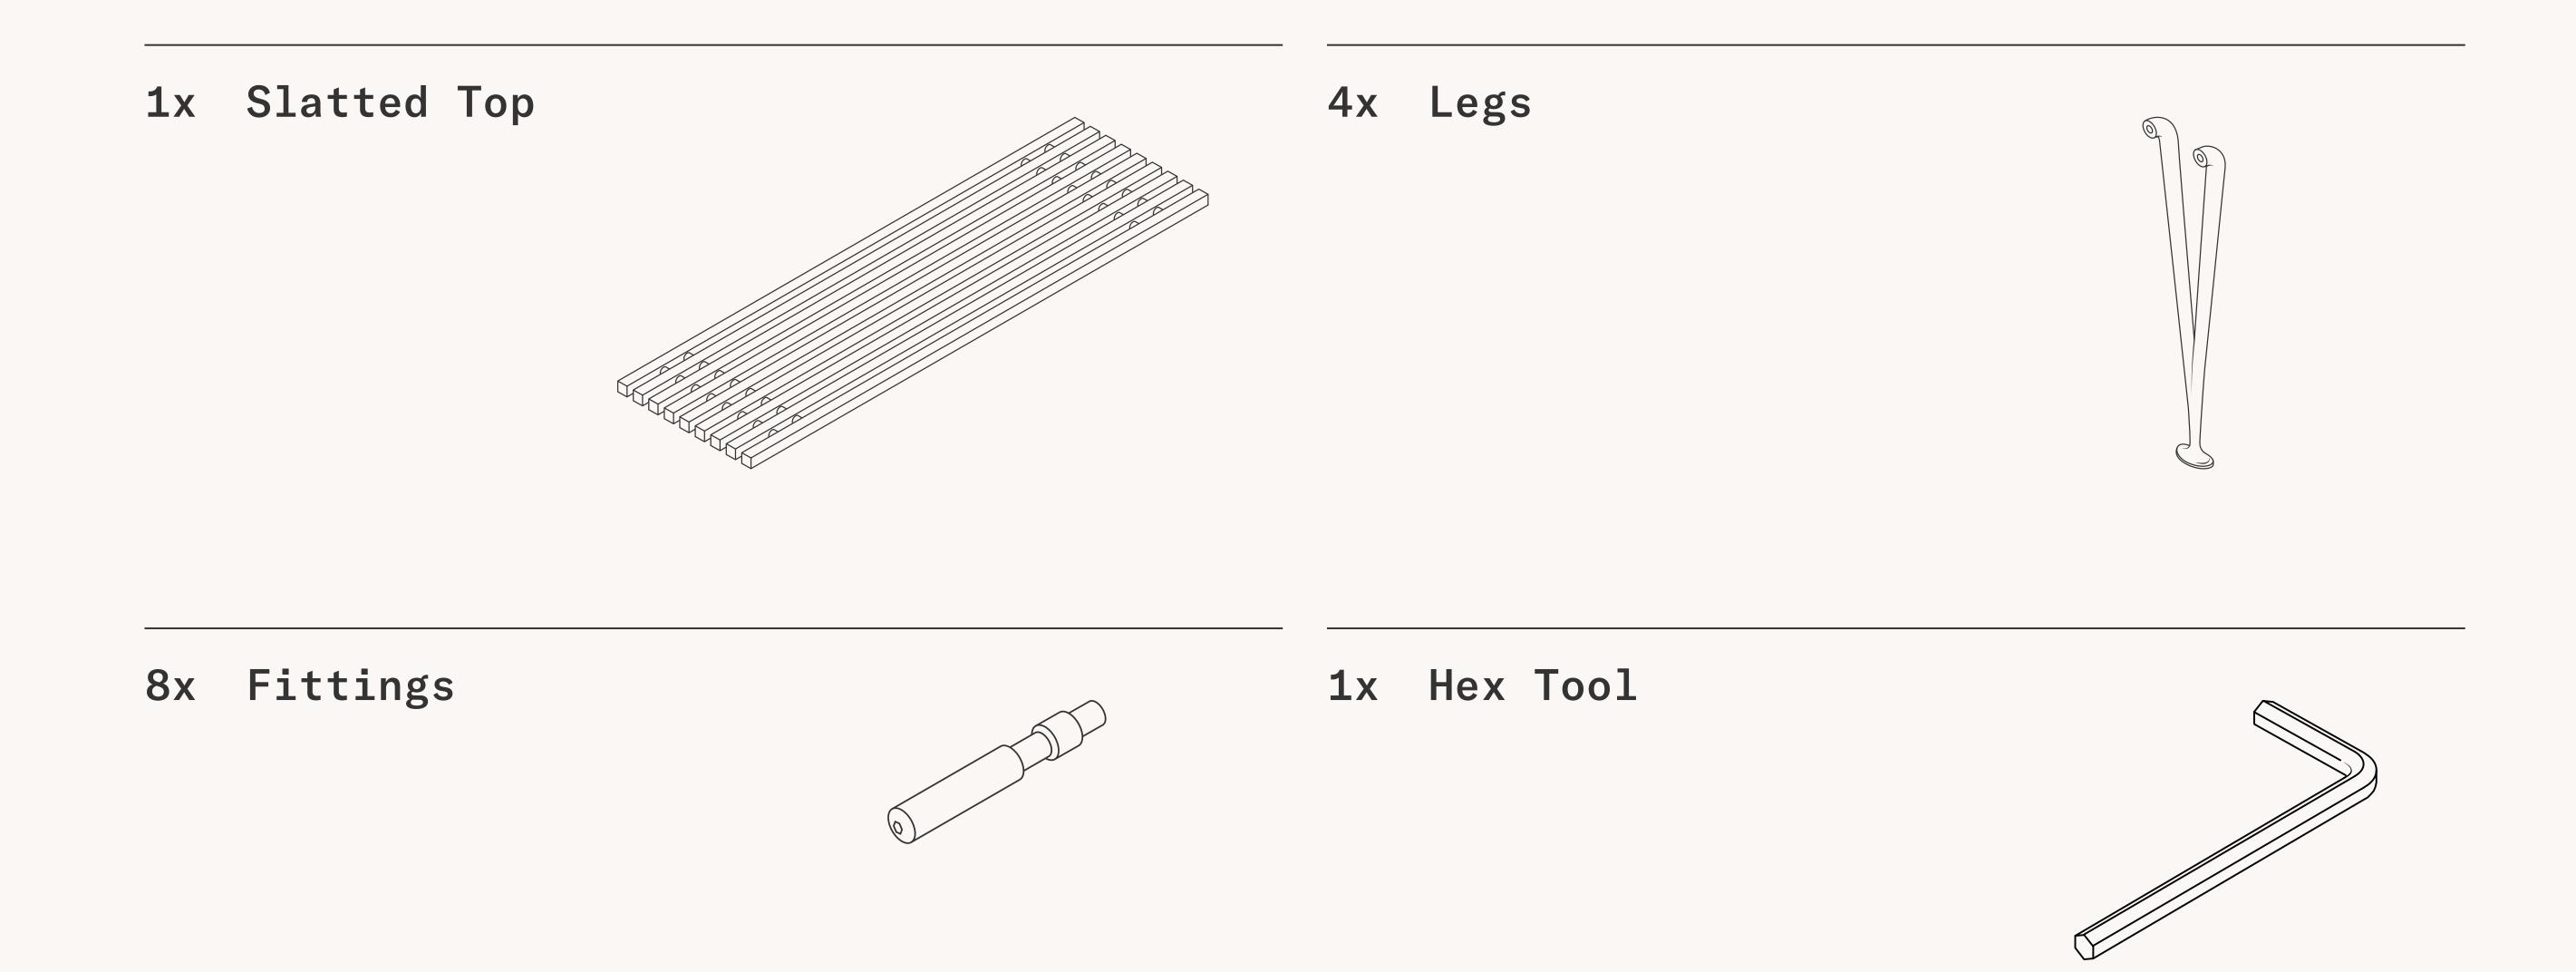

Step: 1 of 7


Screw the Fittings into the thread holes at the top of the Legs.

Use the provided Hex Tool to fully tighten the Fittings to the Legs. Repeat the process with the remaining Legs.

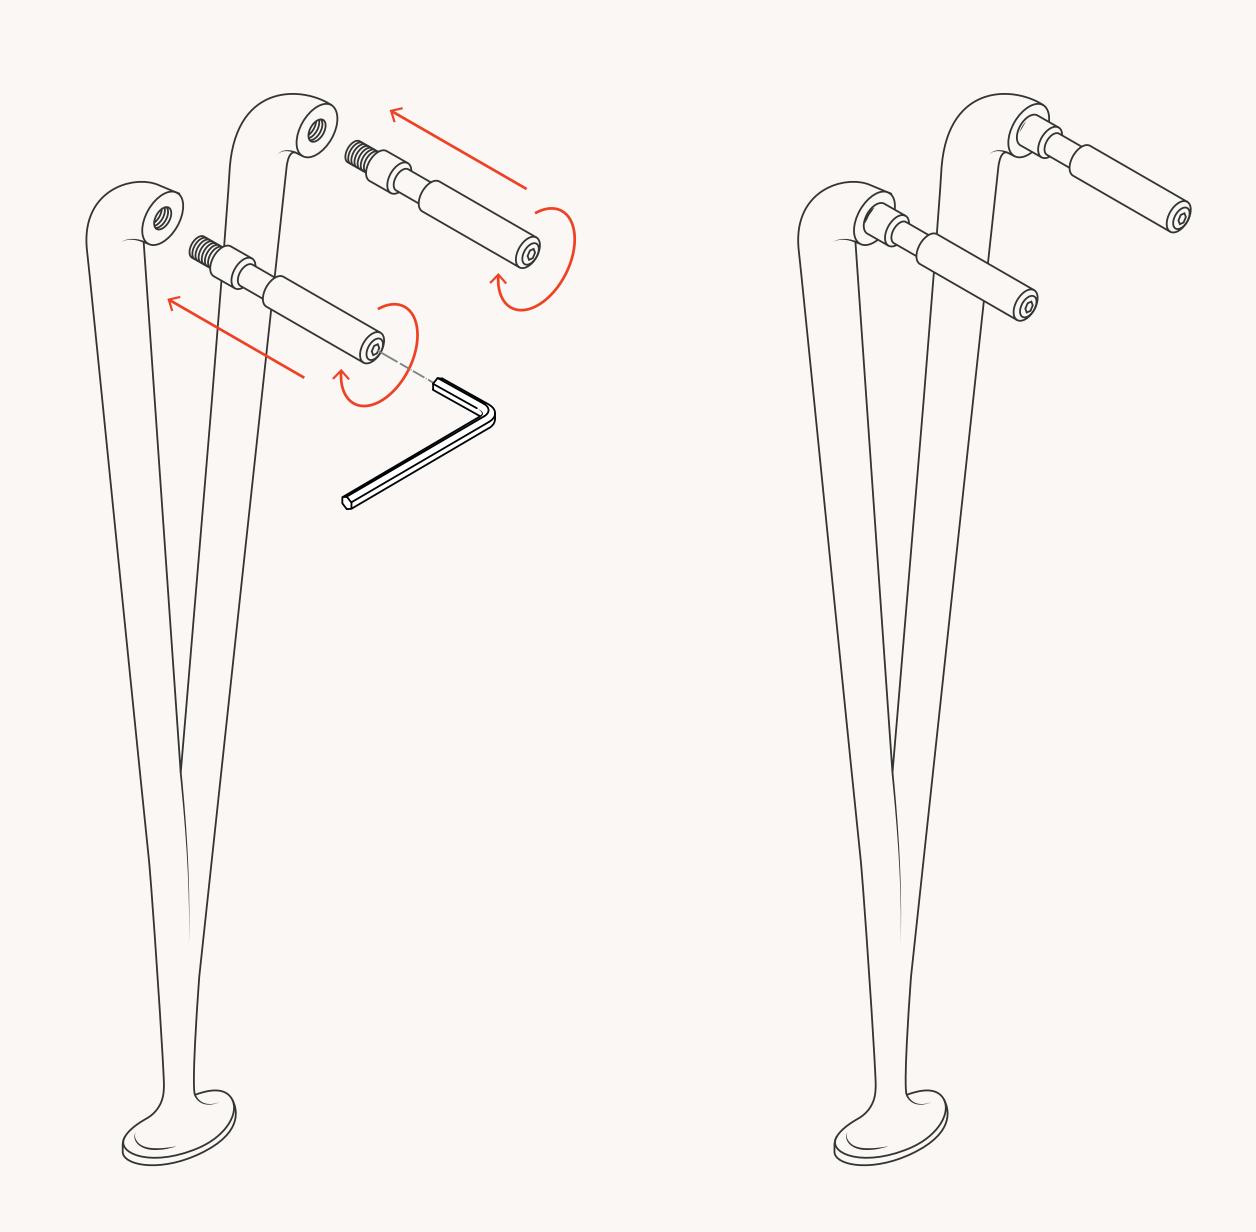


Step: 2 of 7

Remove the Slatted Top from the packaging and place on a rug or other non-abrasive surface with the screws facing up.

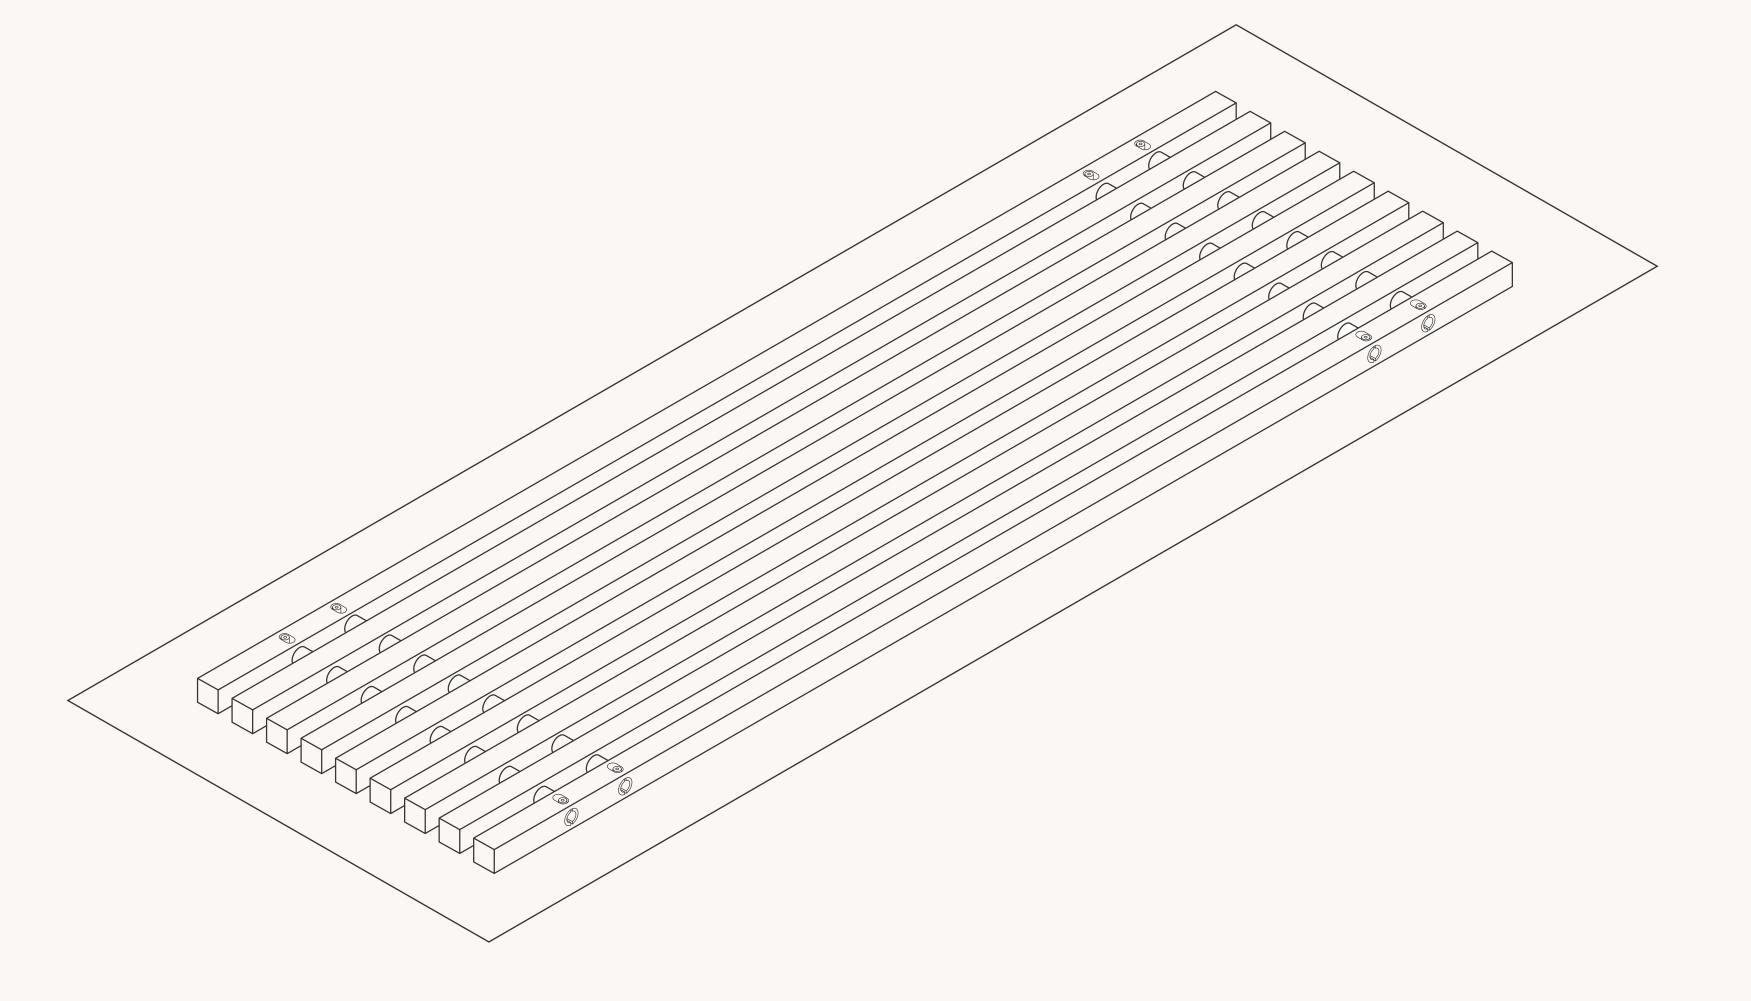

Step: 3 of 7


Using the Hex Tool, loosen the pre-installed screws by turning them counterclockwise (4x). Do not fully remove the screws.

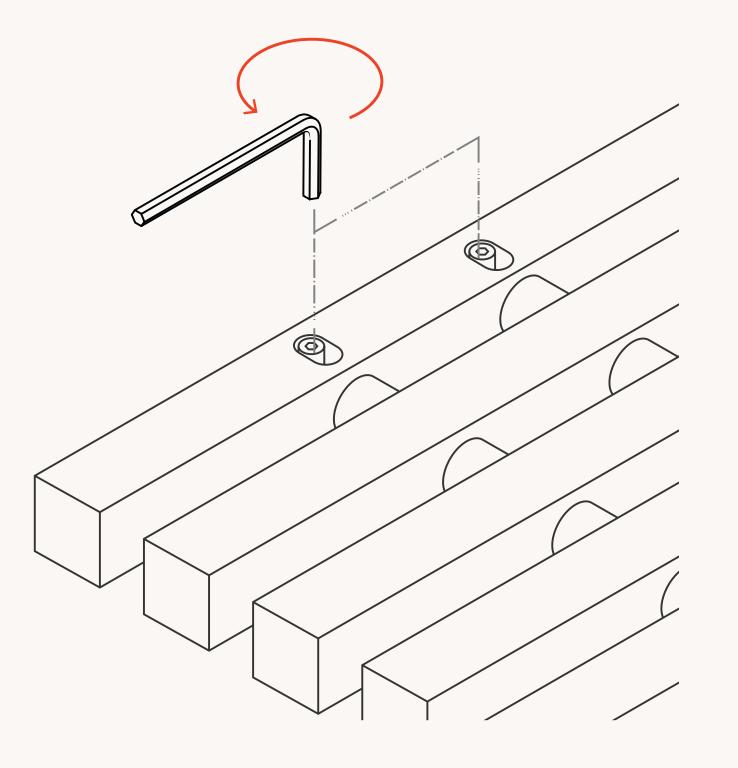

Step: 4 of 7


Insert the Leg Fittings into the two corresponding holes in the side of the slat until the Leg is flush with the Slatted Top.

Secure the Legs to the Slatted Top by tightening the screws.

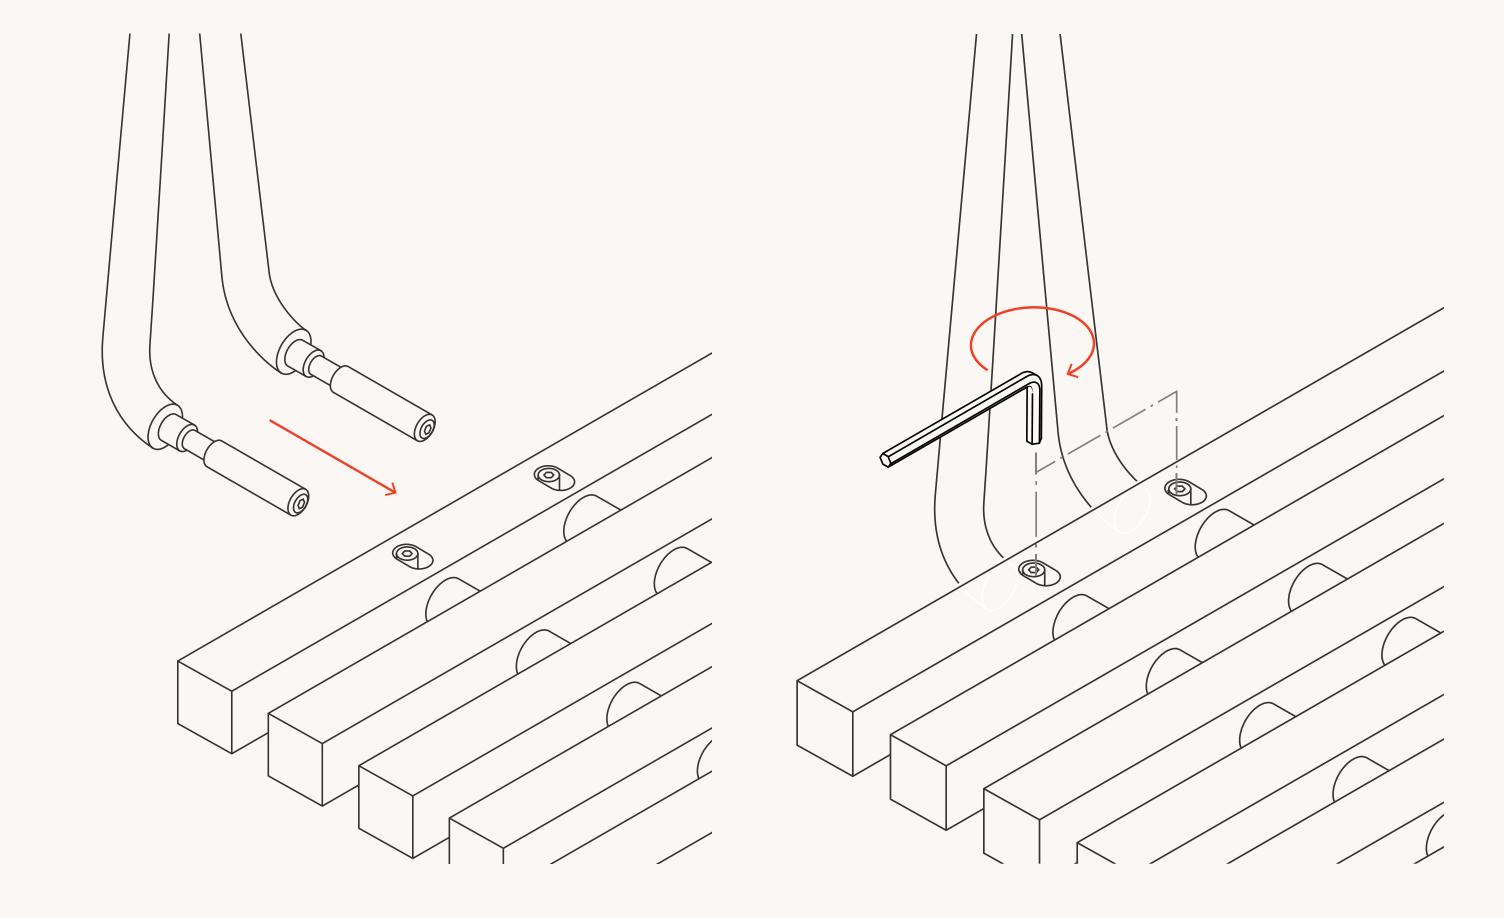


Step: 5 of 7

One at a time, repeat step 4 to attach the remaining 3 Legs.

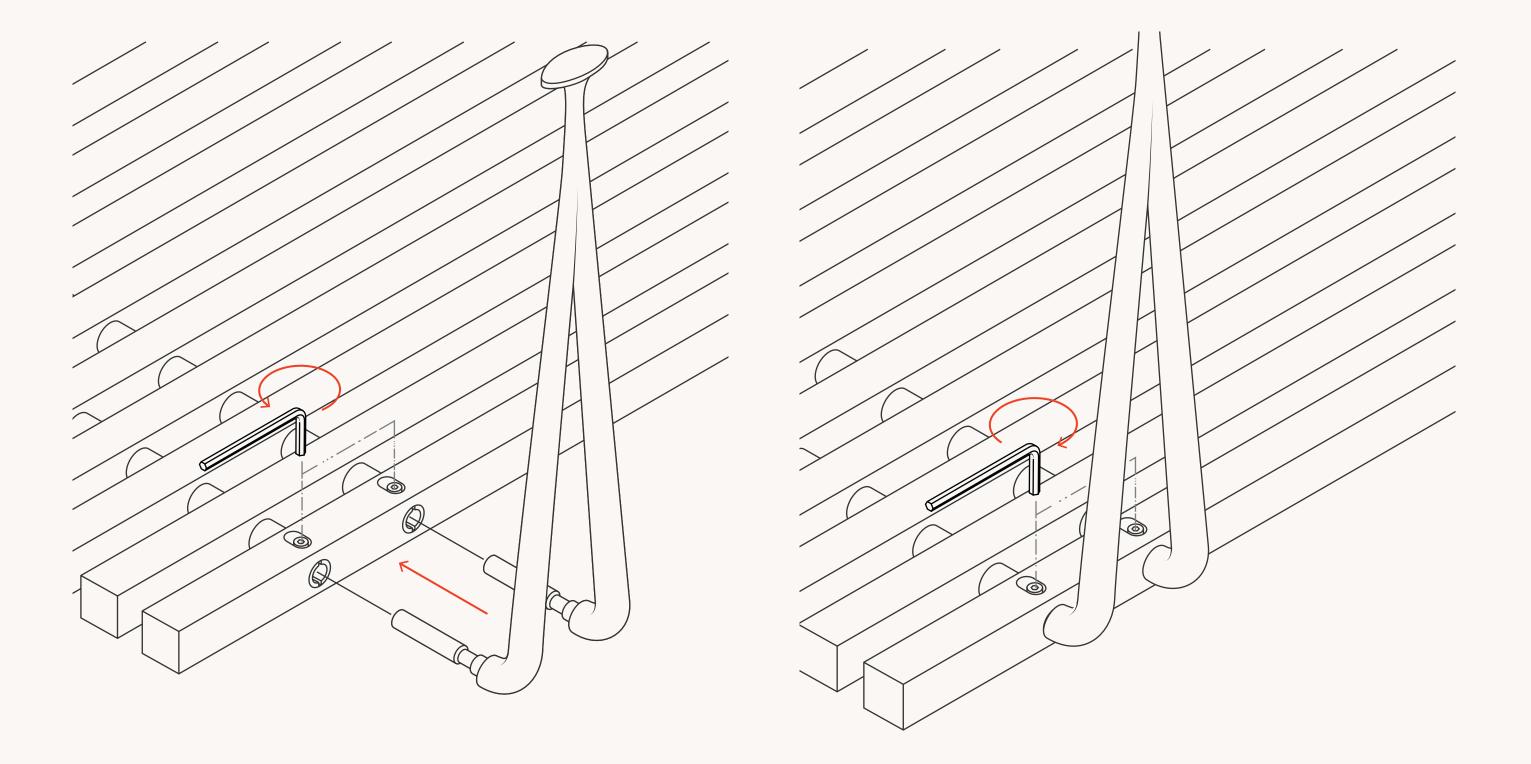

Step: 6 of 7)


Double check that all the screws are tightened and all four Legs are firmly in place.

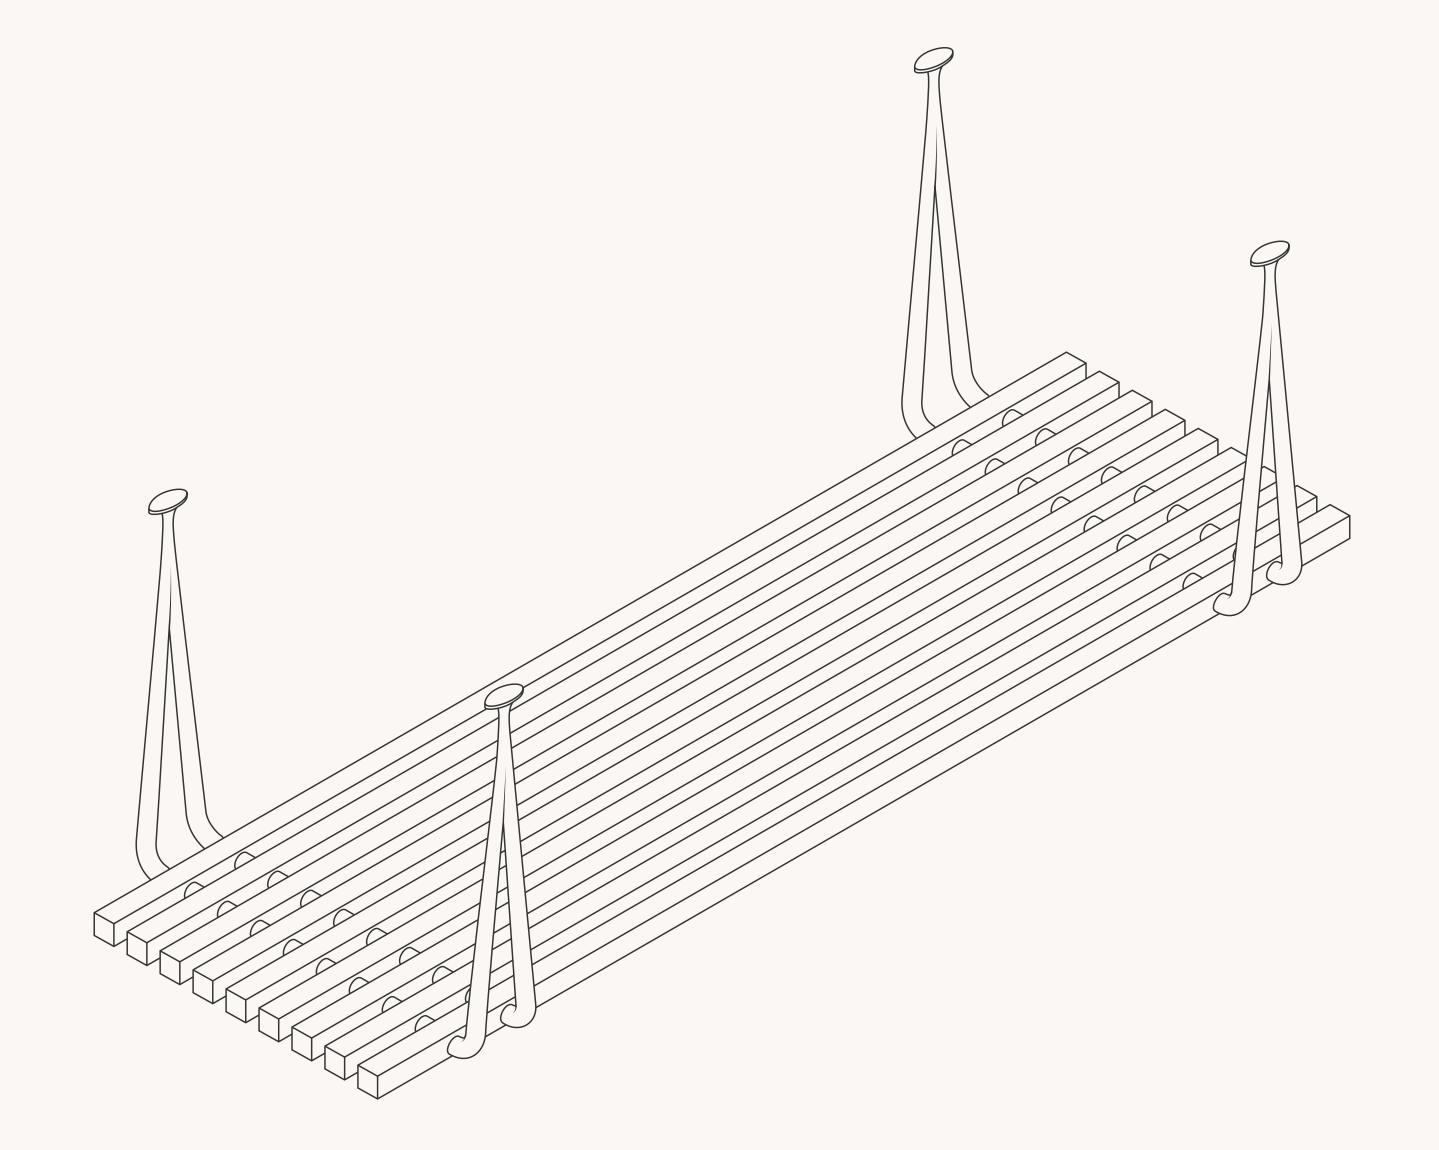

Step: 7 of 7)

You're all set! Carefully flip the bench upright.

Note: If necessary, further tighten screws.

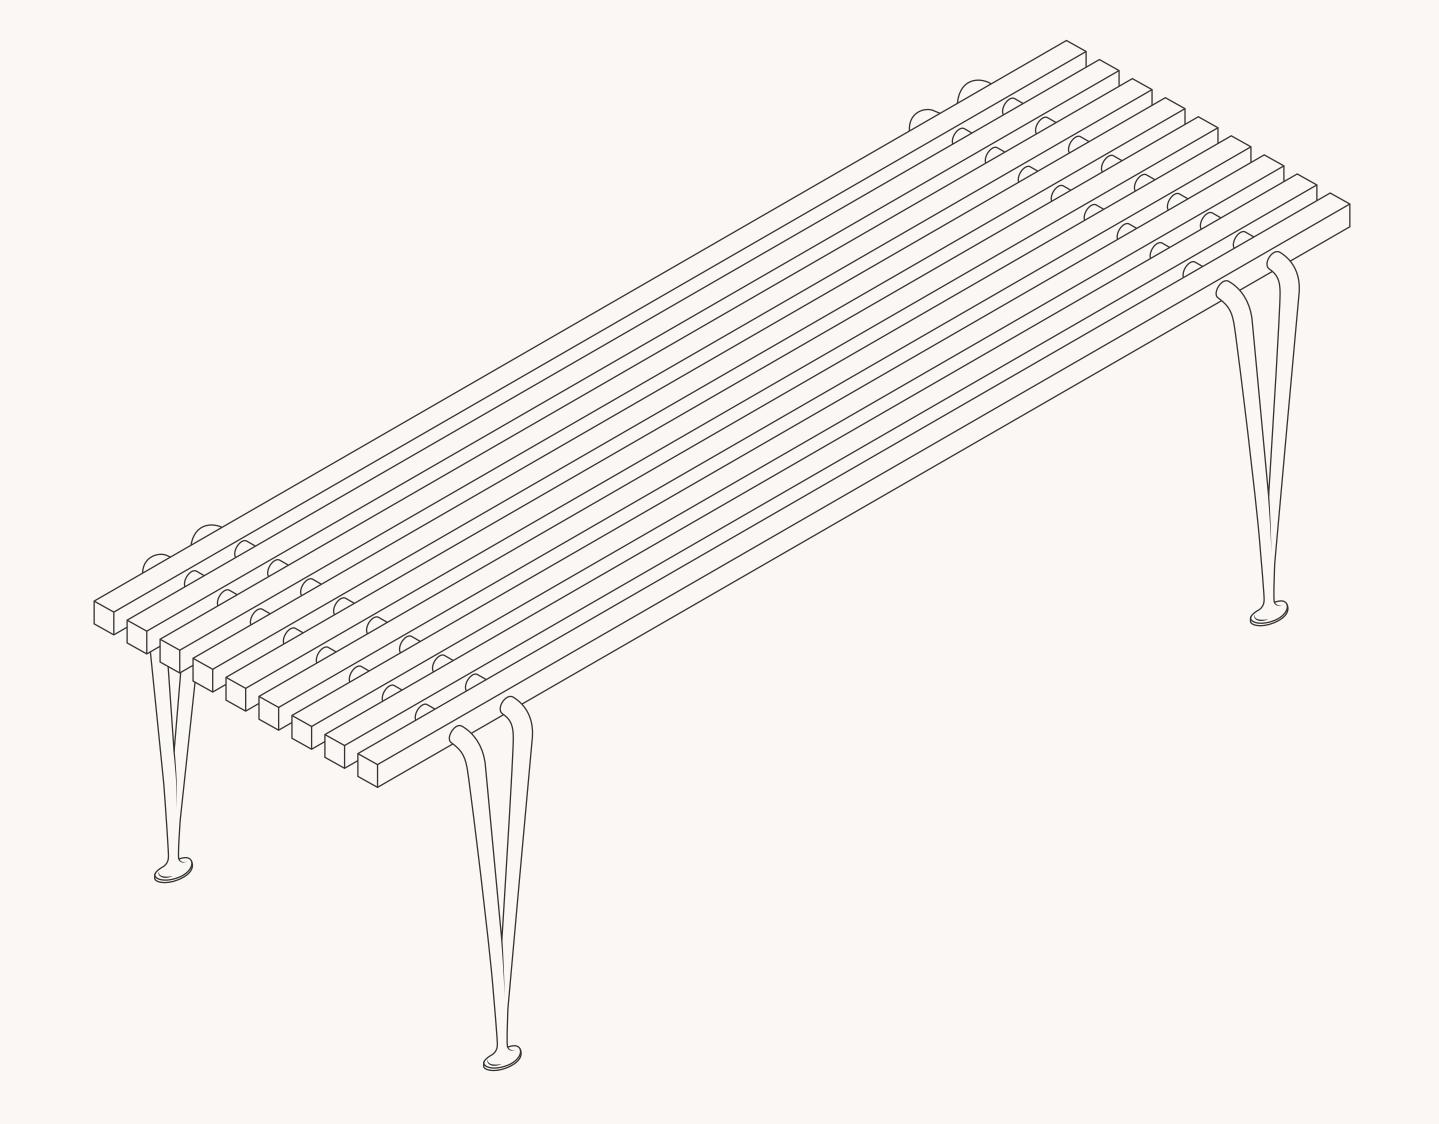

WARNING A

READ ALL INSTRUCTIONS **BEFORE** ASSEMBLY & USE. ADULT ASSEMBLY REQUIRED. KEEP SMALL PARTS AND PACKAGING AWAY FROM CHILDREN

NOTES ON USE:

Keep children and others safe by following these simple rules:

Do not allow any child to play on furnitureDo not allow climbing on any piece of furnitureDo not allow hanging from any piece of furniture

Assembly:

Use caution when assembling. Do not change the specifications or modify this product. Incorrect assembly can cause product to fail and cause damage or personal injury. Double check that product is assembled correctly and all components are properly tightened before use. Periodically re-tighten hardware.

Usage:

Remove all packaging before first use. Only meant for indoor use.

Cleaning/Care:

Clean with a dry or damp lint free cloth.