


FLOYD

The Bedside Table Repair Kit


FLOYD

Components


6x Black Screws (For Black Tables)

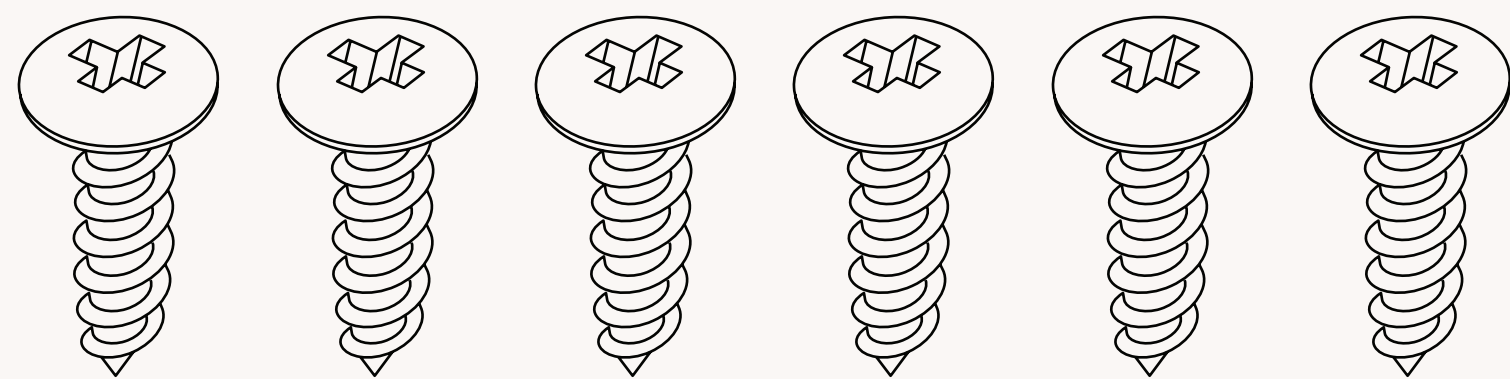


6x Silver Screws (For White Tables)

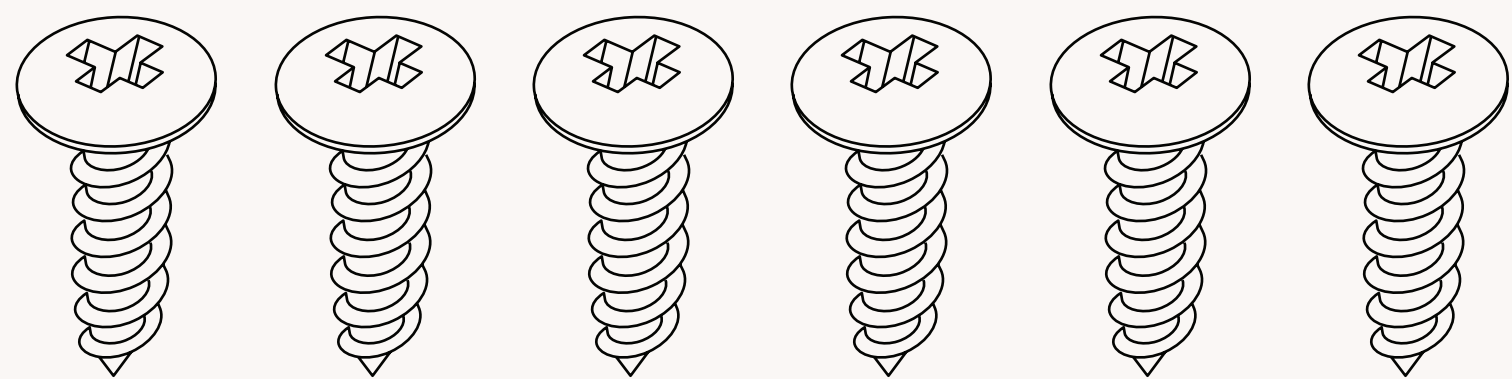

1x Shipping Box
*Don't discard!

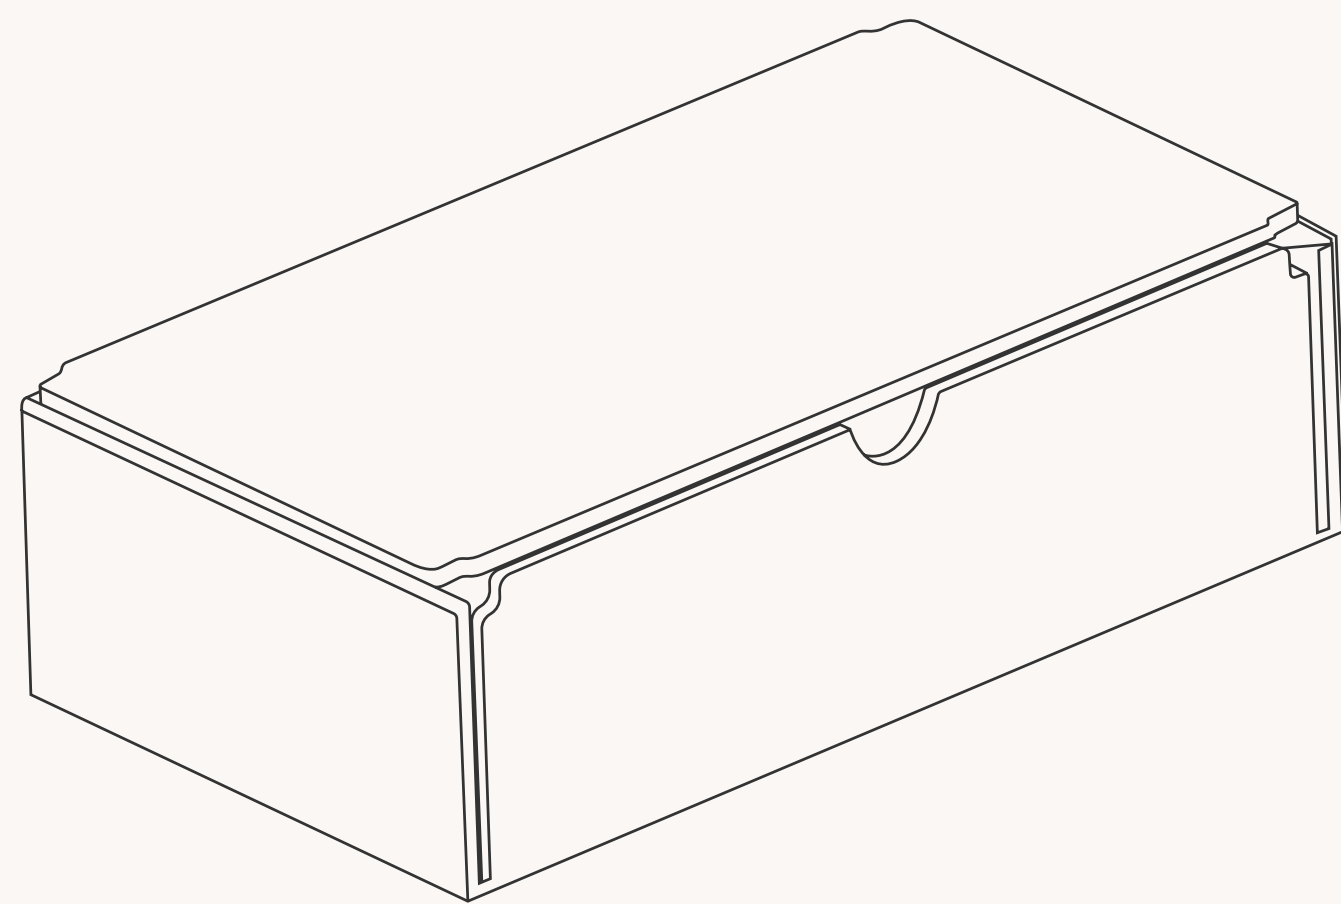

You'll also need:
1x Phillips Head Screwdriver
(Not included)

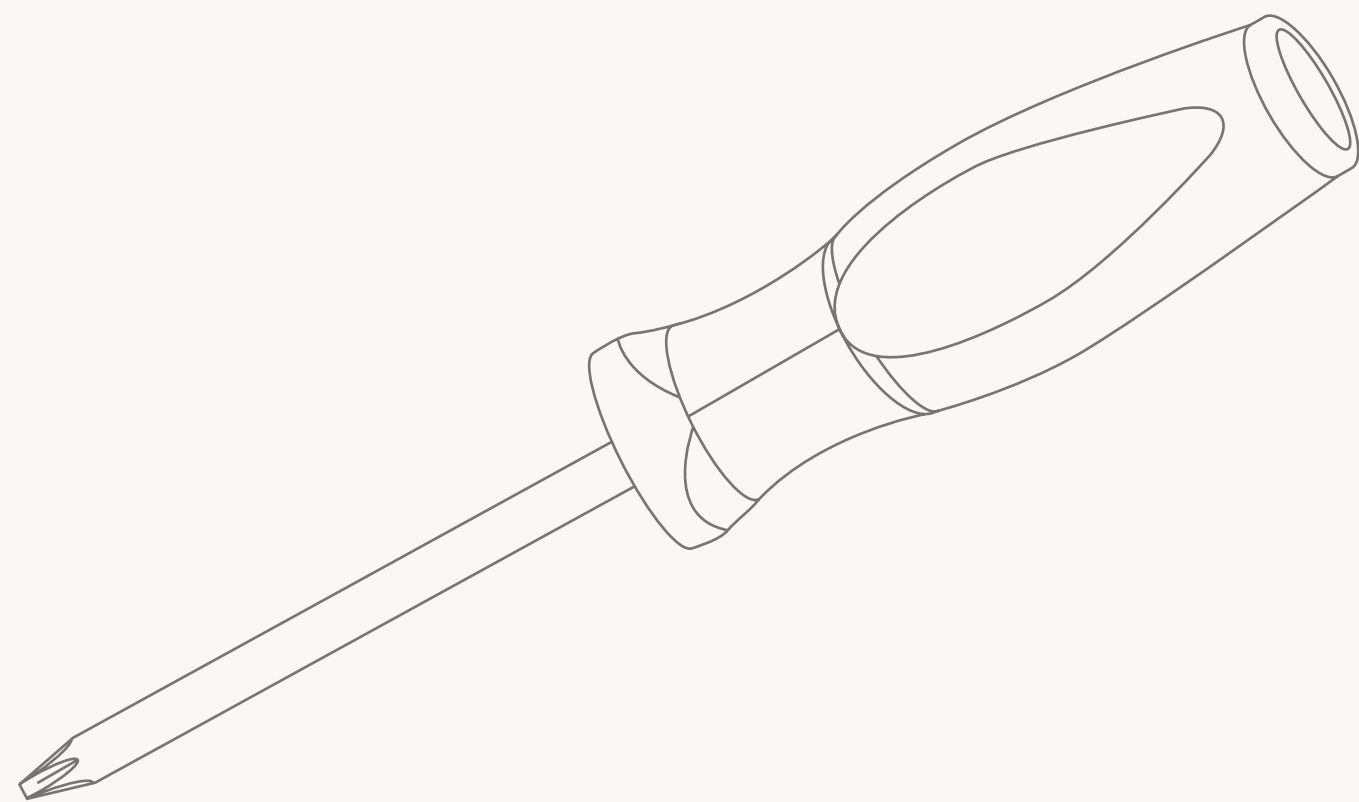


FLOYD

Step 1

Begin by placing your Bedside Table upside down on a soft, clean surface like a rug.

Then, insert the Shipping Box into the open space—this will act as a temporary support for your shelf.

Lastly, slide the shelf into place.

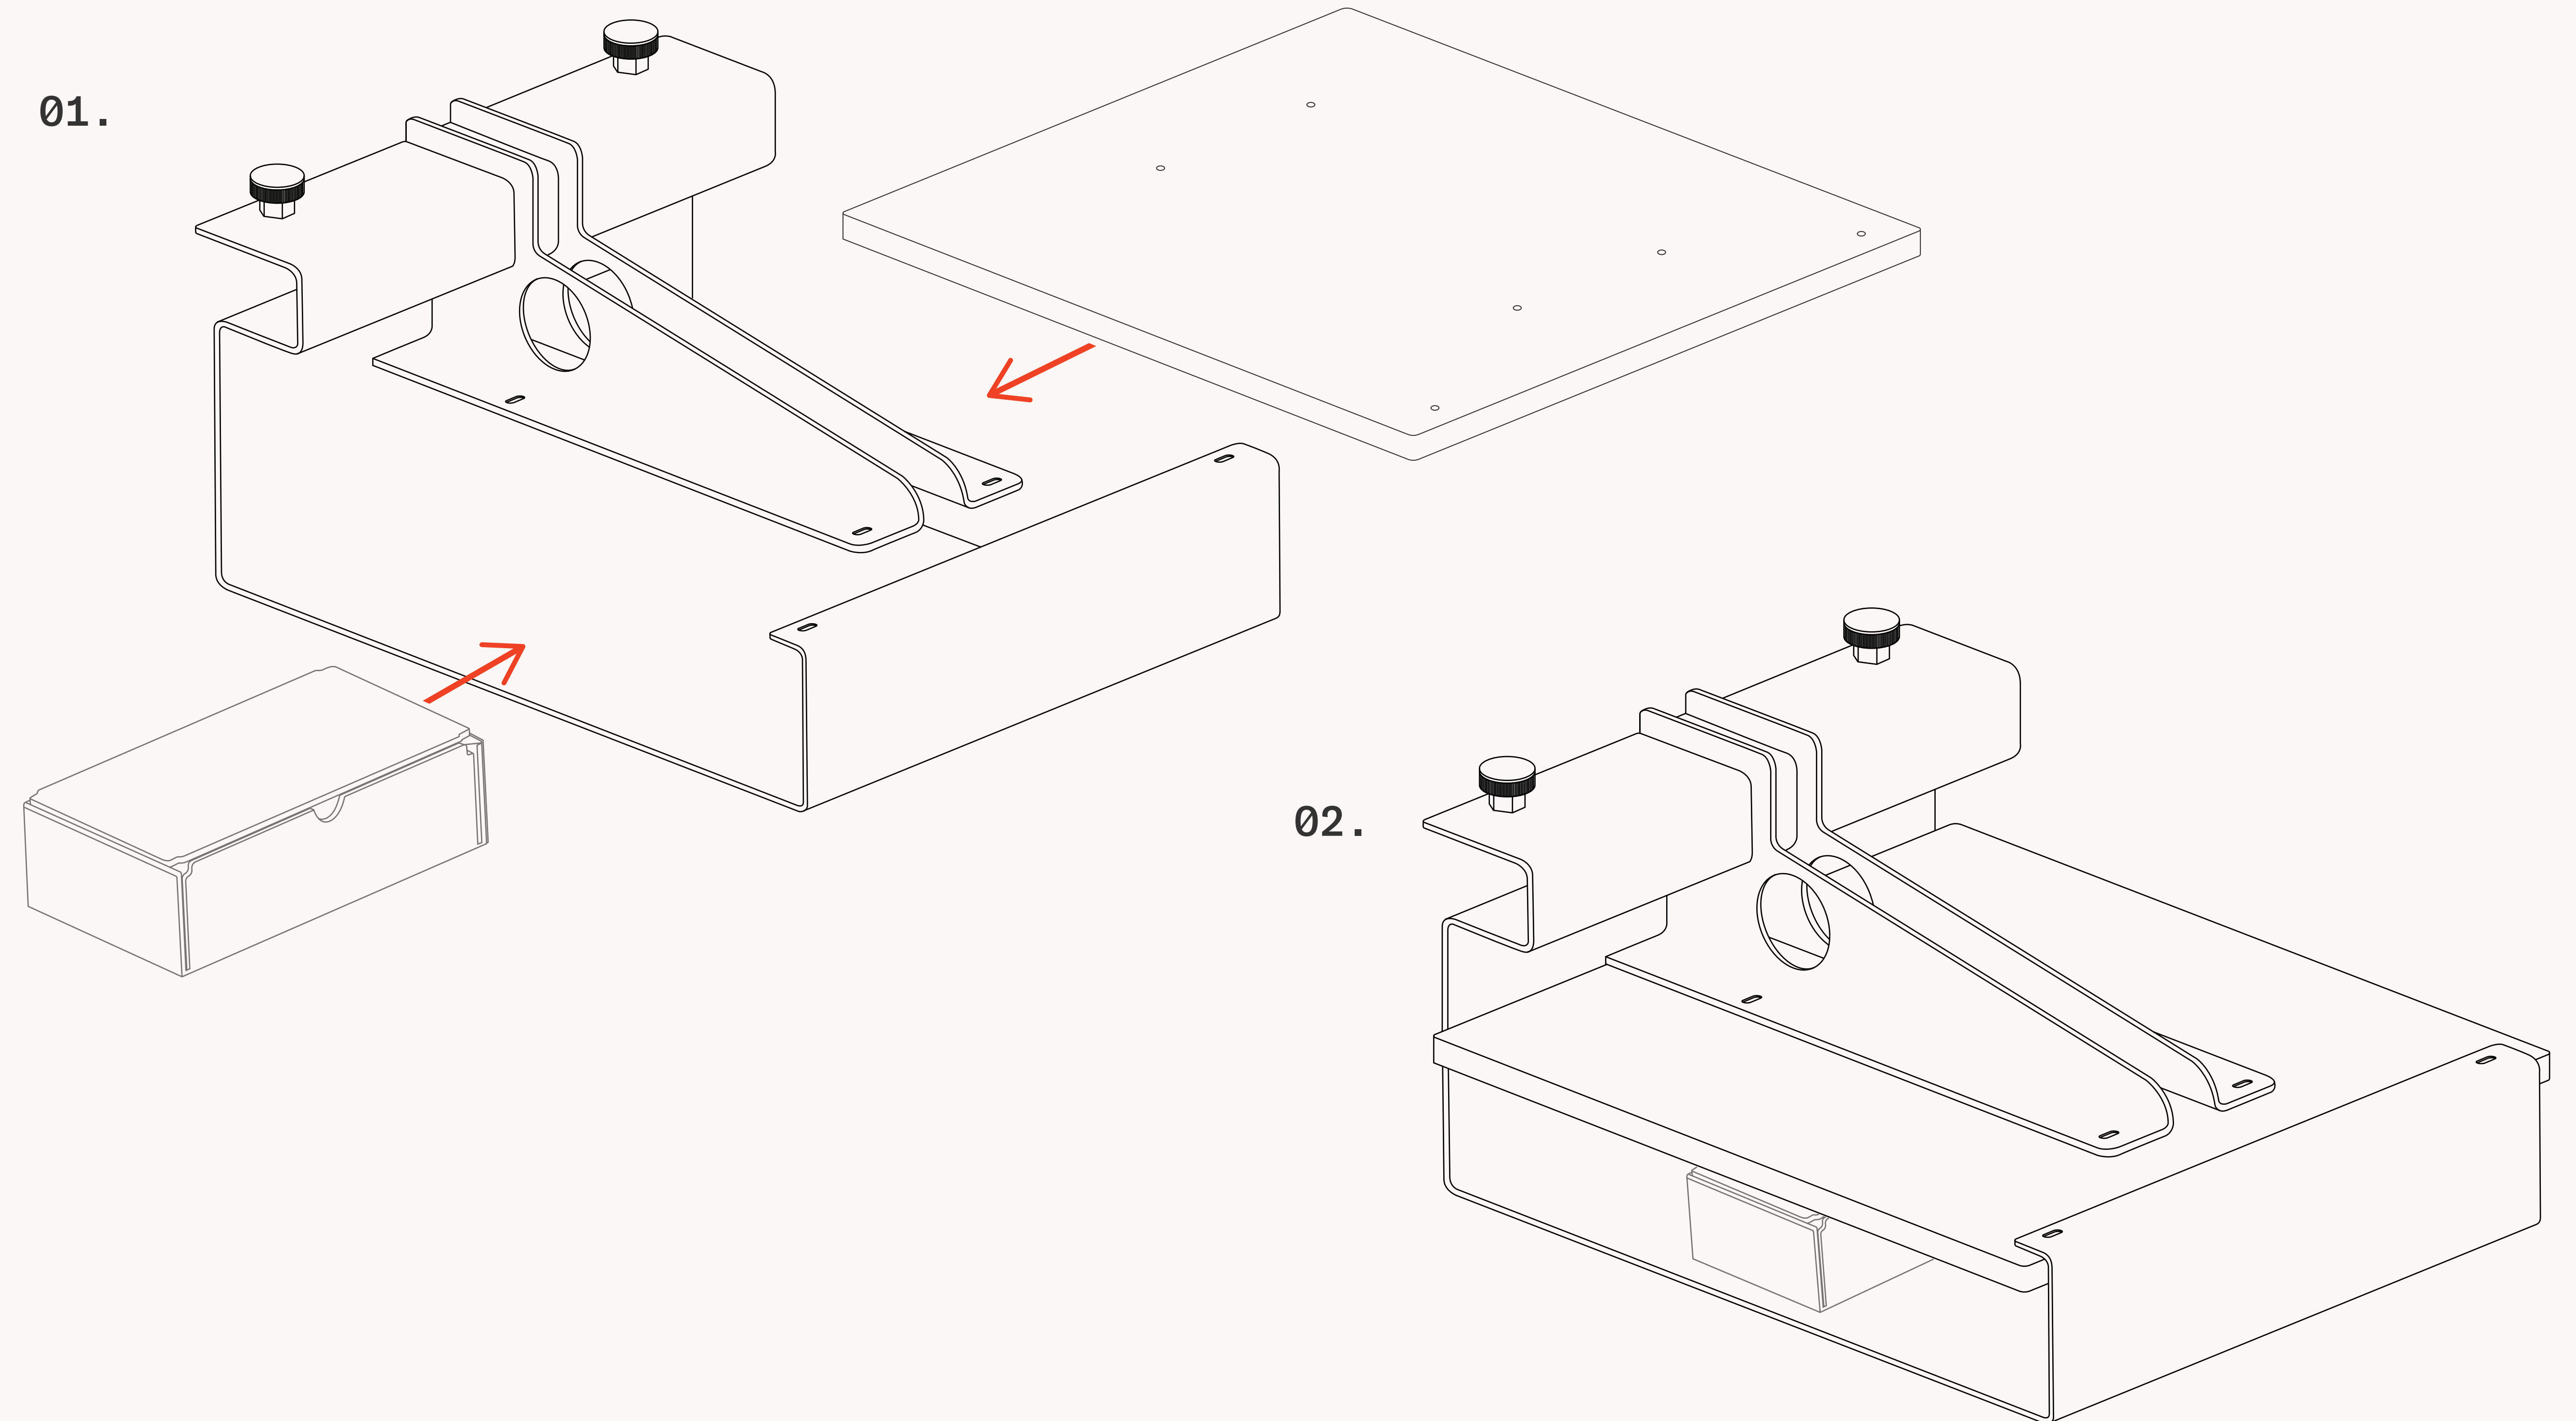

FLOYD


Step 2

Make sure all 6 pre-existing holes are aligned and select the appropriately colored screws for your Bedside Table.

Screw in the replacement screws. Start with one of the frontmost screws and follow that with one of the backmost screws. From there, you can install them in any order.

Be sure to push the wood shelf up against the metal frame as tightly as possible when installing screws.

NOTE: The replacement screws are intentionally tight!

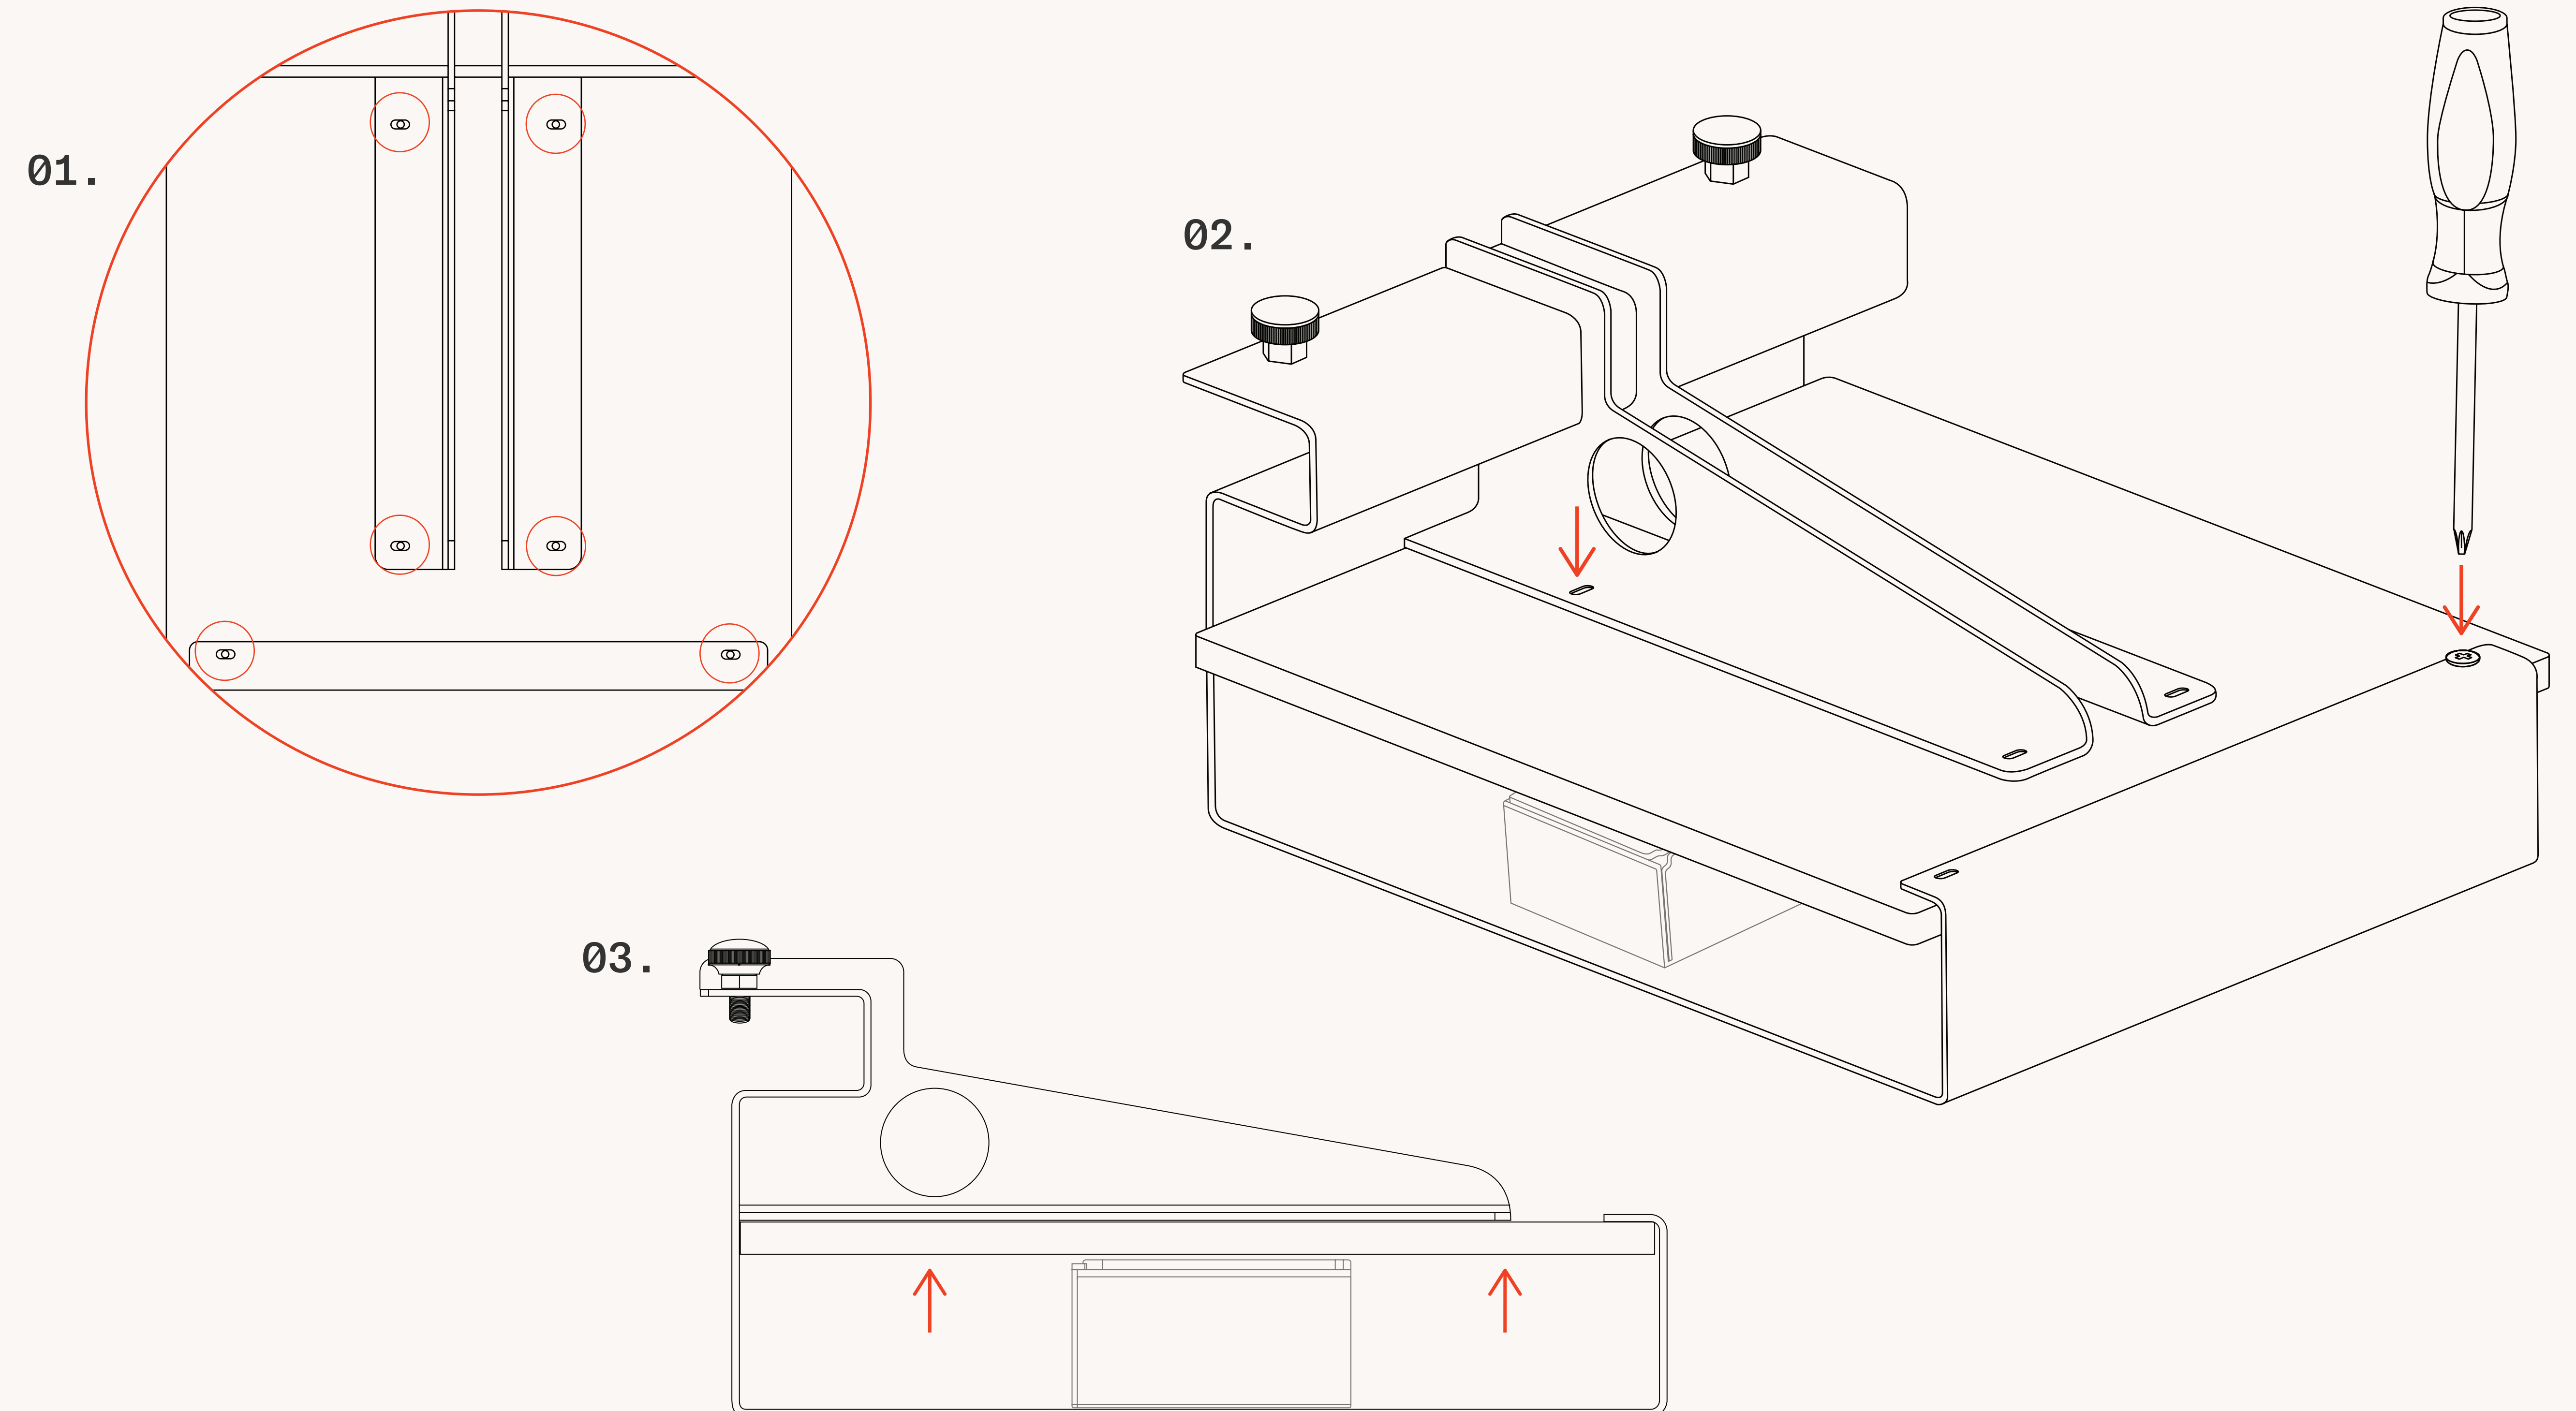


Step 3

Your repair is complete!

Check to ensure all screws are tight, but do not over-tighten.

Once all the screws are in place, slide the shipping box out and install the Bedside Table per the original instructions.

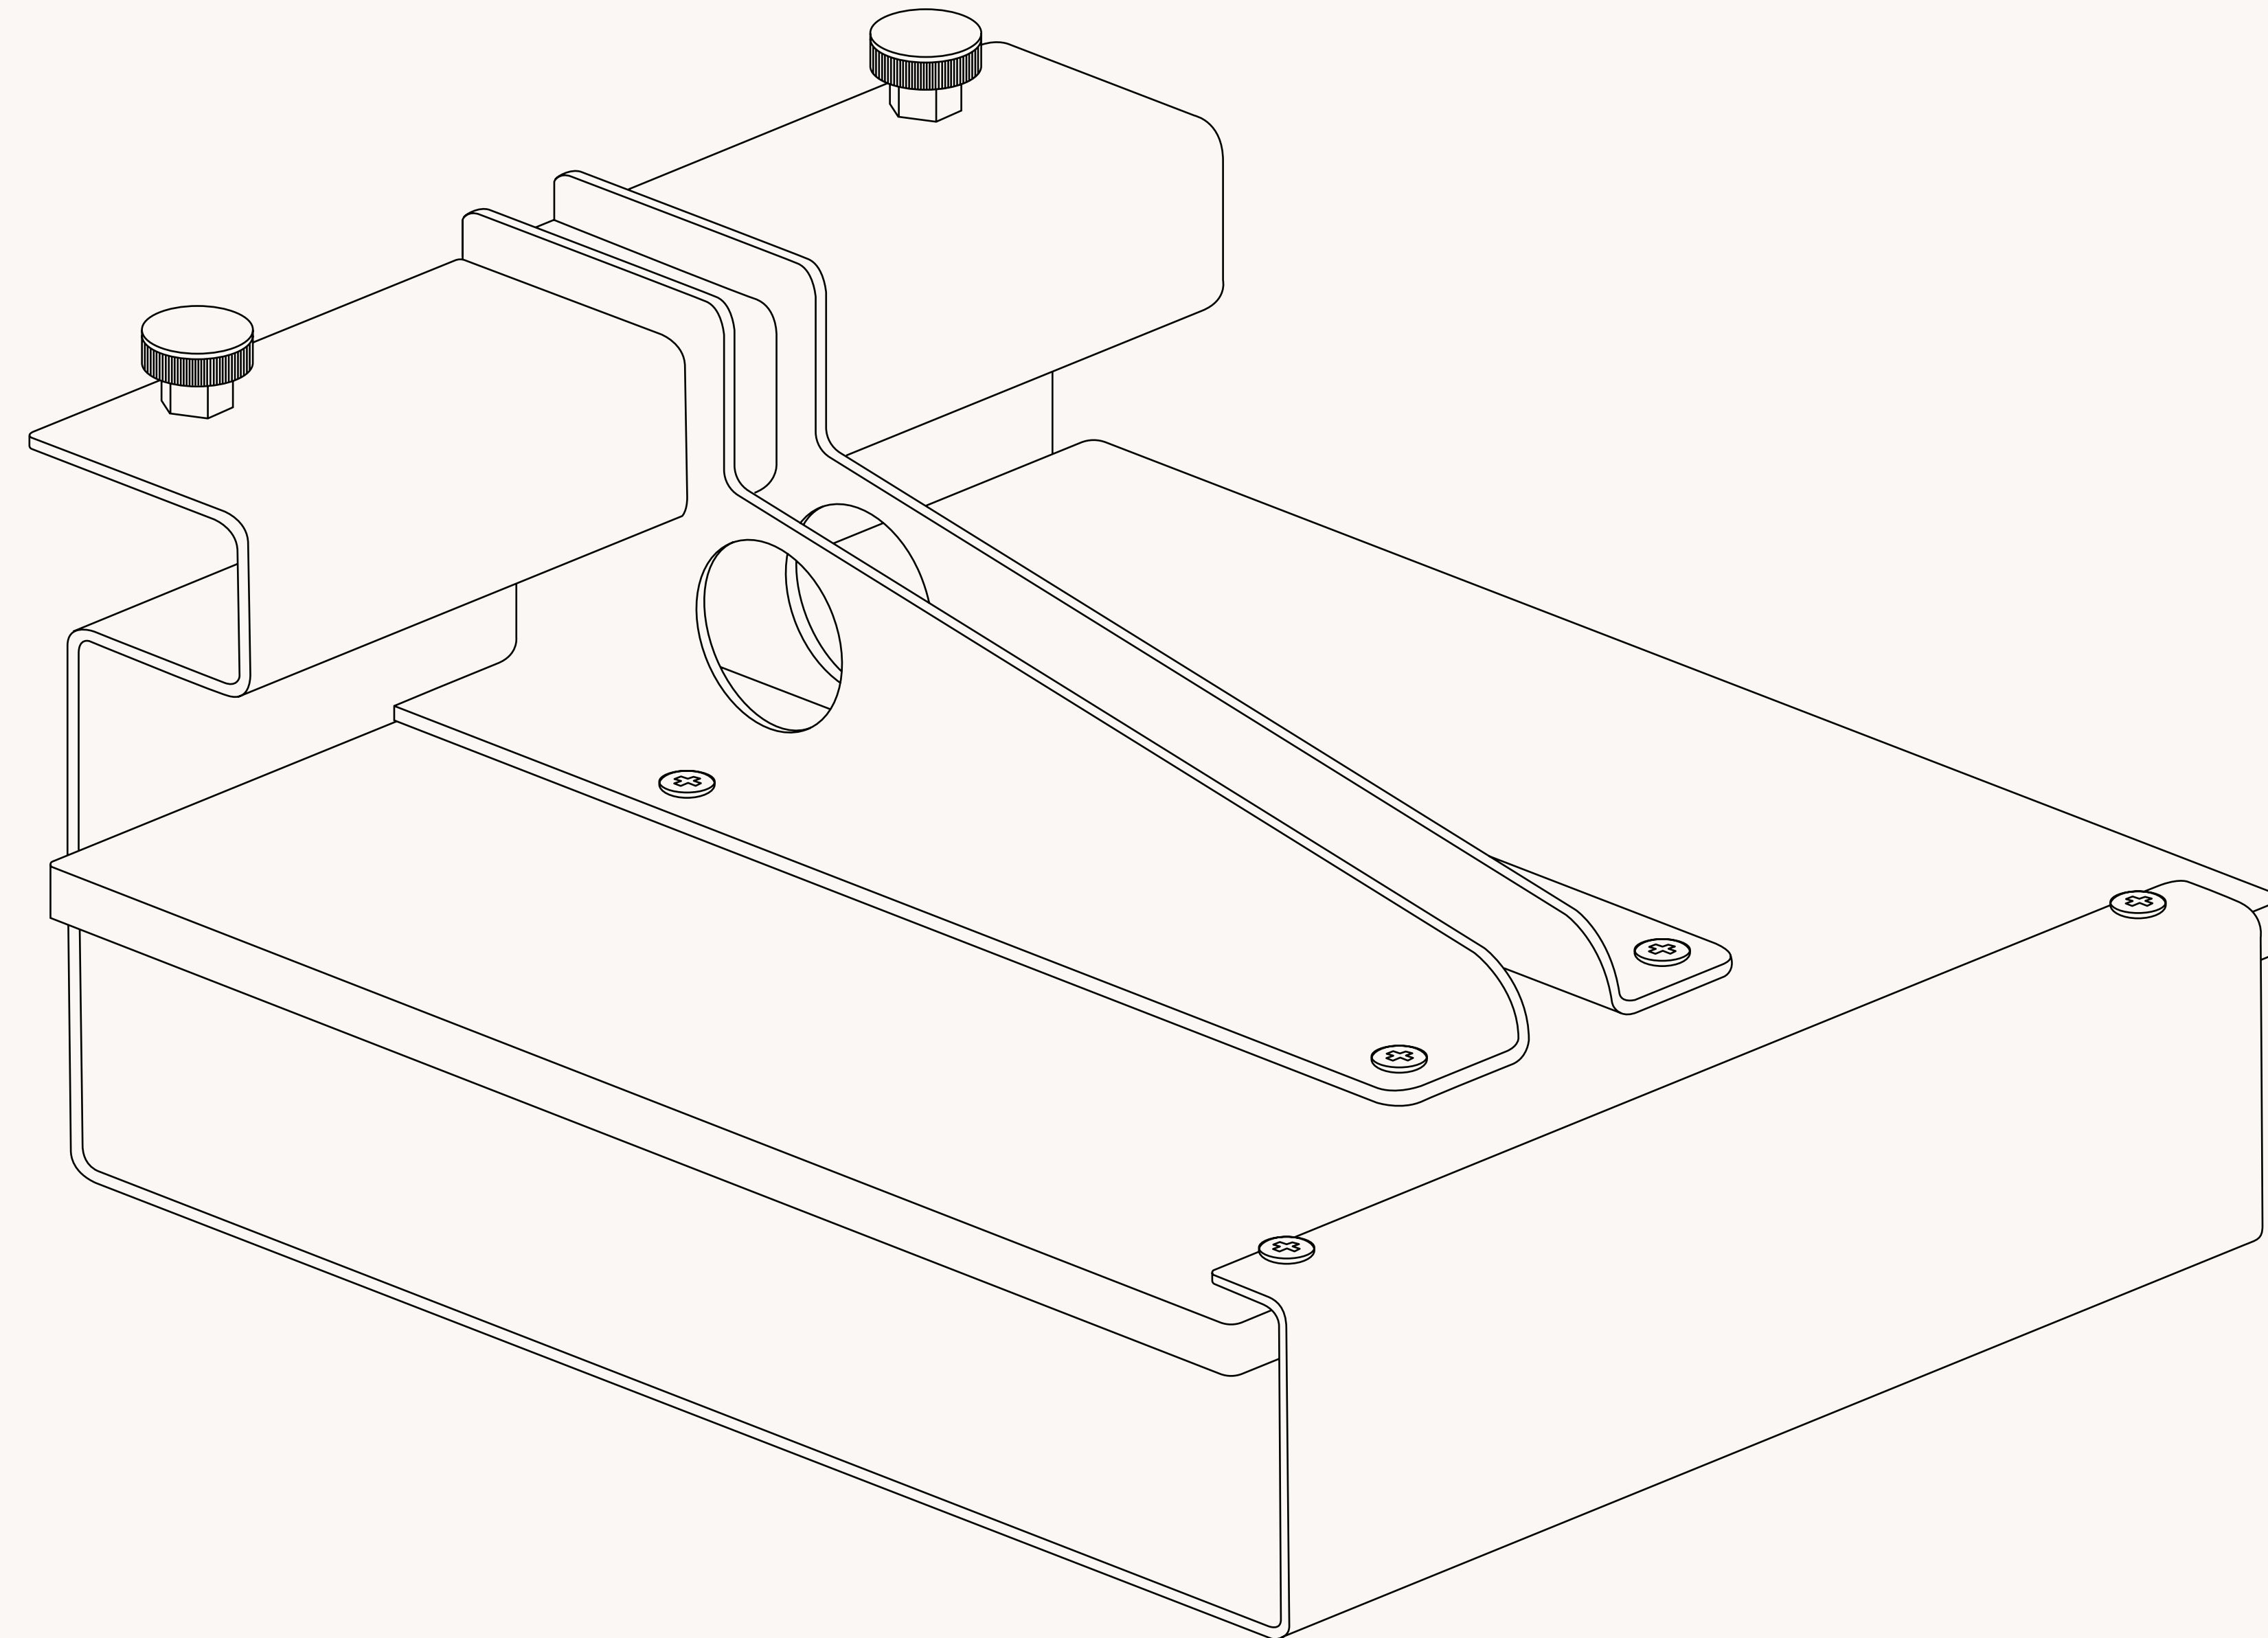

FLOYD