


FLOYD


HOW TO ASSEMBLE :

# Headboard Add-On (2.0)

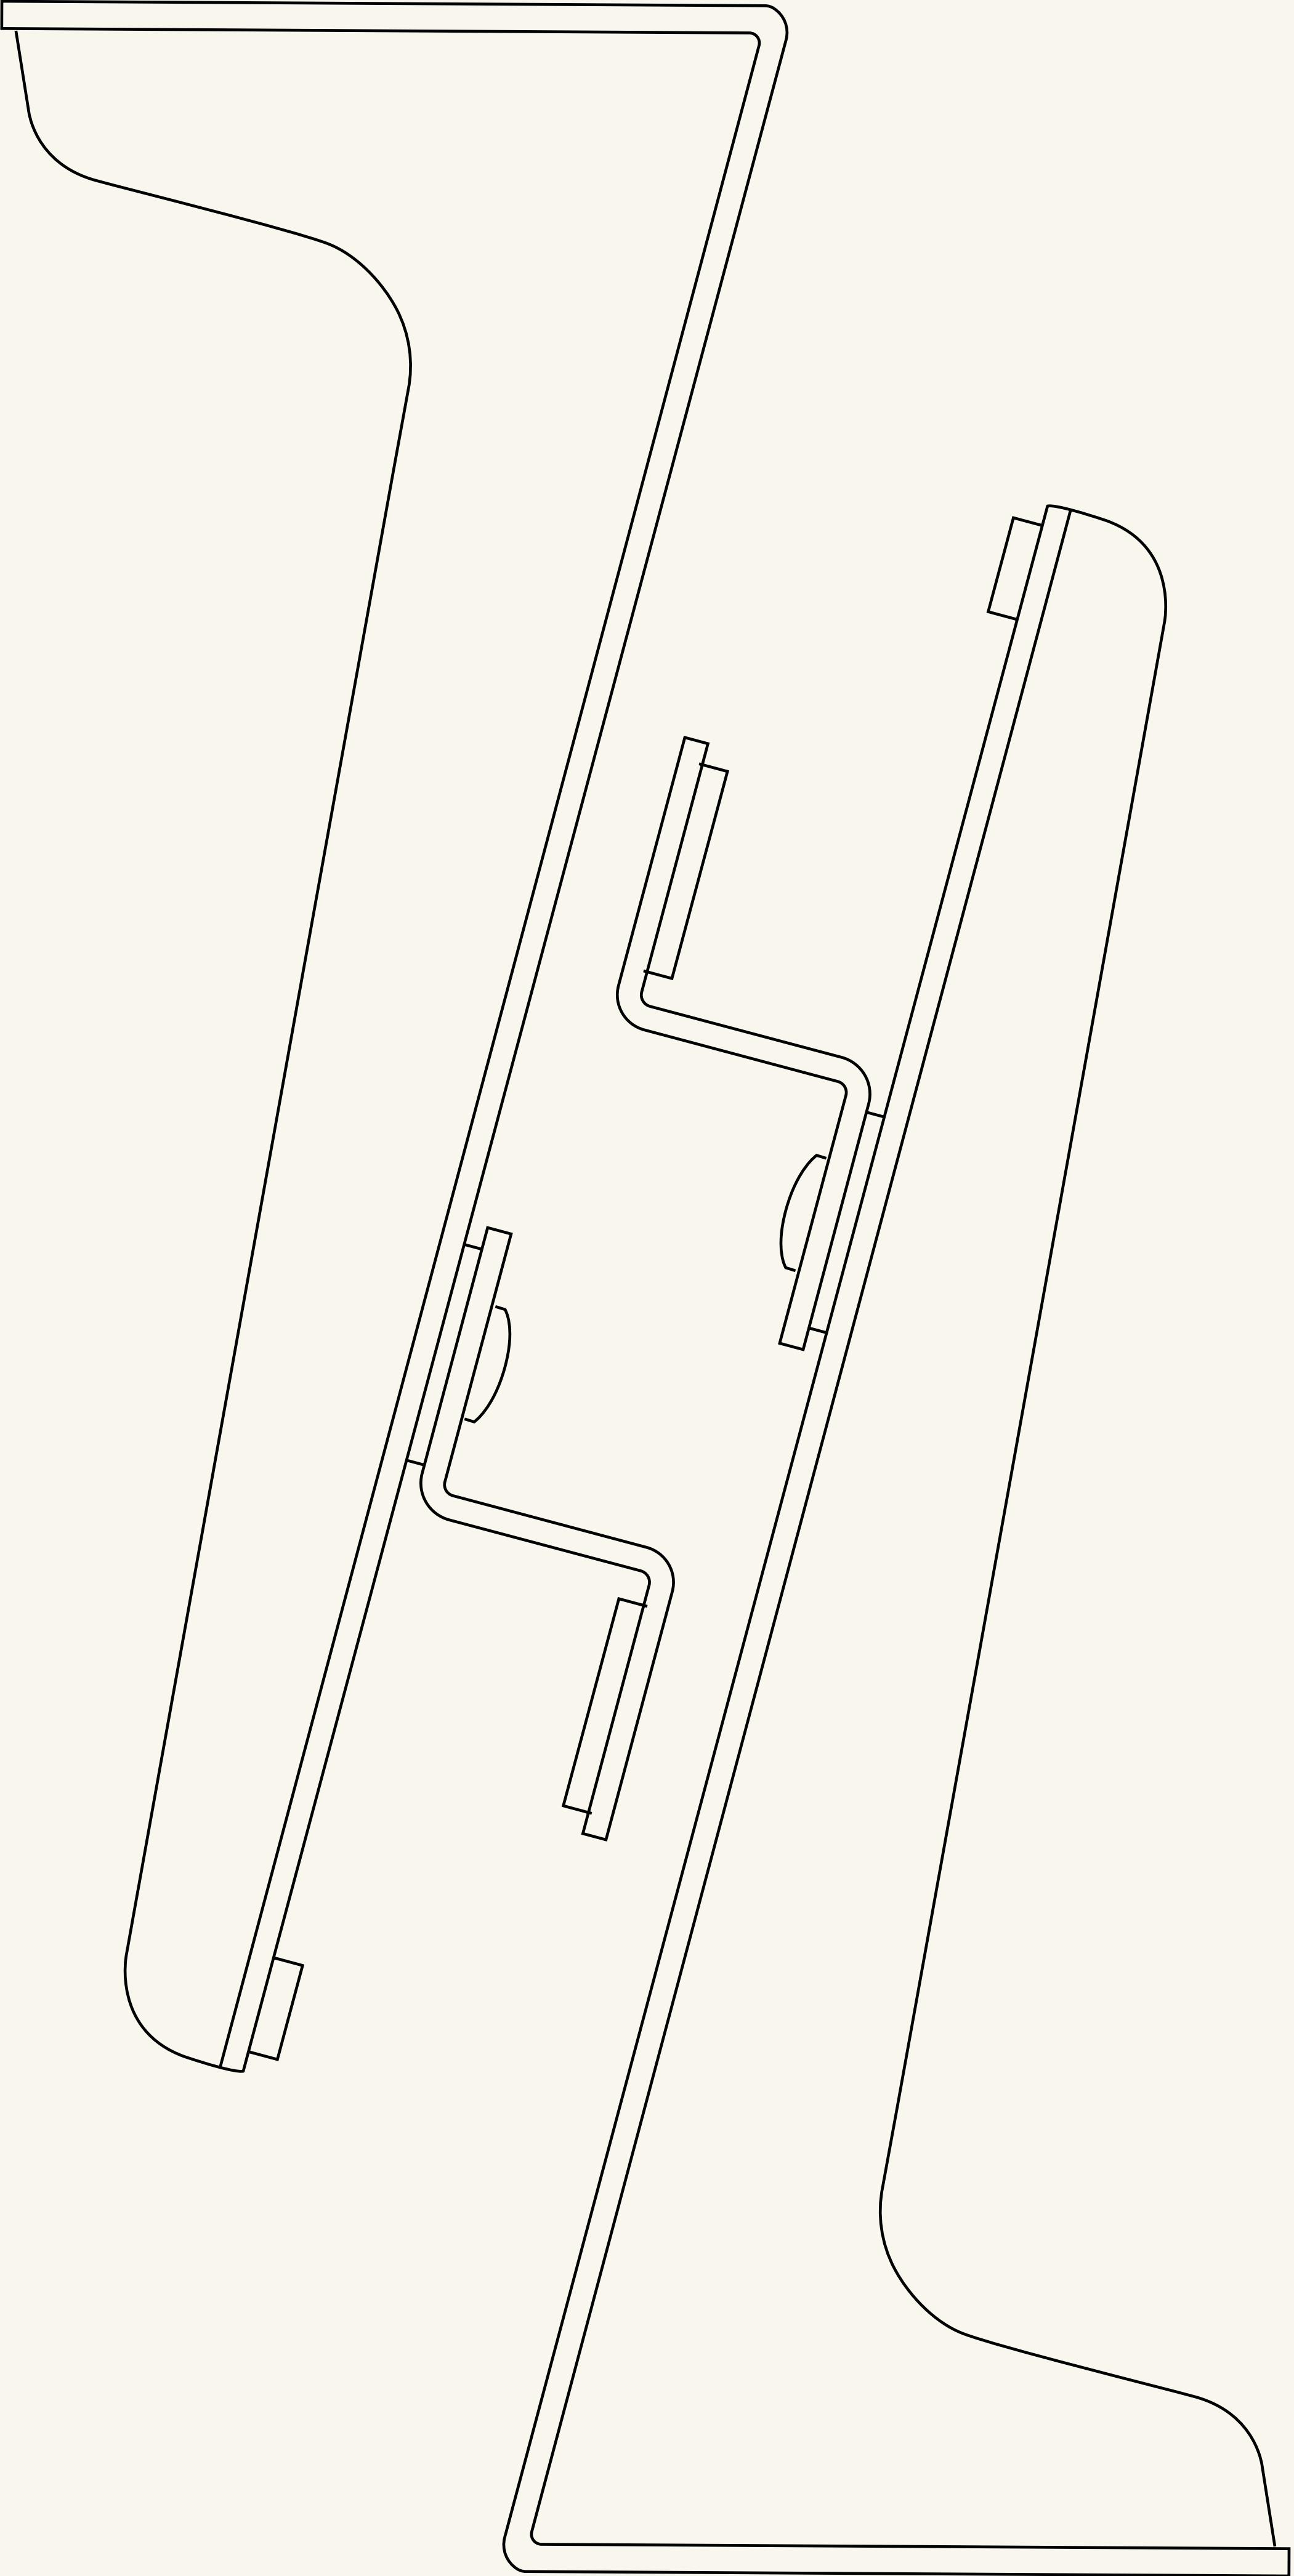


COMPONENTS


2x Brackets with Z Clips

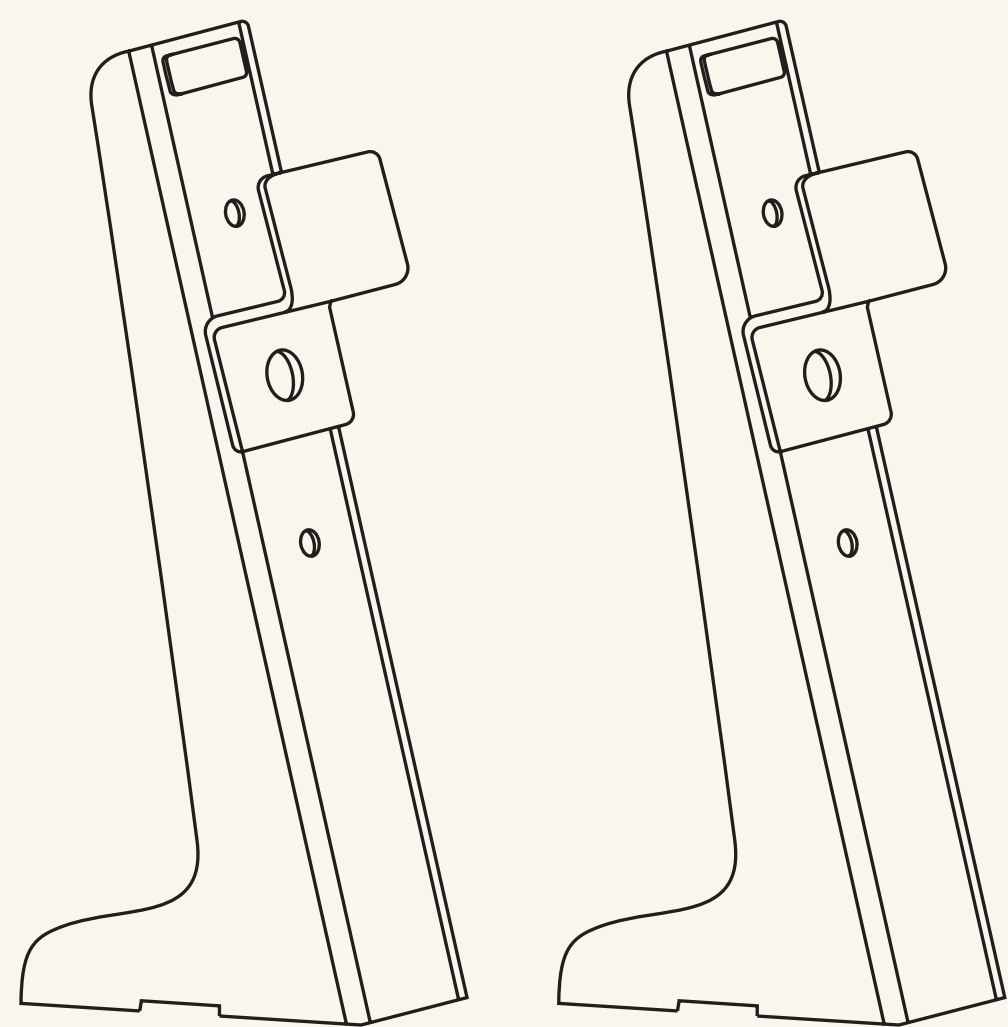


2x Bottom Plates

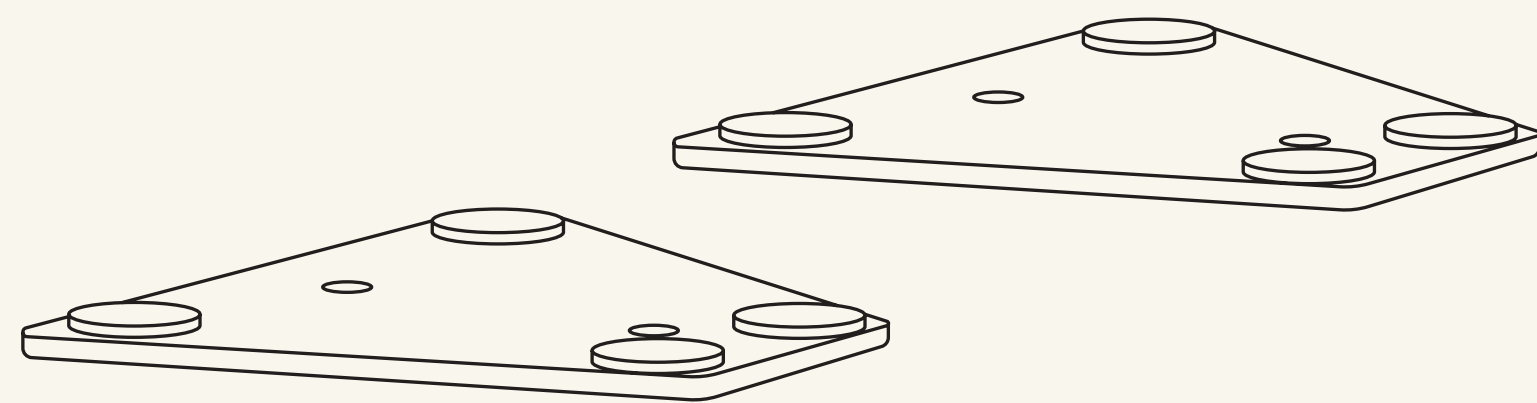


4x Carriage Bolts

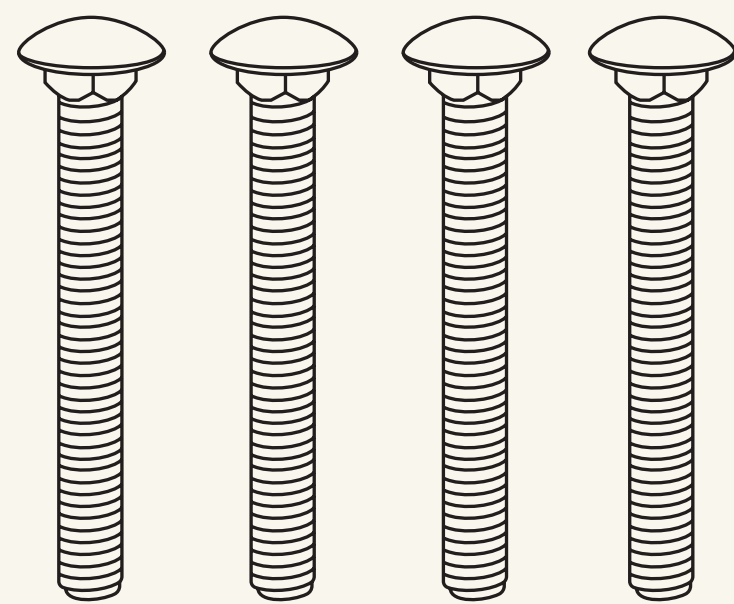

4x Wing Nuts

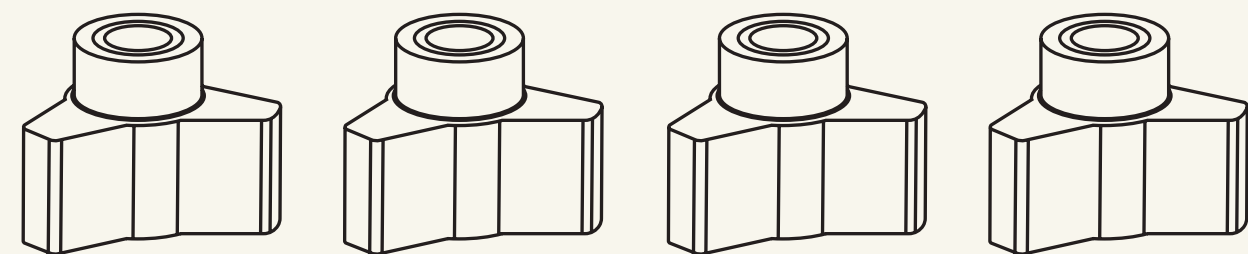

1x Headboard Panel

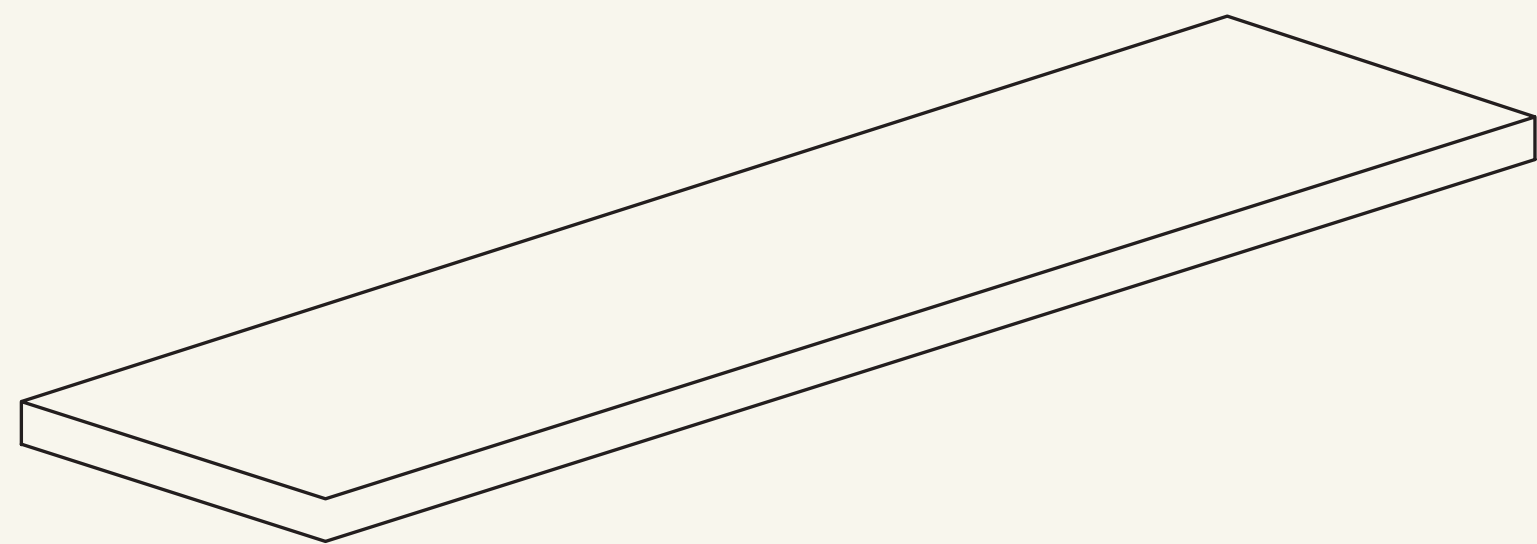

Step: 1


Prepare the brackets.

Step: 1A

## Adjust the brackets.

Once you've removed the brackets from the packaging, the first step is to adjust the z-clip to the desired location.

This will dictate the overall height of your headboard, there are 3 heights to choose from.

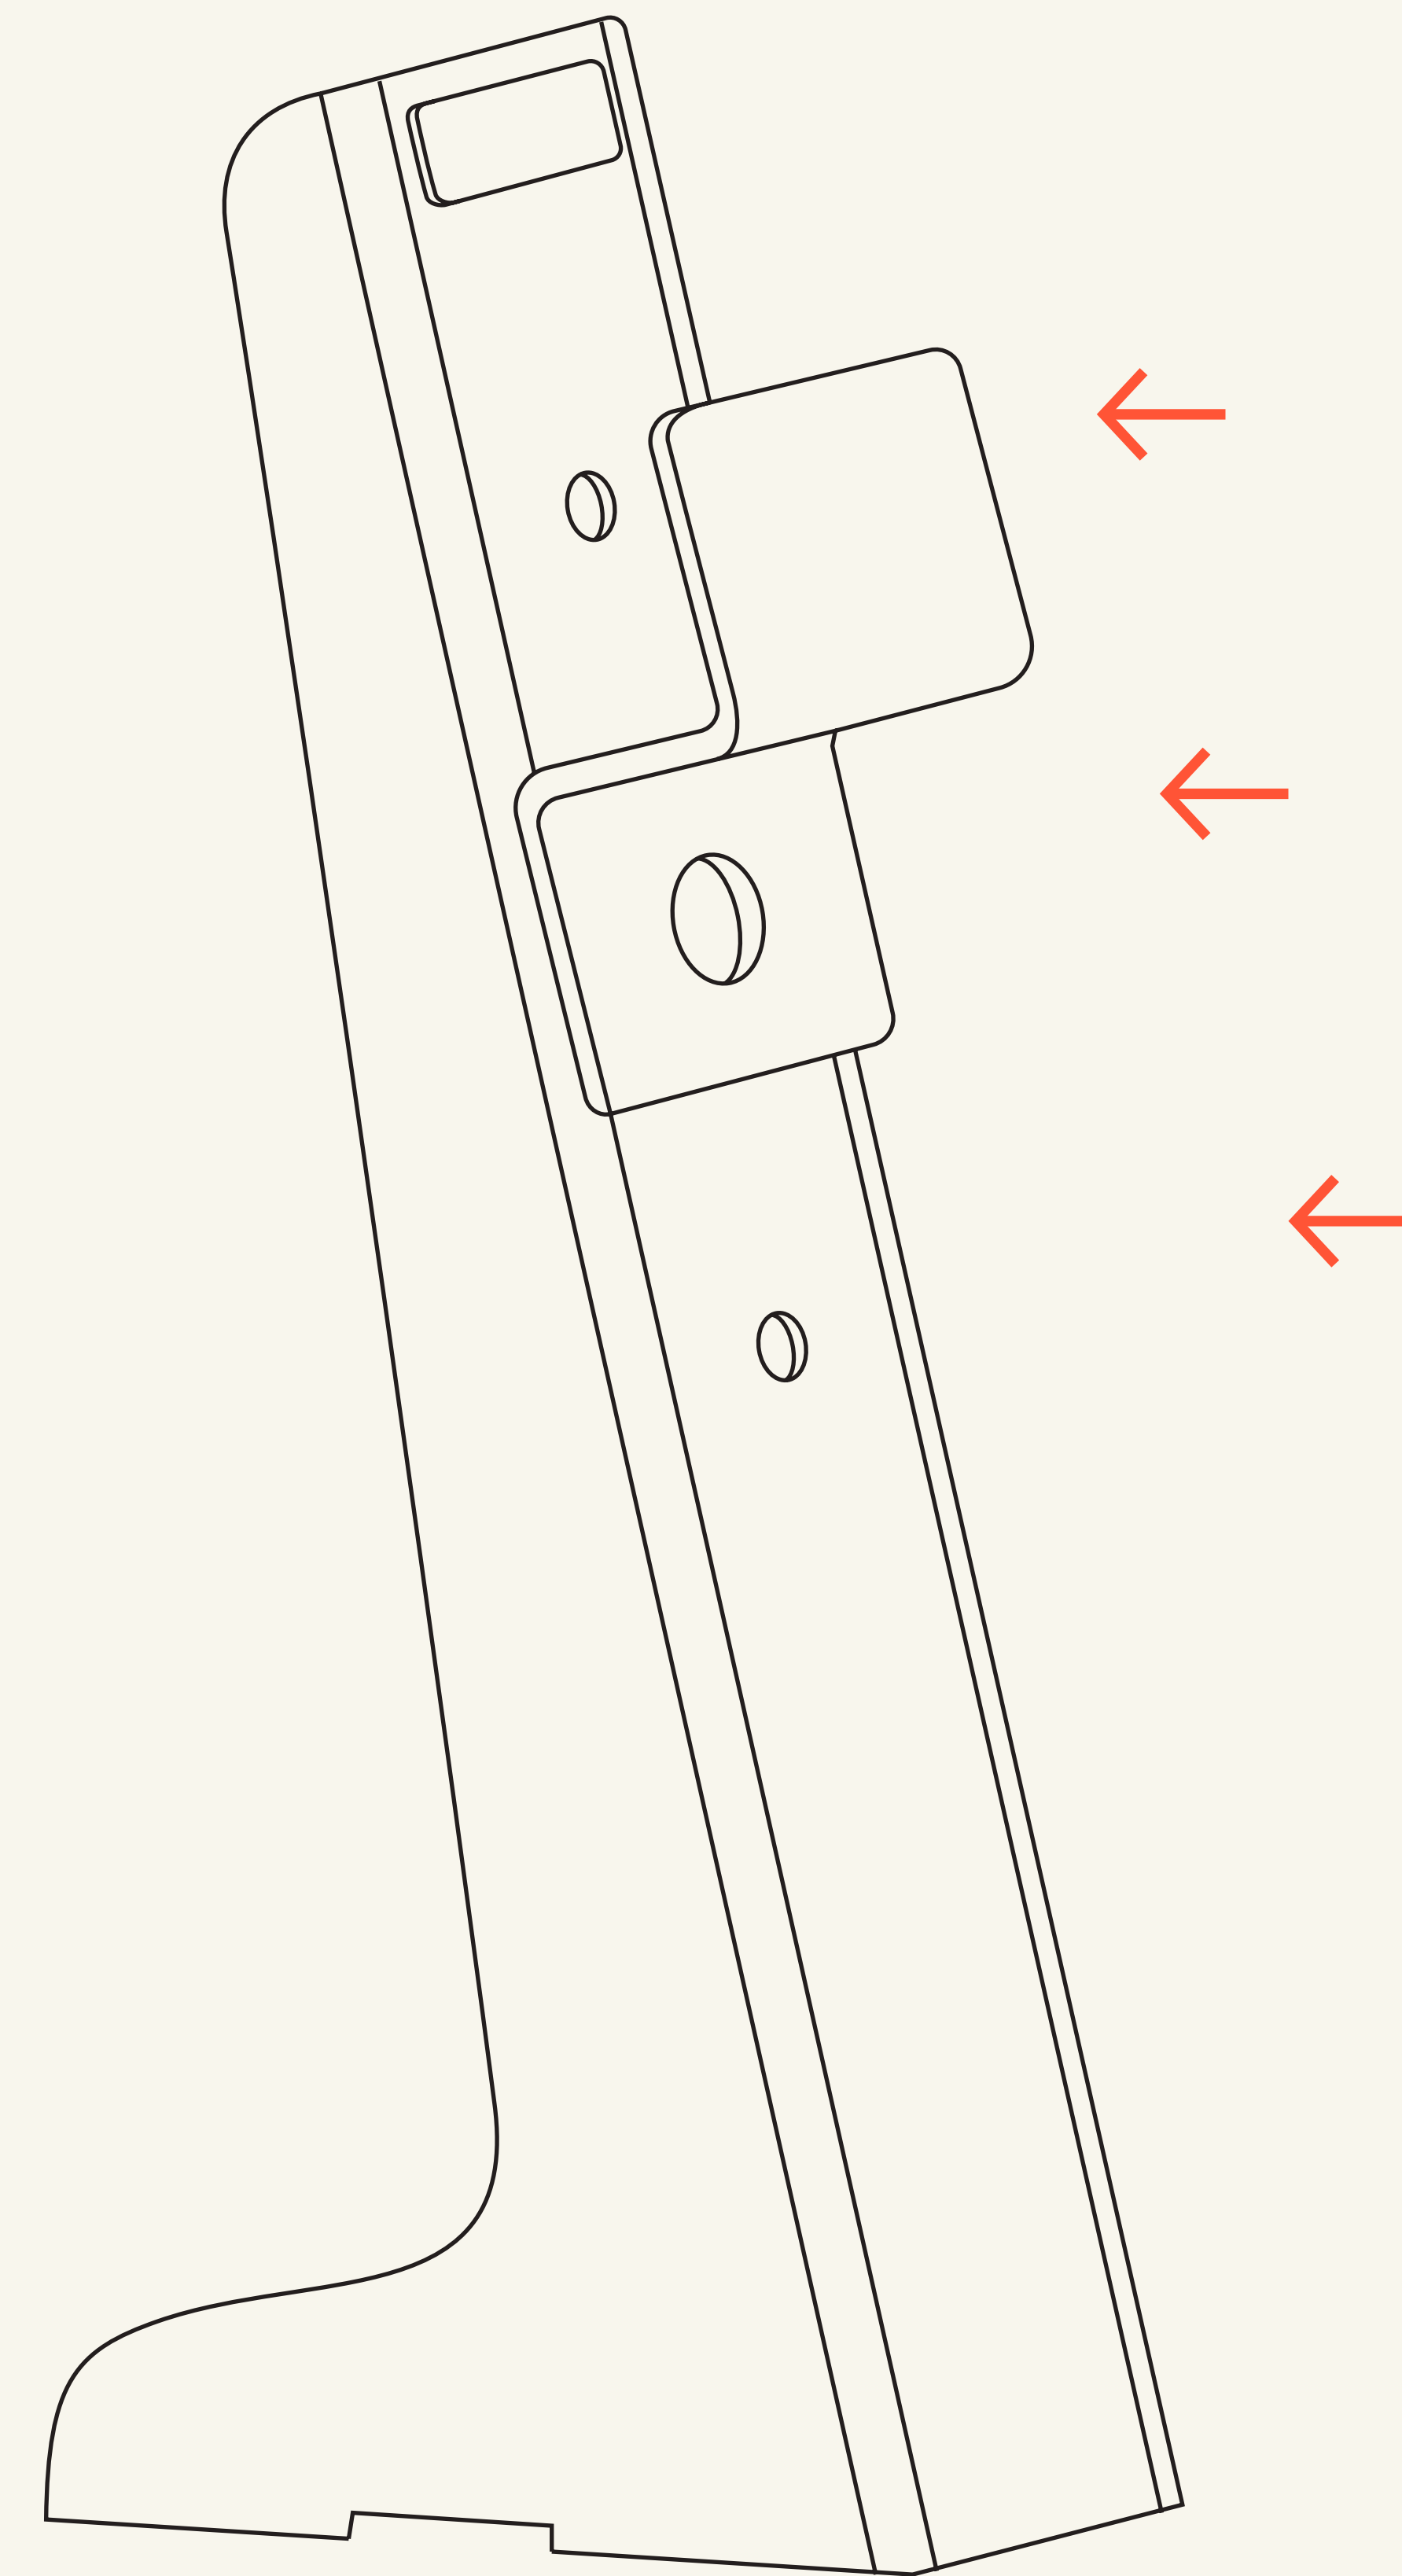


Step: 1B

## Assemble the brackets.

Drop the carriage bolts through the marked holes in the bottom of the bracket, then slide the bottom plate onto bolts and loosely screw on wing nuts.

Repeat the process for the second bracket.

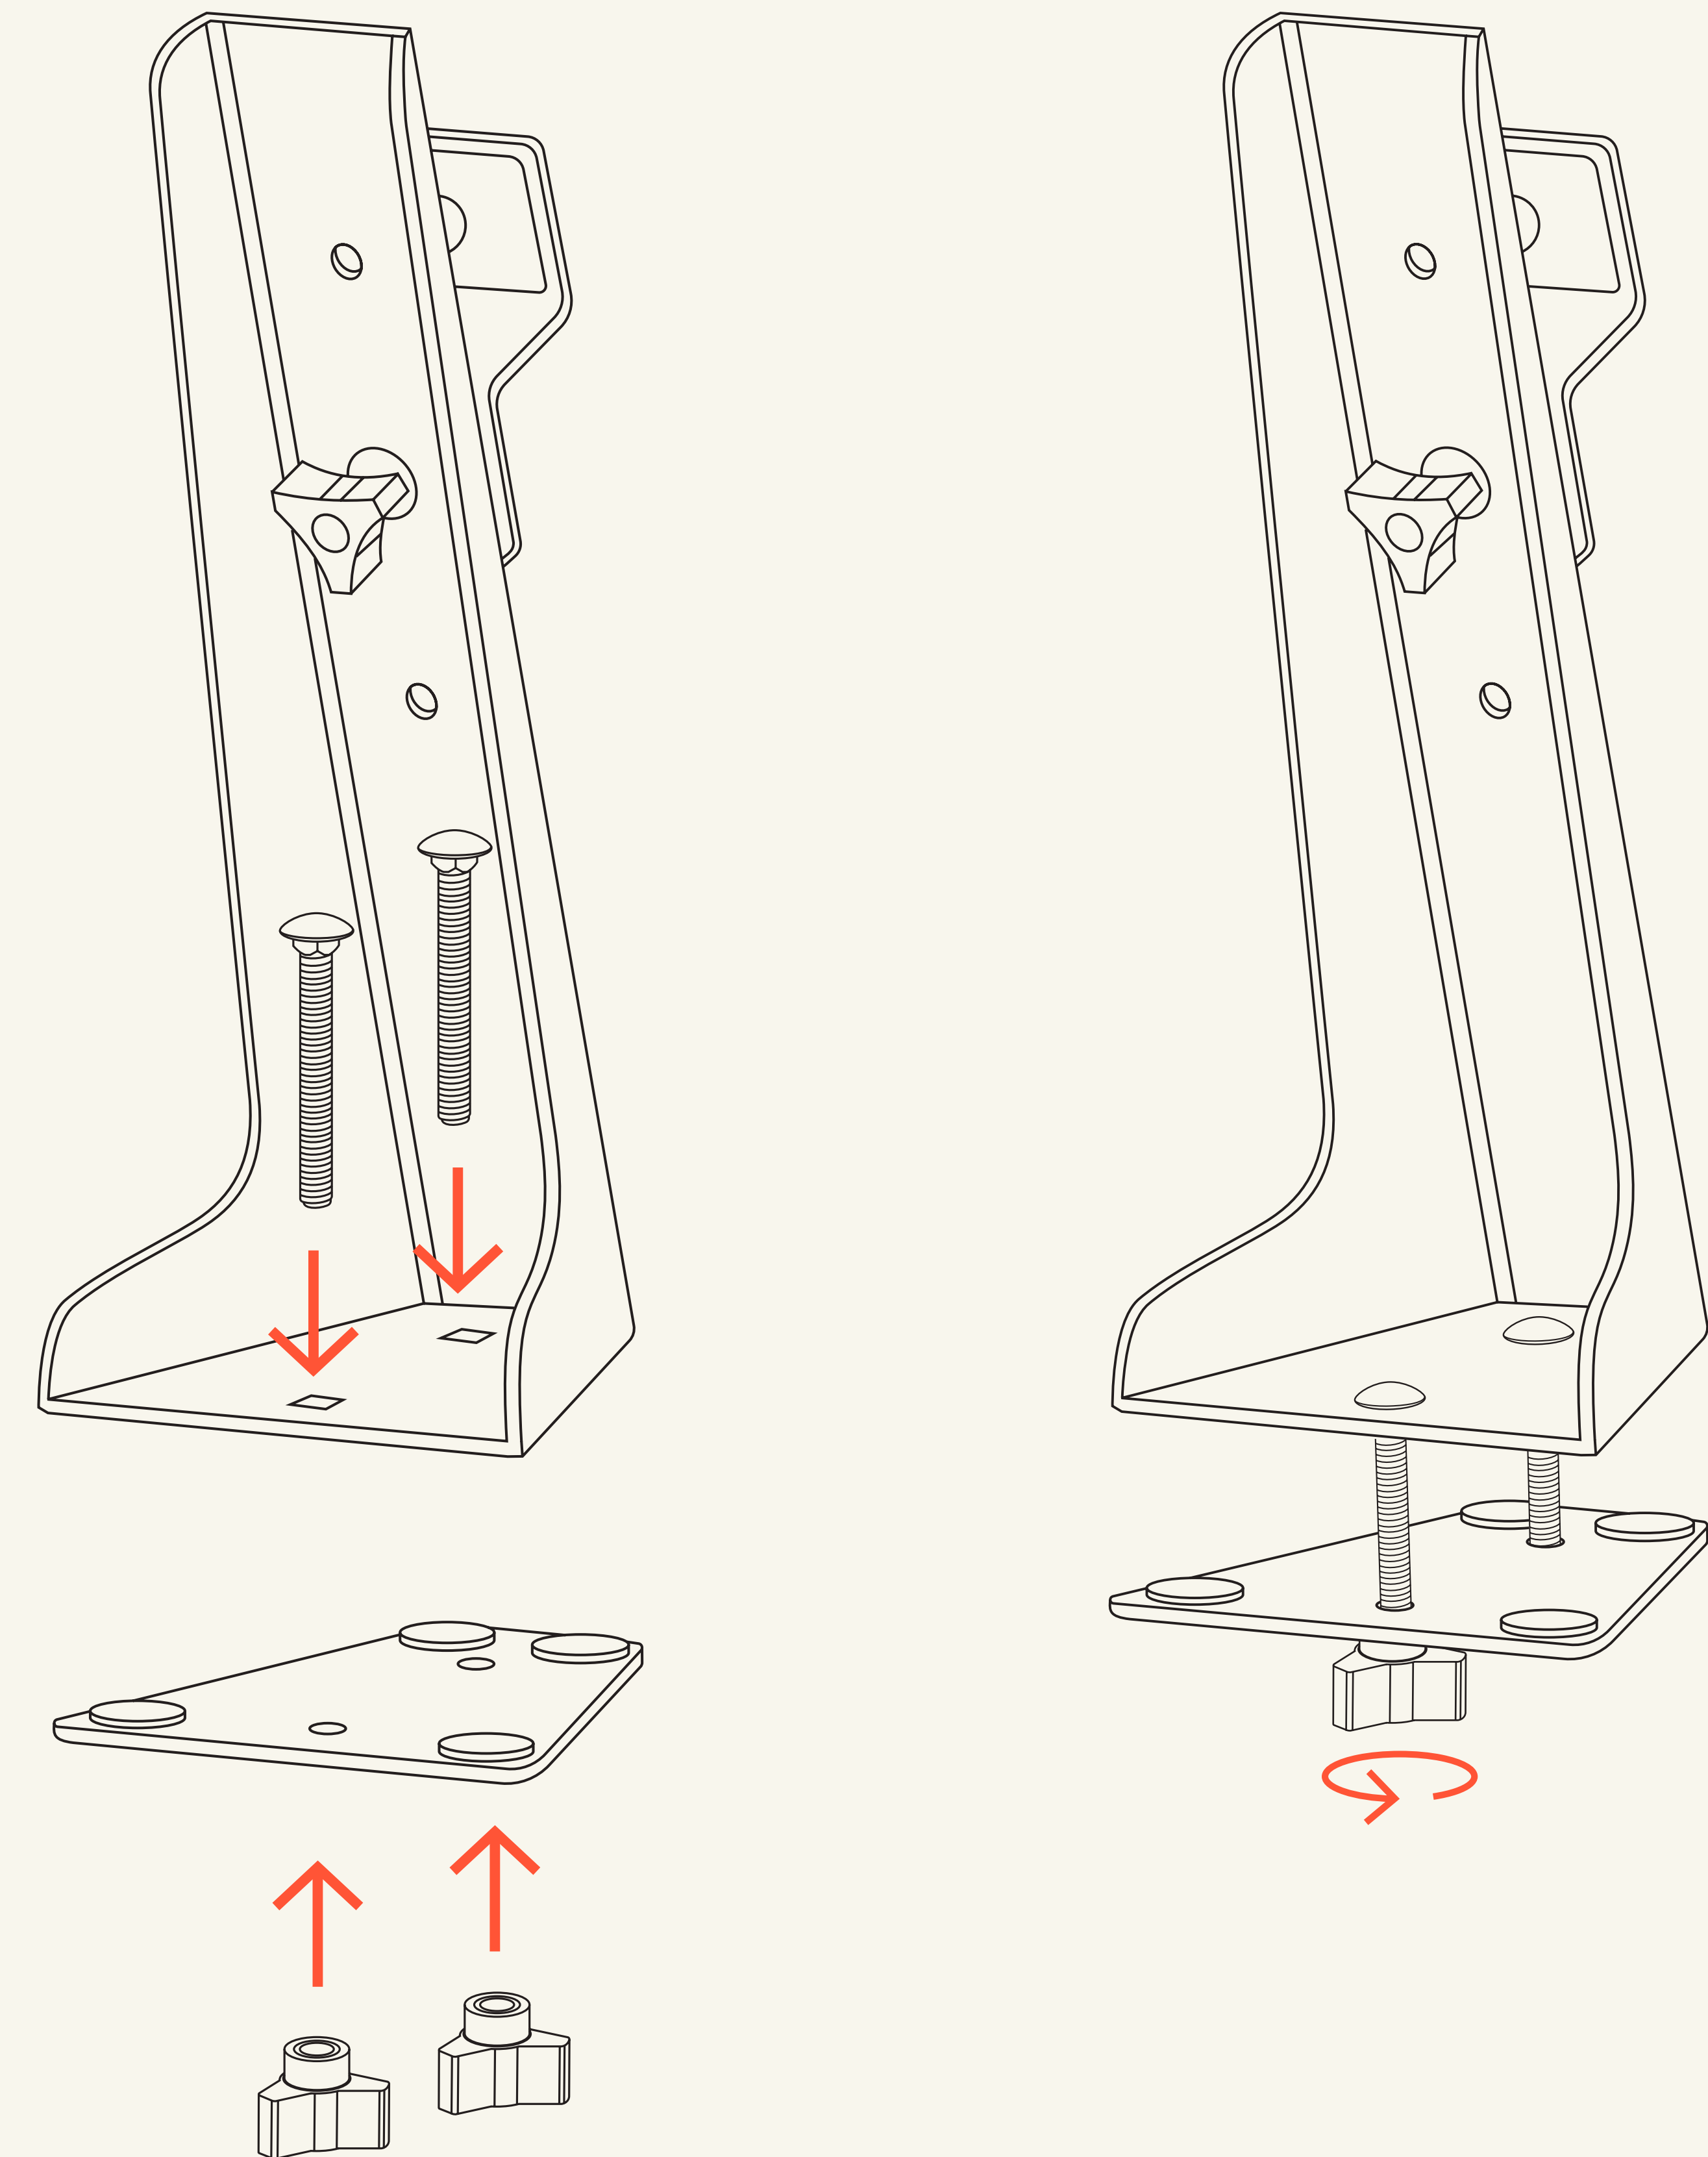

Step: 2

Install the brackets.




Step: 2A

## Attach the brackets.

Slide the brackets onto your bed, making sure that the bolts slide in between the panels.

Leave about 1/4" of space between the end of the bracket and the end of the panels.

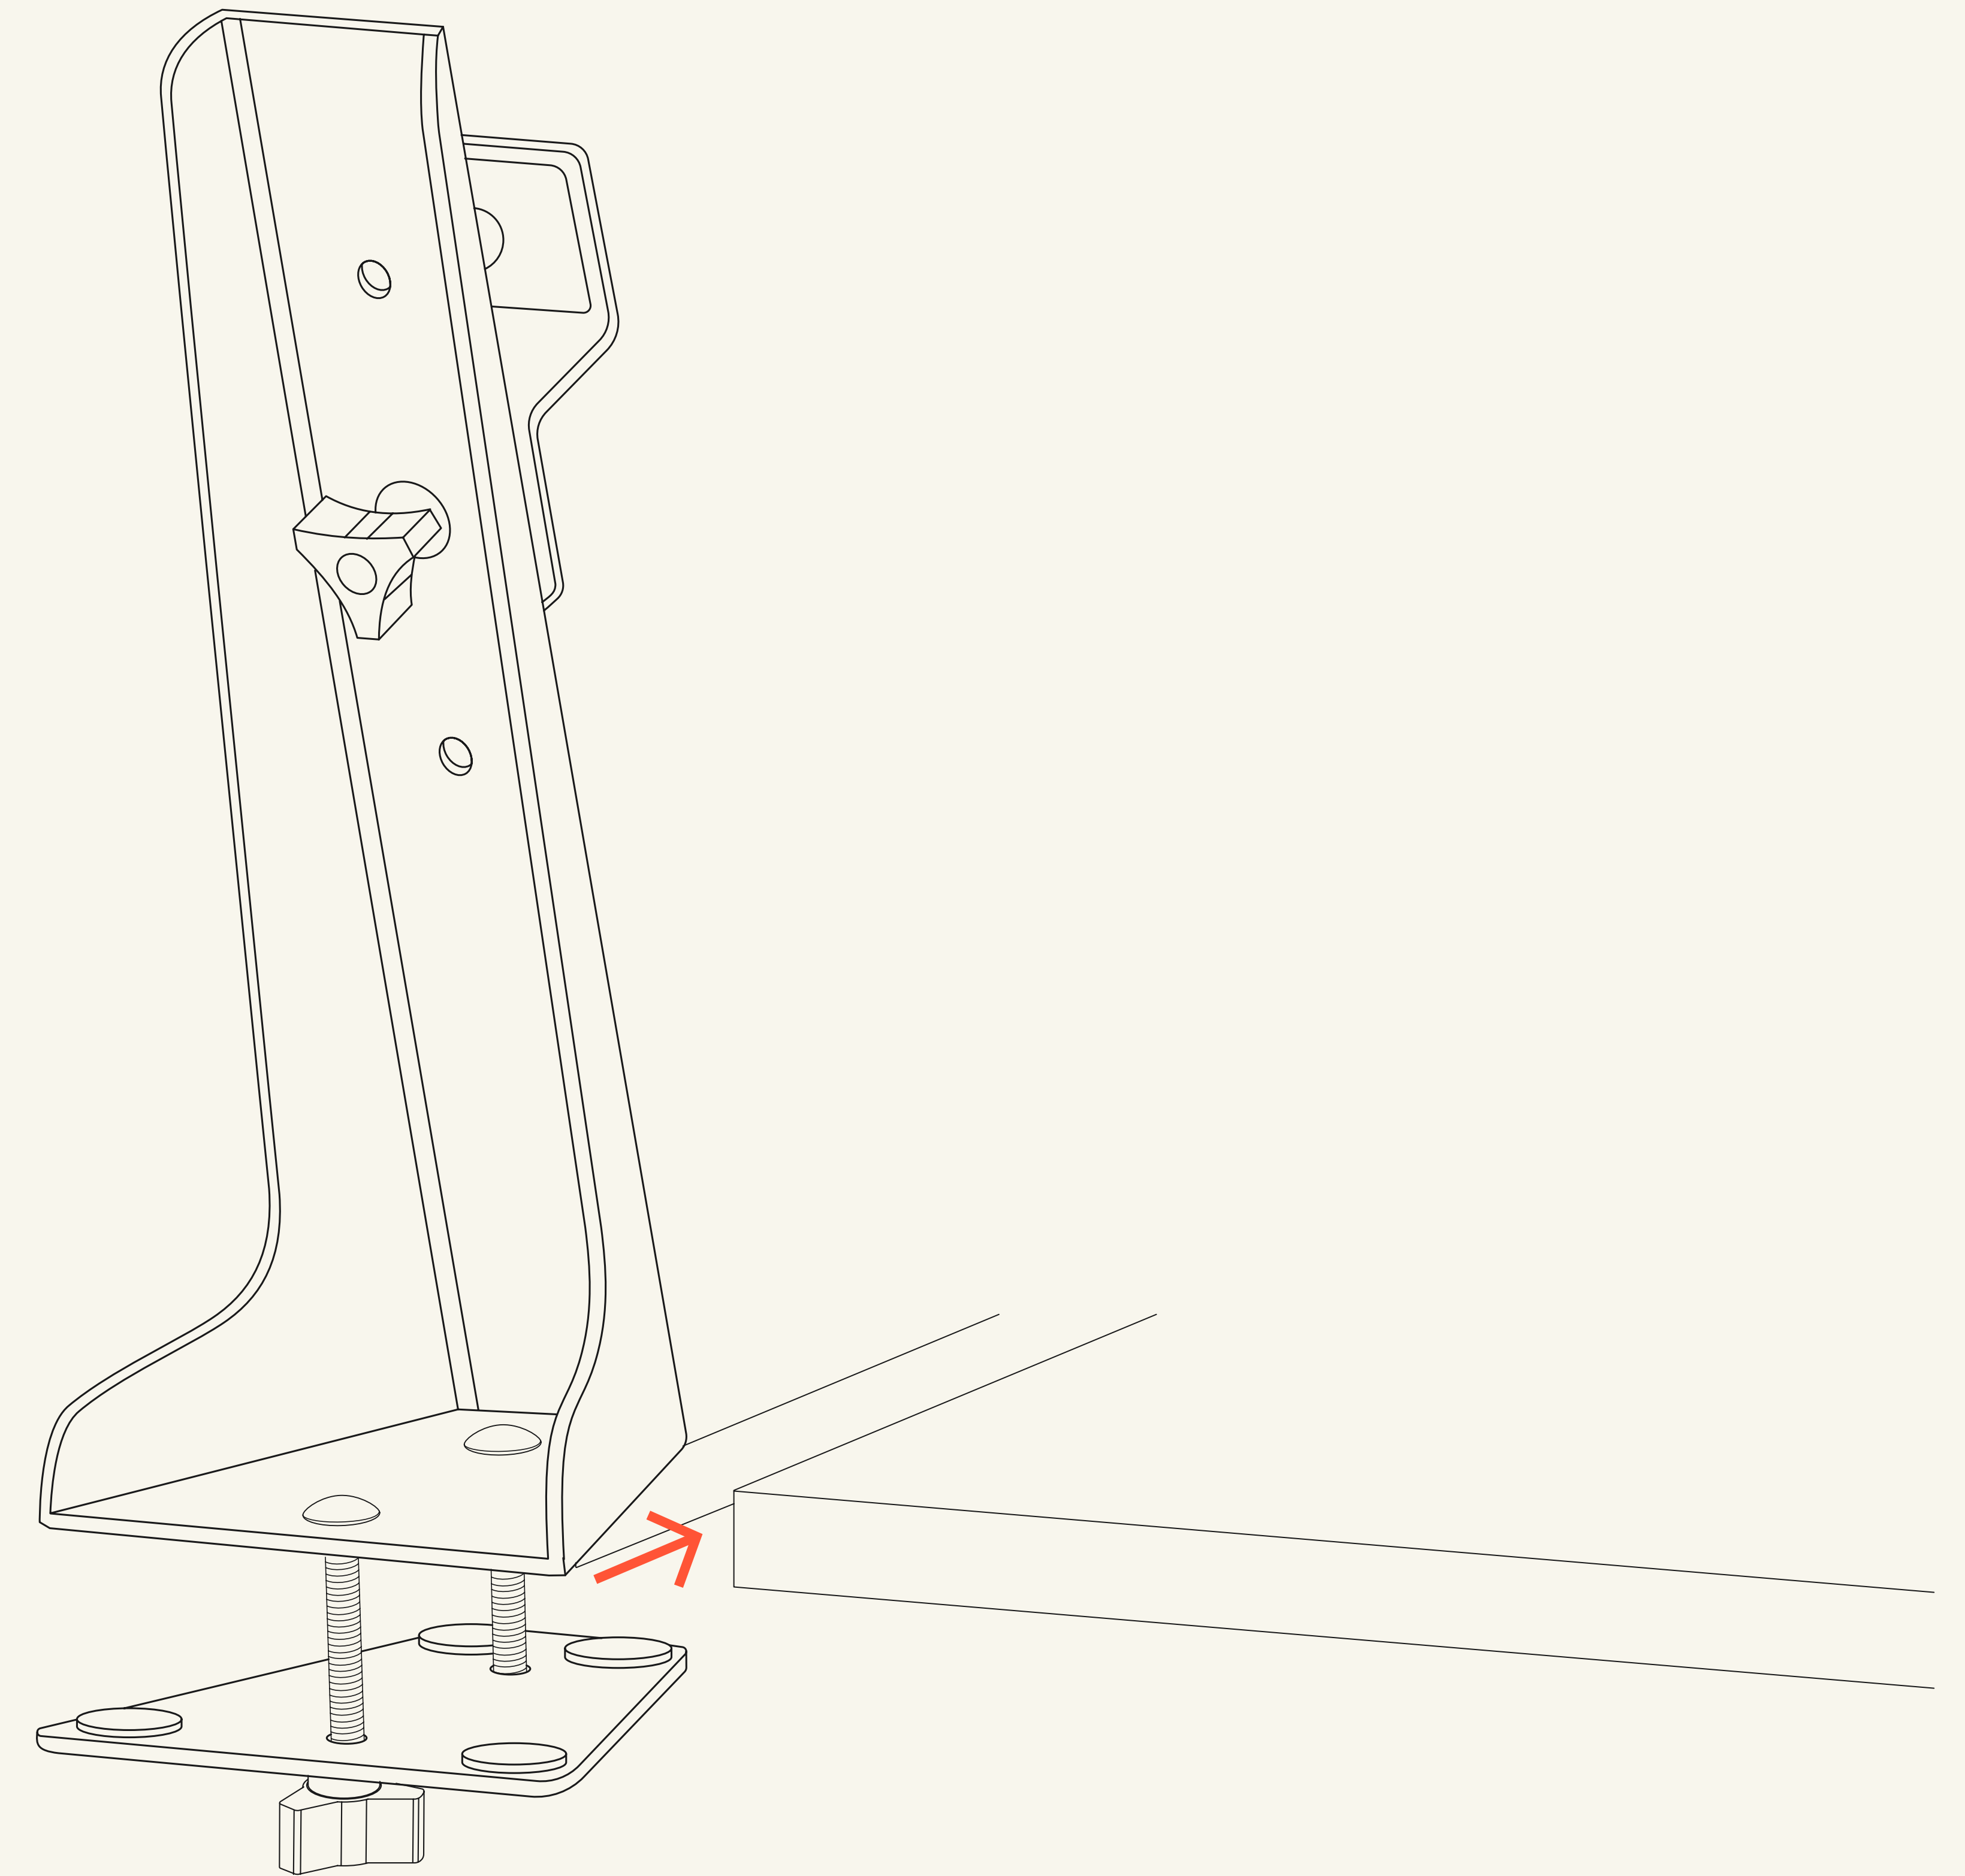

Step: 2B

## Align the brackets.

Ensure brackets are aligned with one another, leaving 1/4" of space between the back side of the bracket and the end of the bed panels, then tighten the nuts on the underside of the bracket.






Step: 2C

## Add the headboard.


With the Z-clips slightly loose, place the headboard panel onto the brackets.

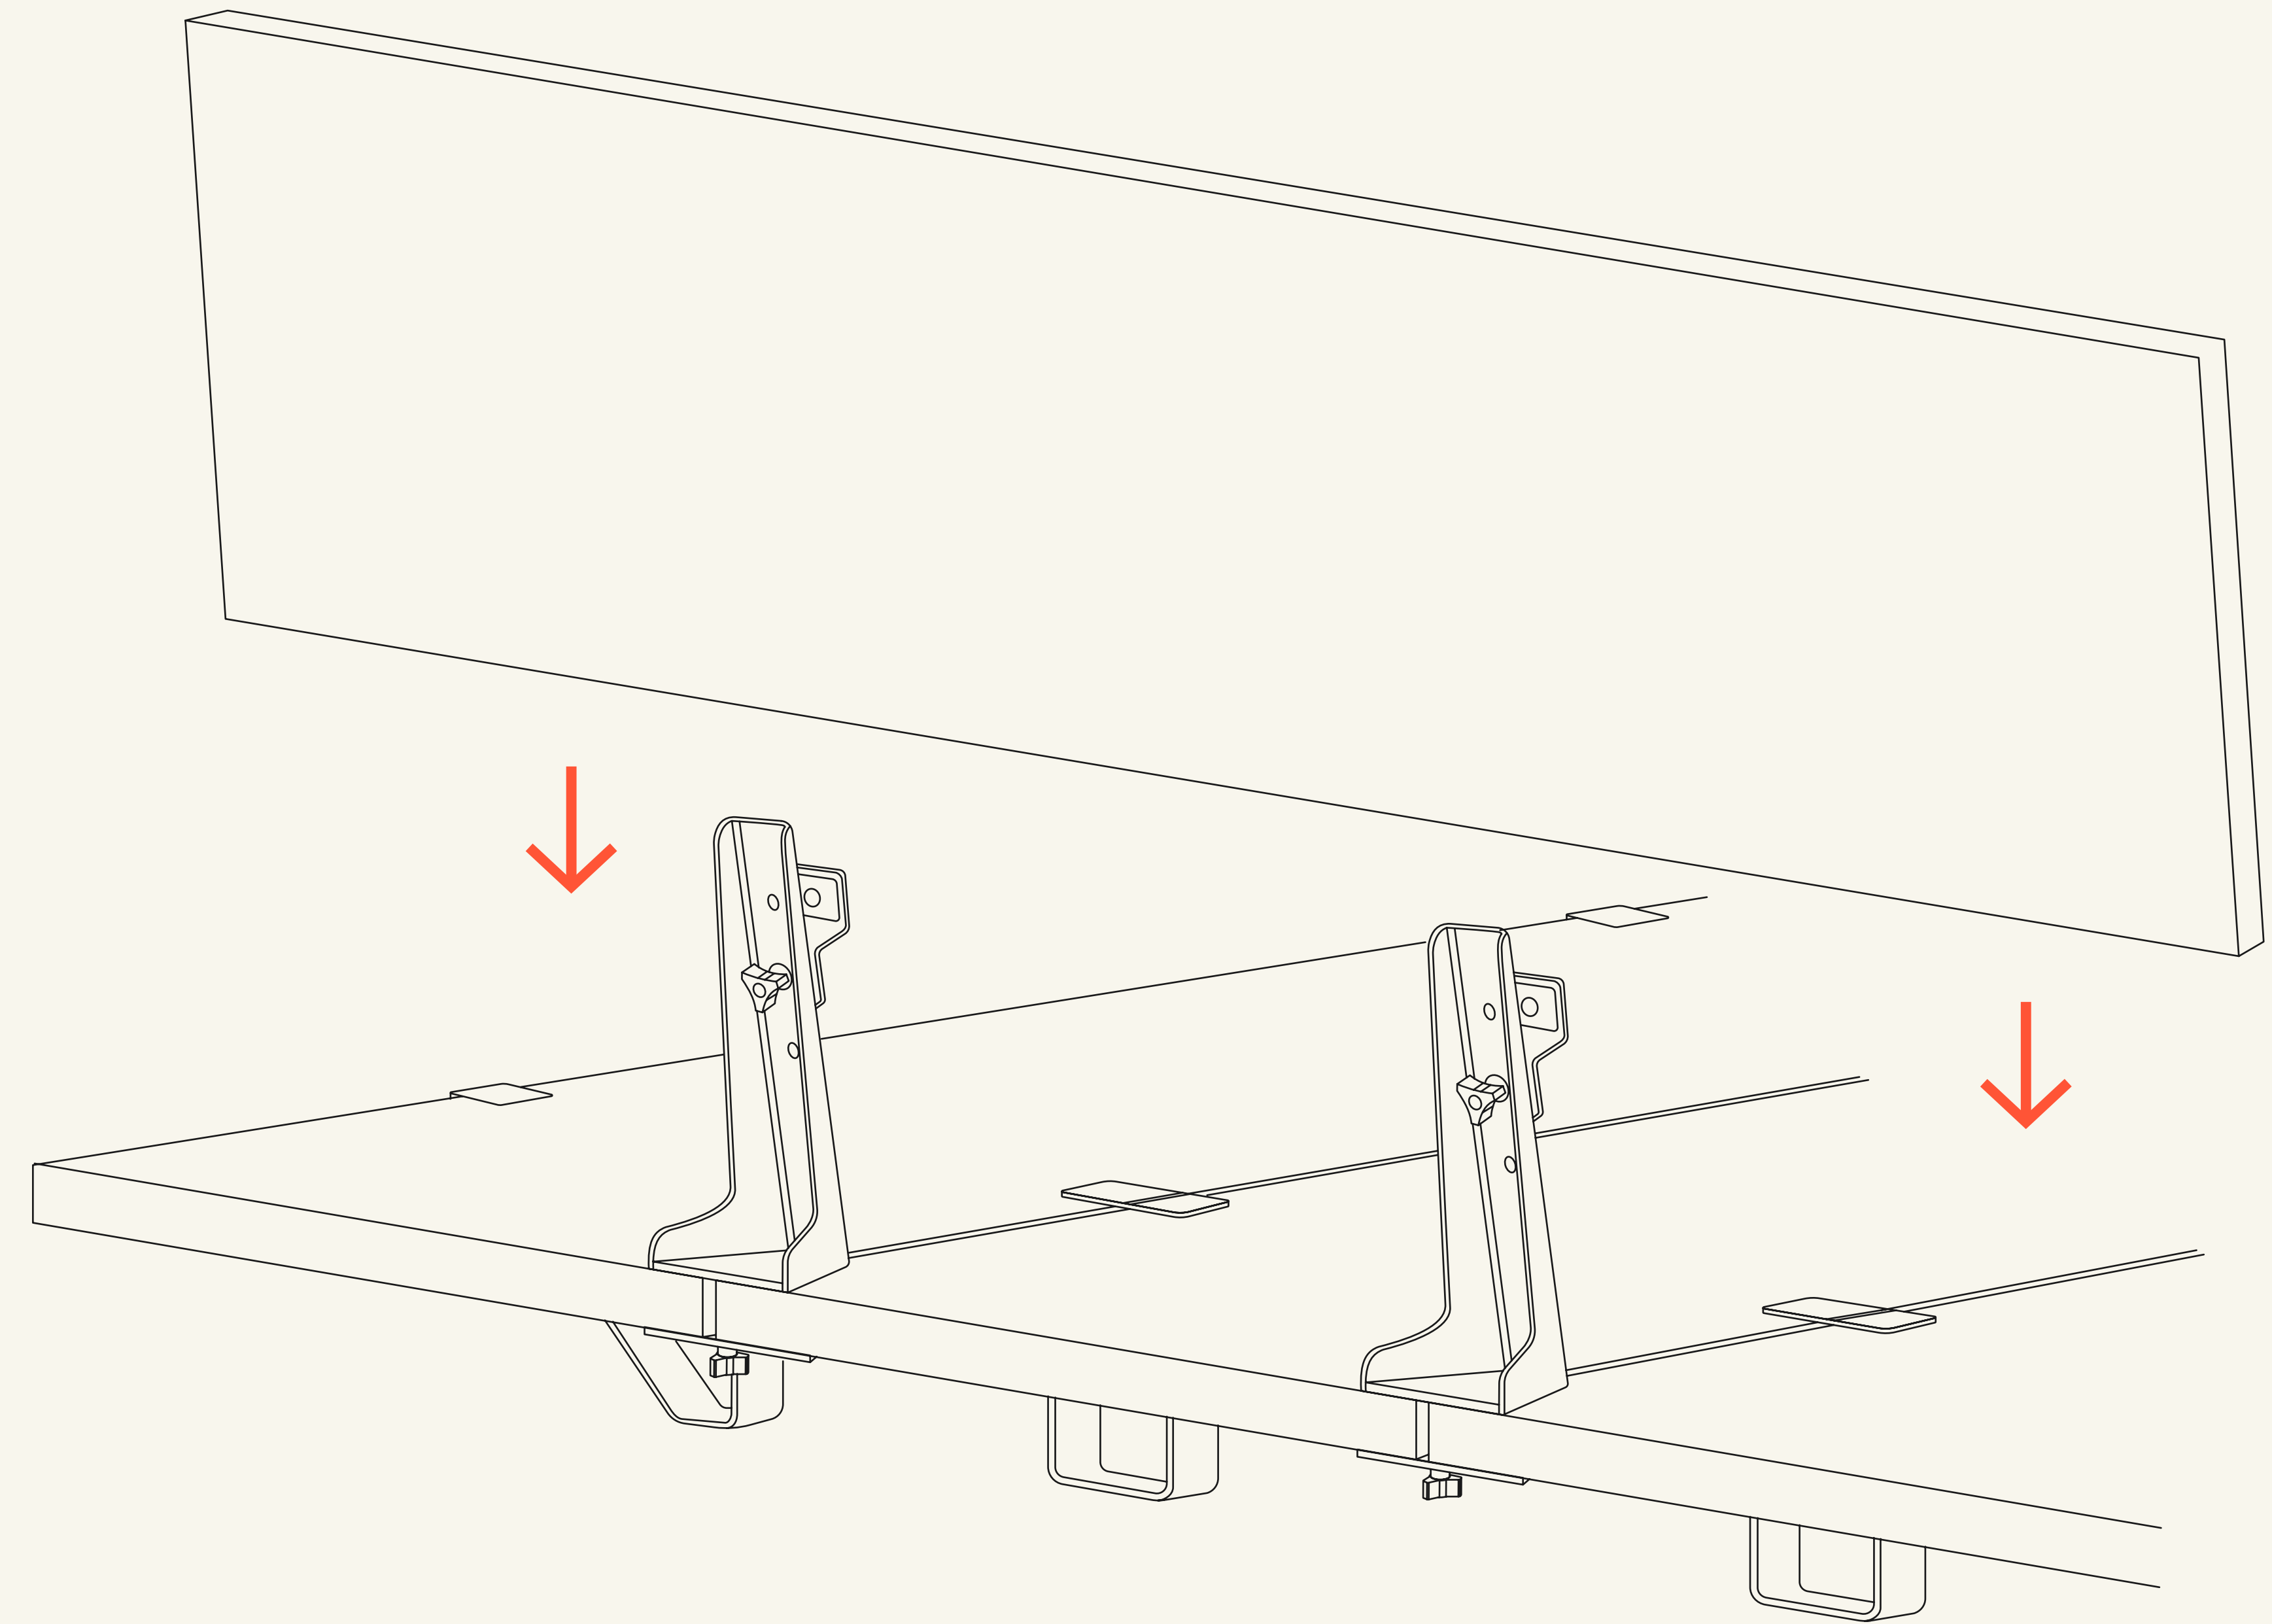

Step: 2D

## Finish your assembly.

Ensure your headboard is fixed into place and tighten all the screws — now you're ready to enjoy your new headboard!

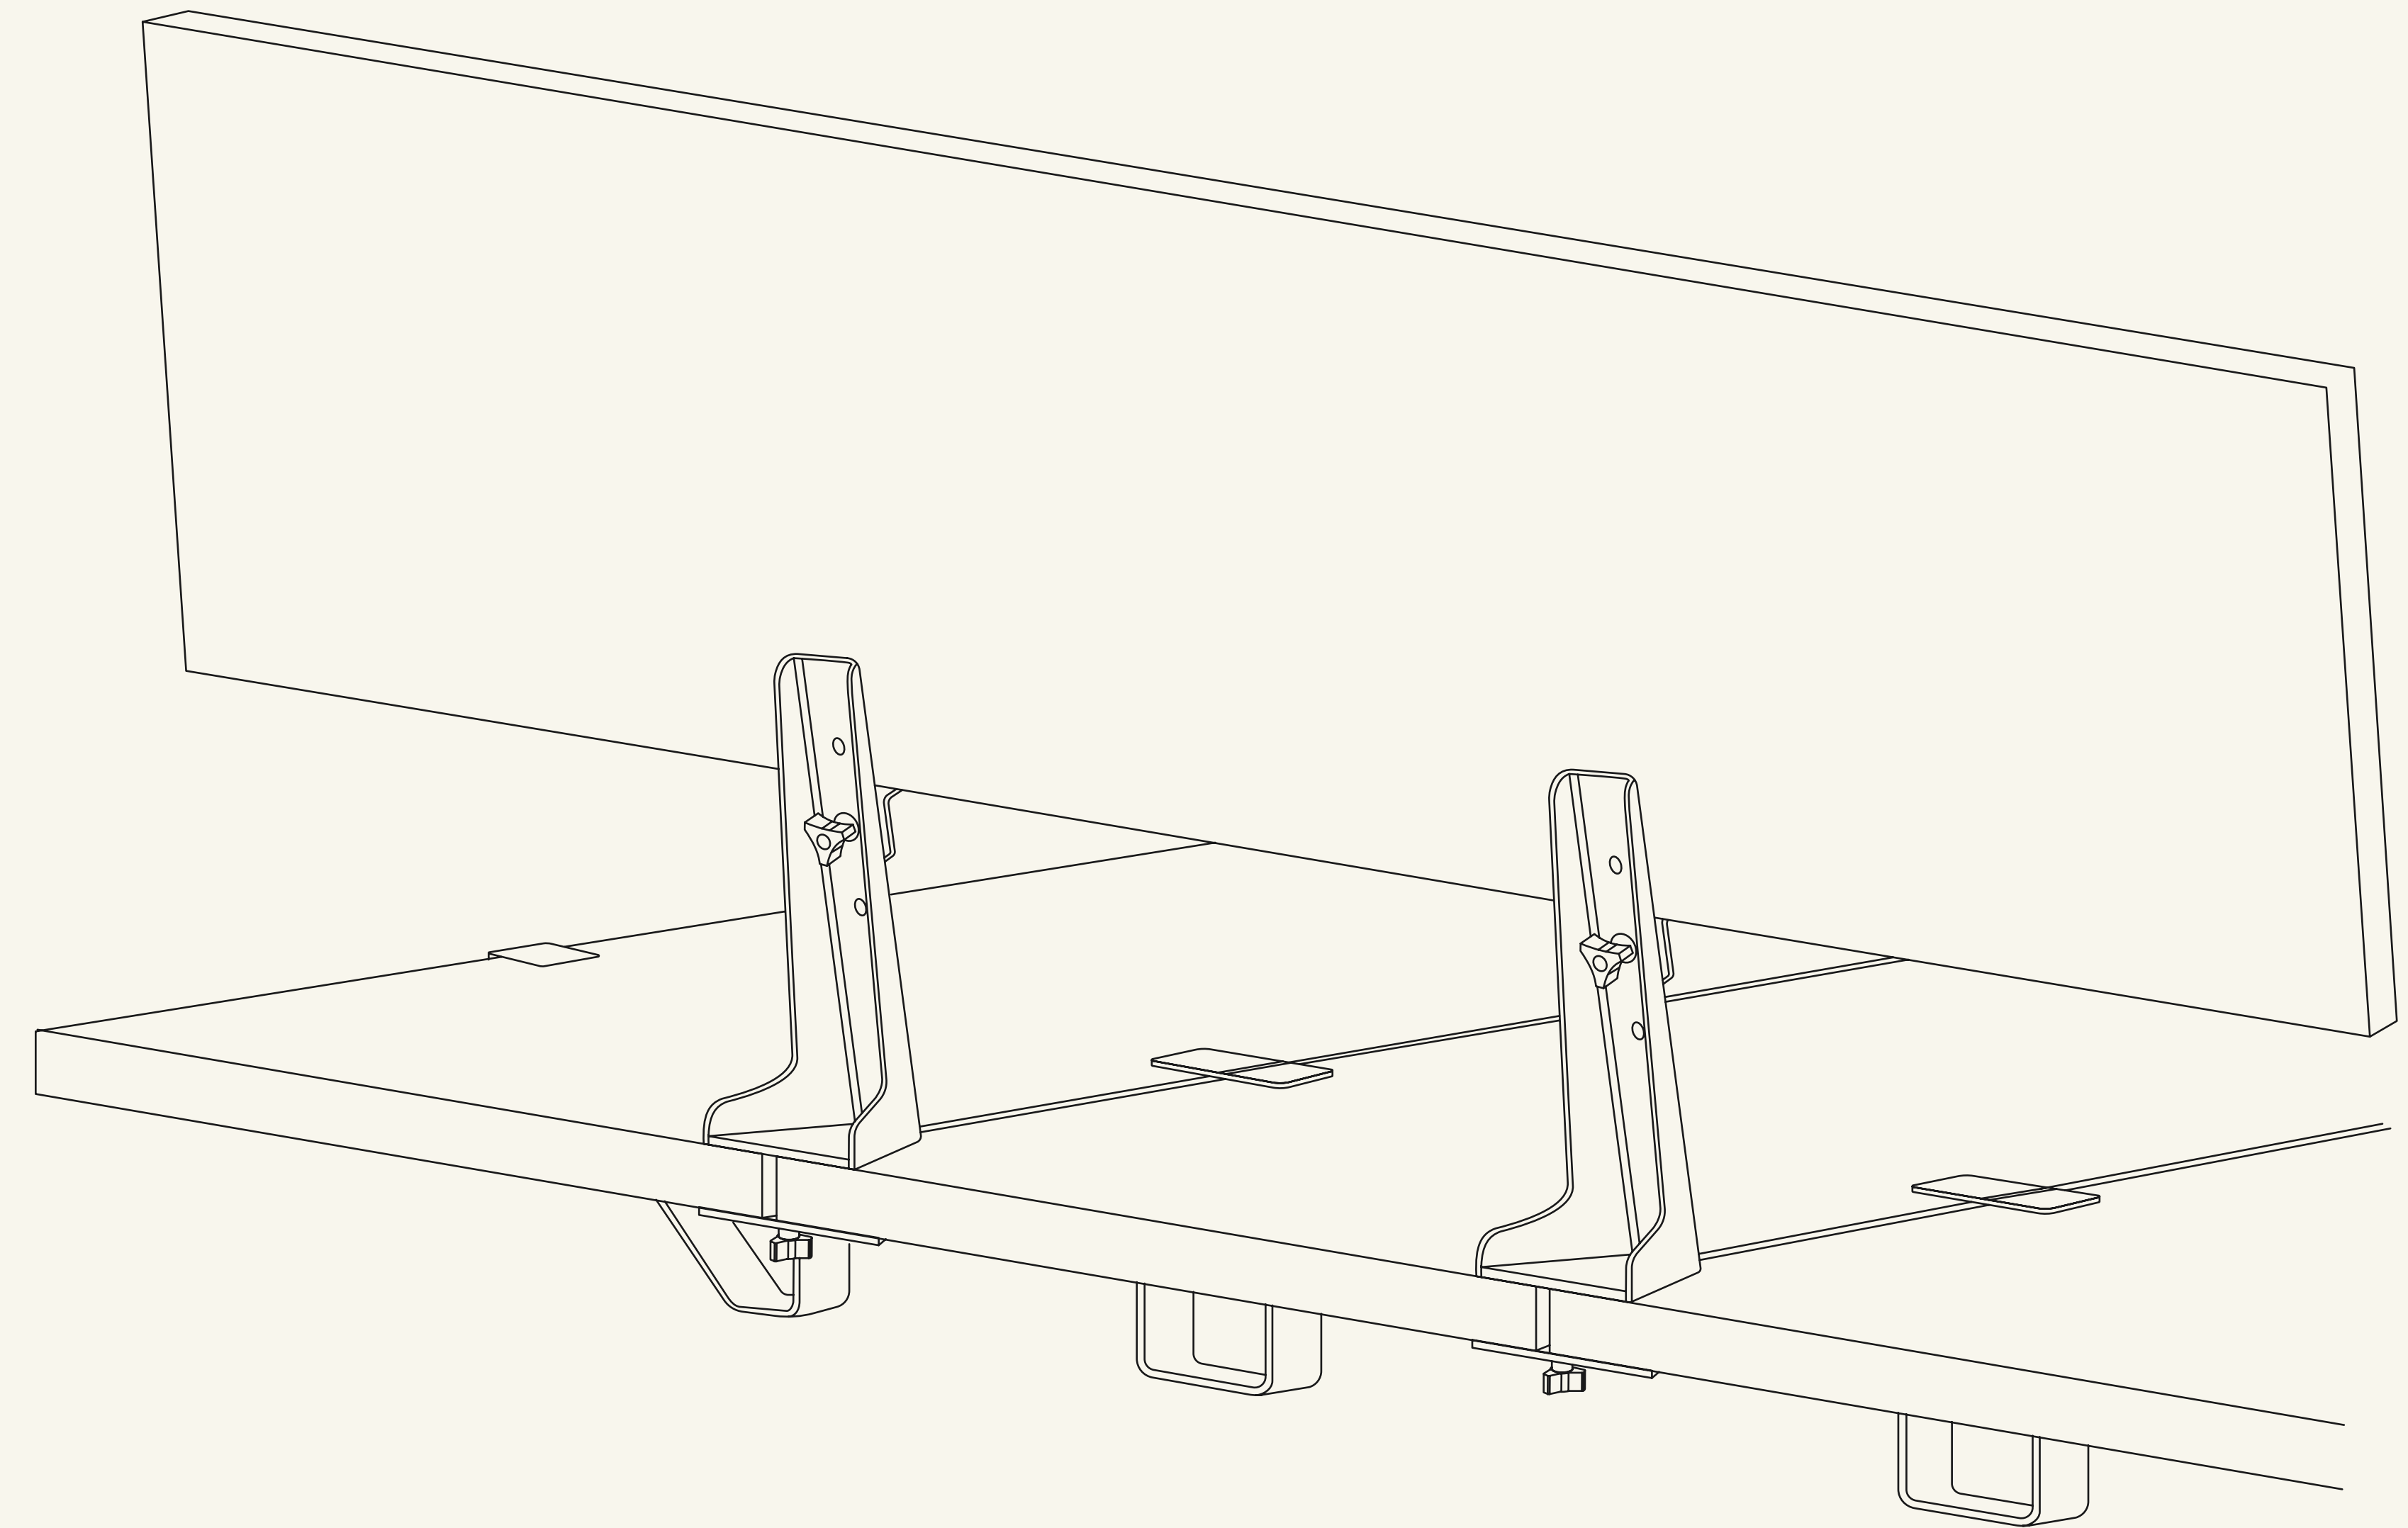

# You're done!

Enjoy your new headboard.

Need any help? Have questions? Our customer experience team is on-hand to help! You can reach out to us at [floydhome.com/pages/contact](https://floydhome.com/pages/contact)

Feel like showing off? We'd love to see what you've done with the place. Tag us on Instagram [@floyddetroit](https://www.instagram.com/floyddetroit) and say hello.

WARNING ⚠

READ ALL INSTRUCTIONS **BEFORE** ASSEMBLY & USE.  
ADULT ASSEMBLY REQUIRED. KEEP SMALL PARTS AND  
PACKAGING AWAY FROM CHILDREN

**NOTES ON USE:**

Keep children and others safe by following these  
simple rules:

- DO NOT** allow any child to play on furniture
- DO NOT** allow climbing on any piece of furniture
- DO NOT** allow hanging from any piece of furniture

**ASSEMBLY:**

Only assemble as shown in these instructions.  
The Floyd Headboard should only be used with the  
Floyd Platform Bed Frame. Use extra precaution  
when assembling and have someone assist you.

Do **not** change the specifications or modify this  
product. Incorrect assembly can cause product to  
fail and cause personal injury.

**USAGE:**

Remove all packaging before first use. Use only  
with the Floyd Bed Frame. Use only indoors.  
Disassemble before moving. Do not sit on the top  
of the Headboard panel. Keep open flames such as  
candles away from the Headboard panel. Inspect  
metal brackets regularly for signs of wear.

Replace if brackets are bent, rusted, deformed,  
or damaged. Failure to observe recommended  
practices such as sitting on the top of the  
panel can result in unsafe conditions and  
product damage or personal injury. Do not allow  
children to play with product or components.  
Keep all packaging and parts away from children.  
There is a risk of choking and suffocation.

FLOYD