

FLOYD


How to Assemble:

The Dresser System (Three Unit)


FLOYD

Components


3x Units

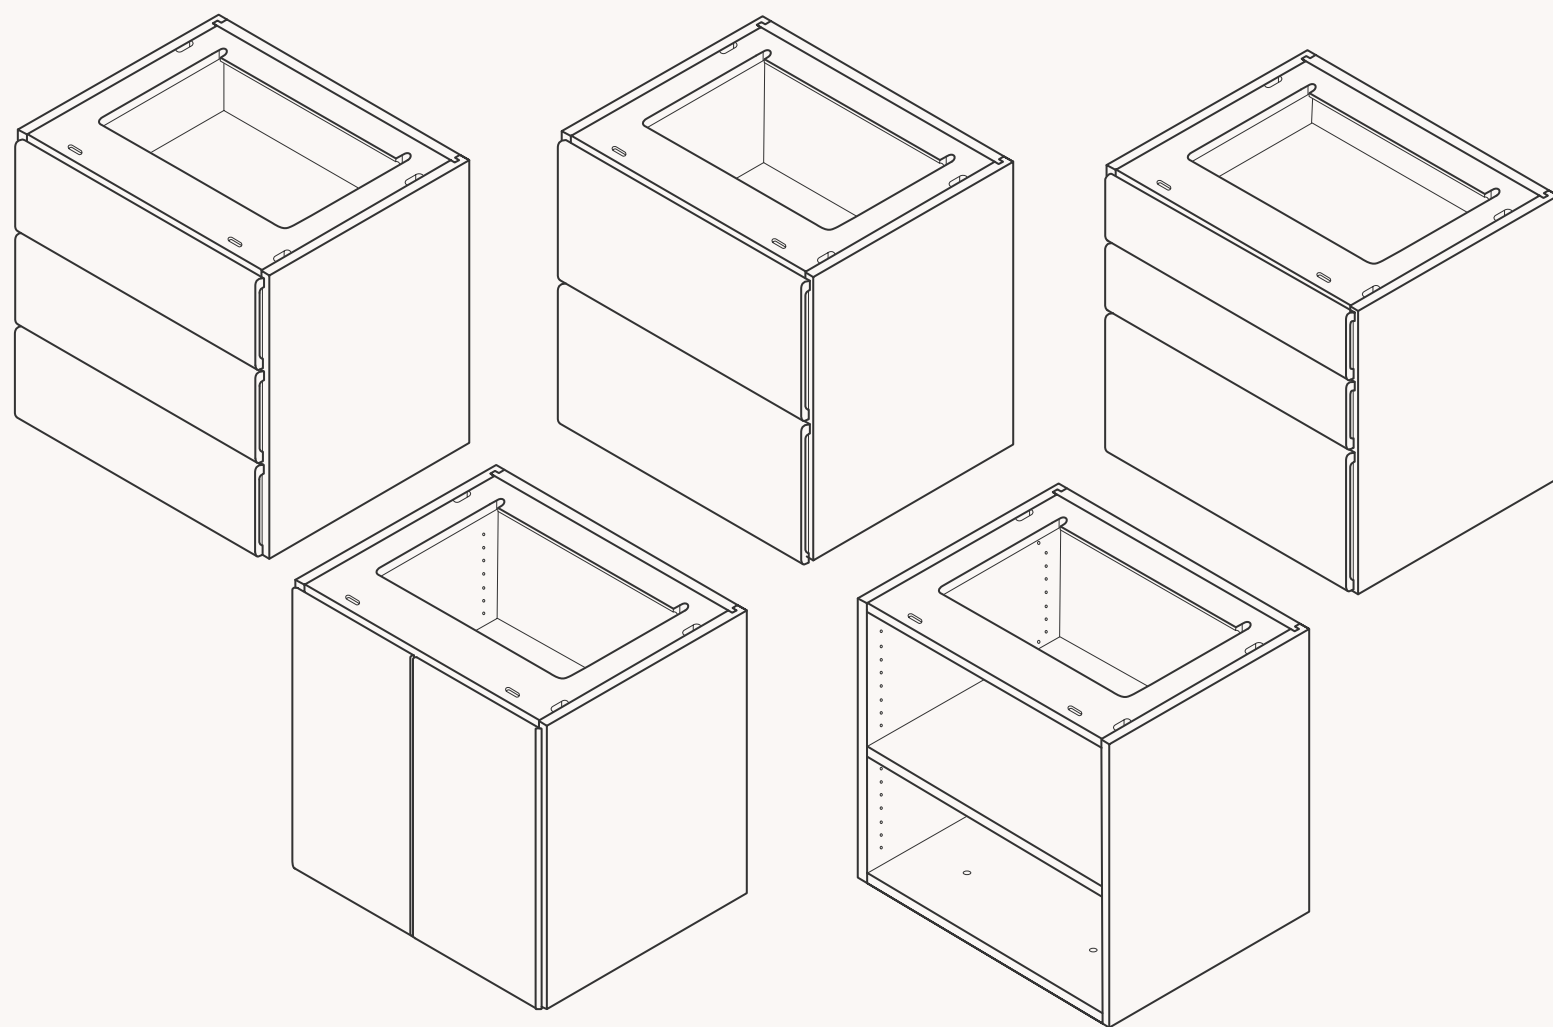


1x Top

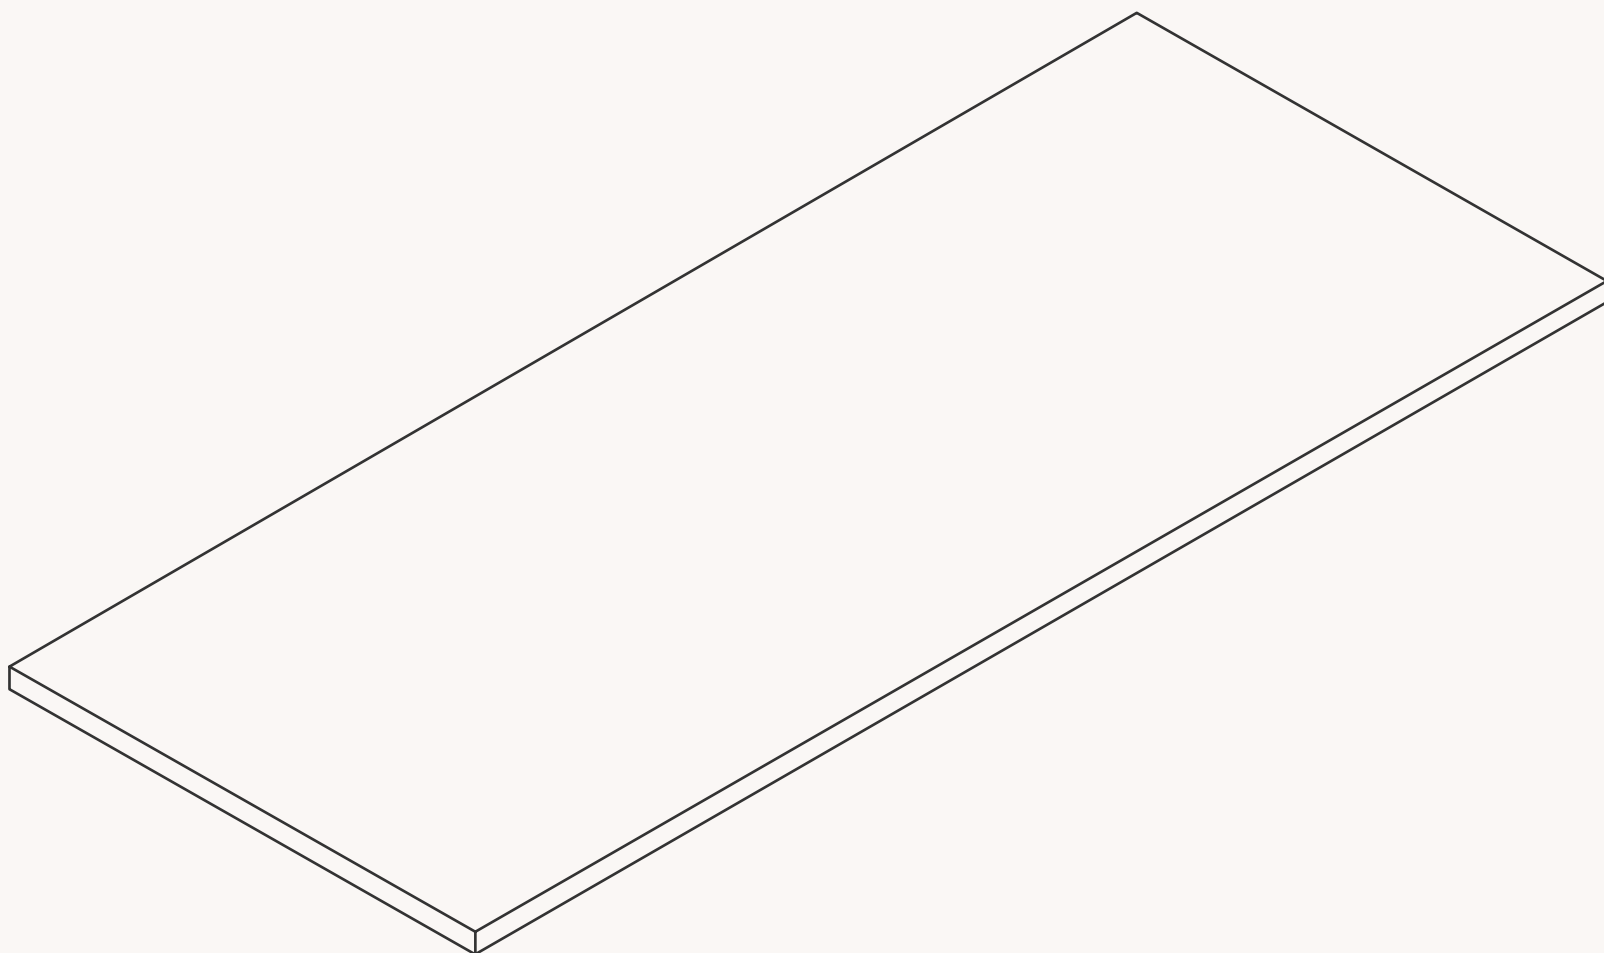


2x Base Aprons

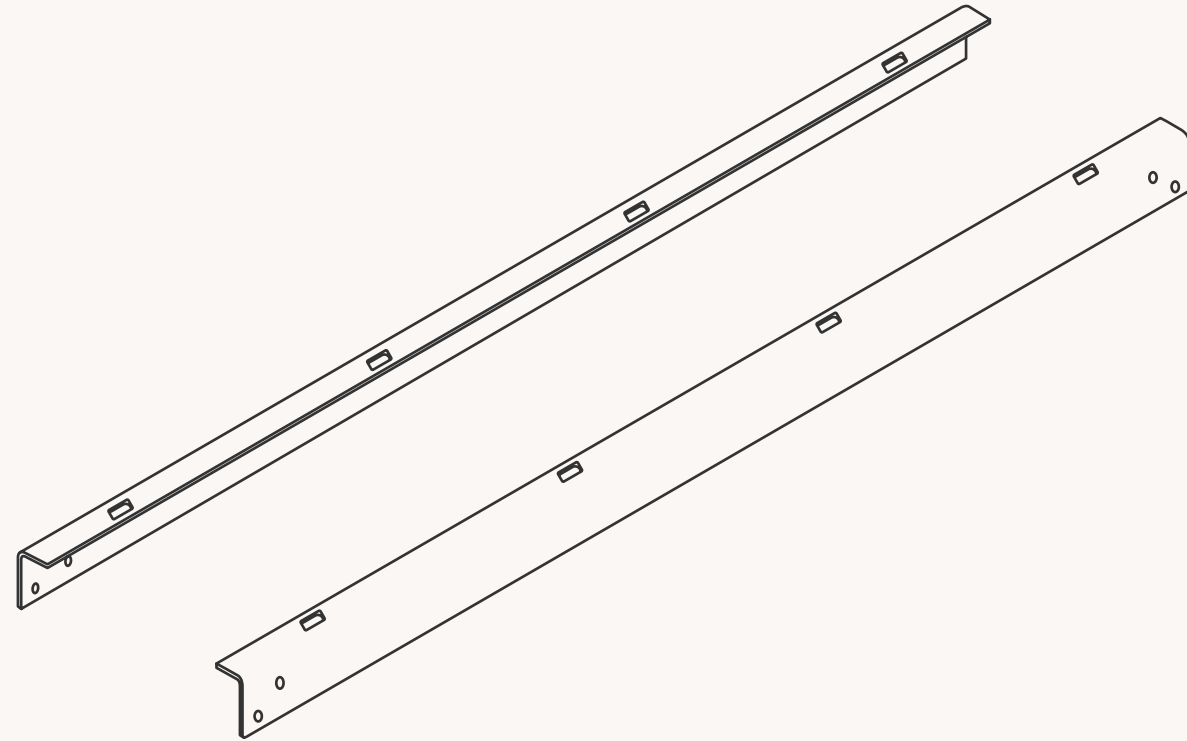


1x Base Leg Set

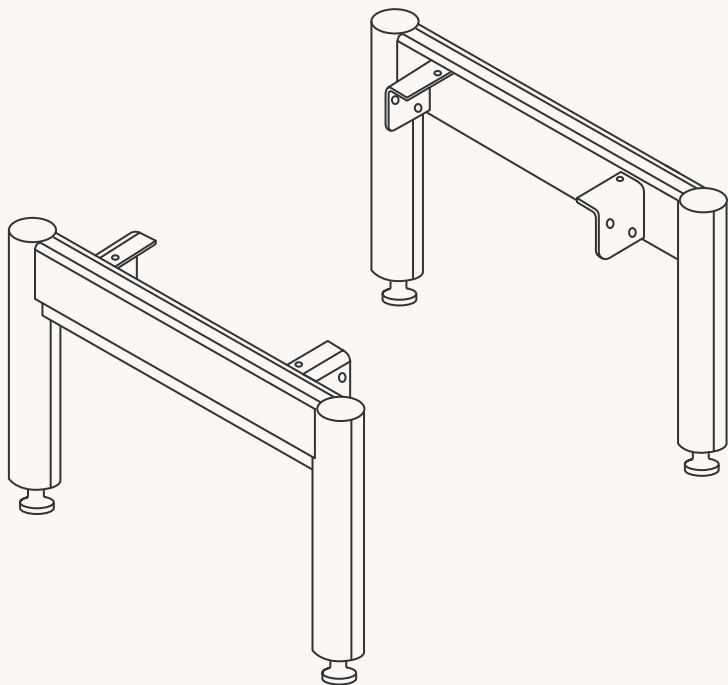

14x Bolts

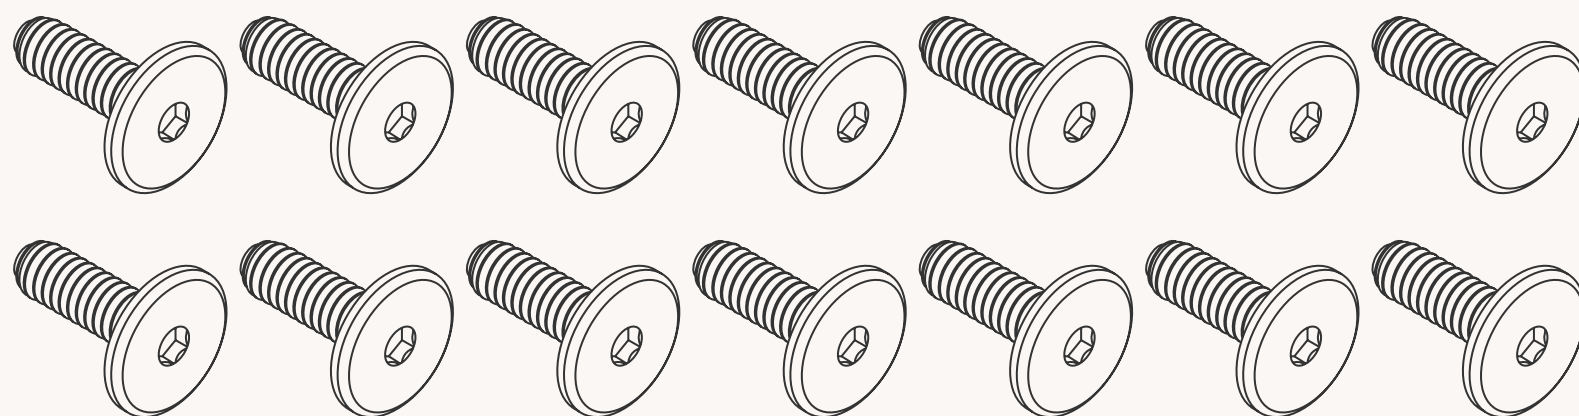

8x Wing Nuts

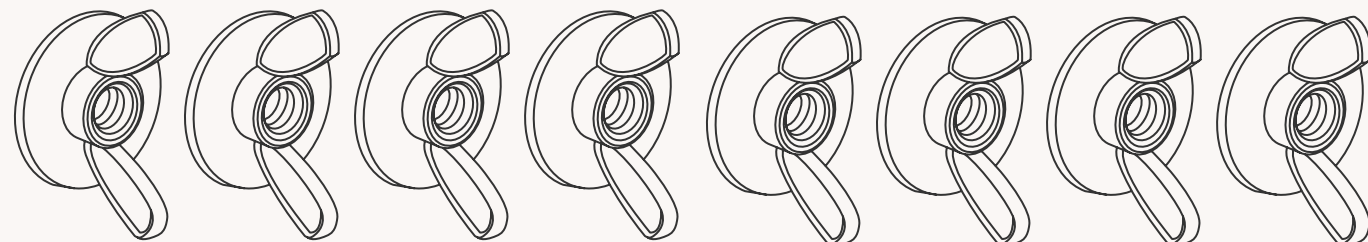


Pro Tip: If you're considering a return, save your packaging!


FLOYD

Components


4x U-Brackets

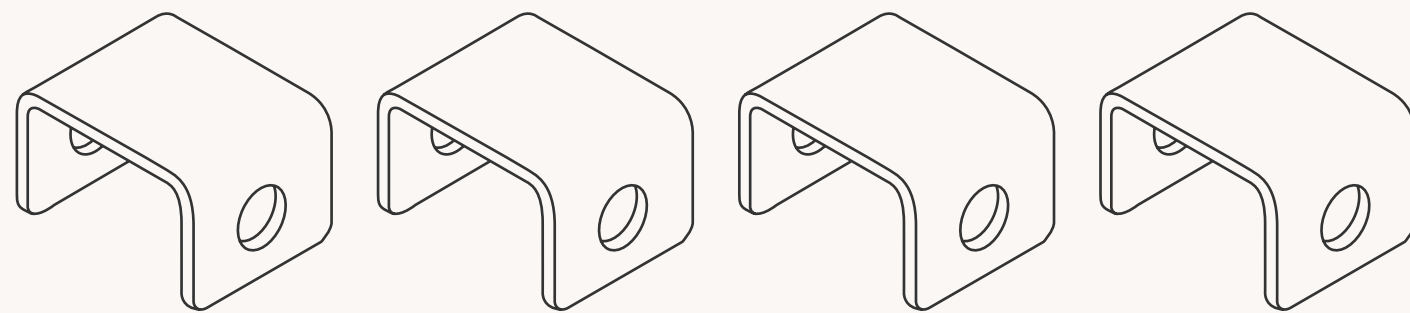

1x Hex Tool

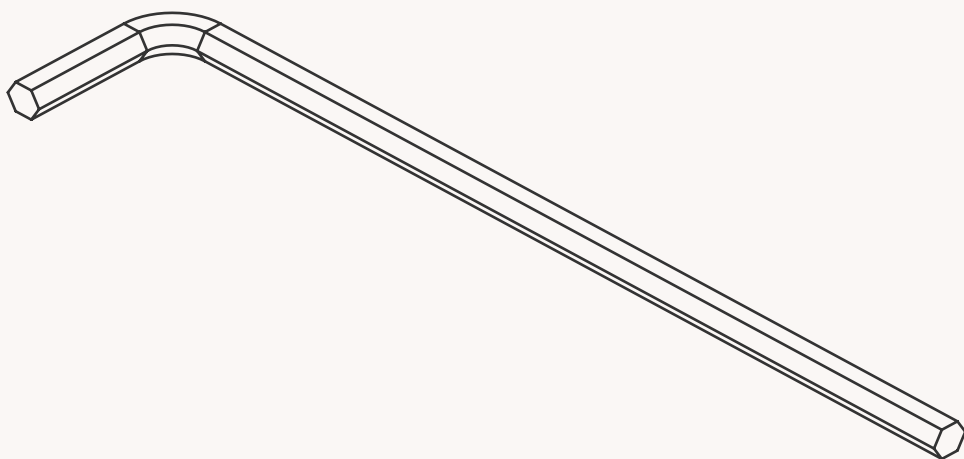

1x Anti-Tip Kit

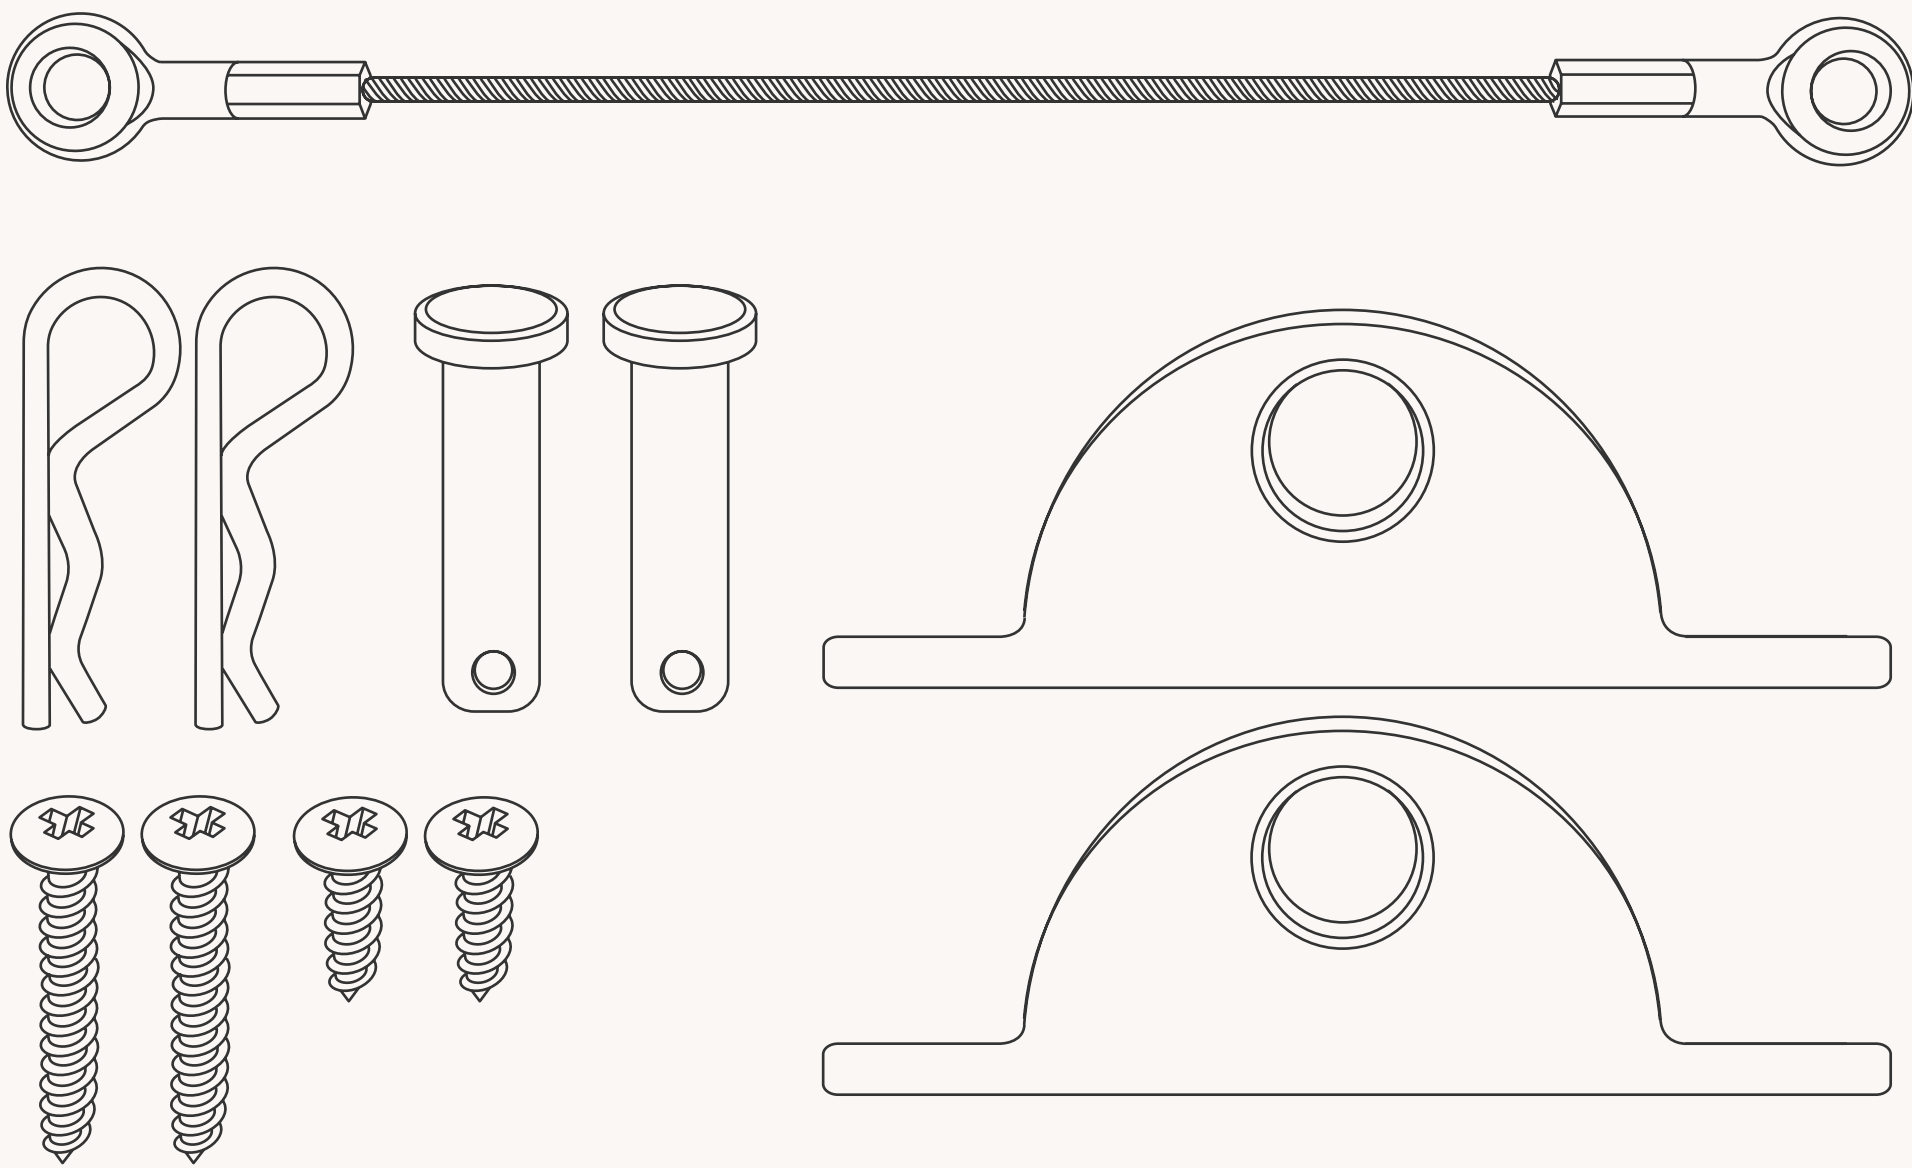

Pro Tip: If you're considering a return, save your packaging!

Step: 1

Assembling the Base

FLOYD


Step: 1A

Begin by placing the Base Aprons and Leg Sets on a soft surface.


Guide the threaded studs on the Base Aprons through the holes in the end of each Leg Set.

Use the 8 provided Base Wing Nuts to secure the Base Aprons to the Leg Sets, making sure to fully tighten all Bolts.

01.

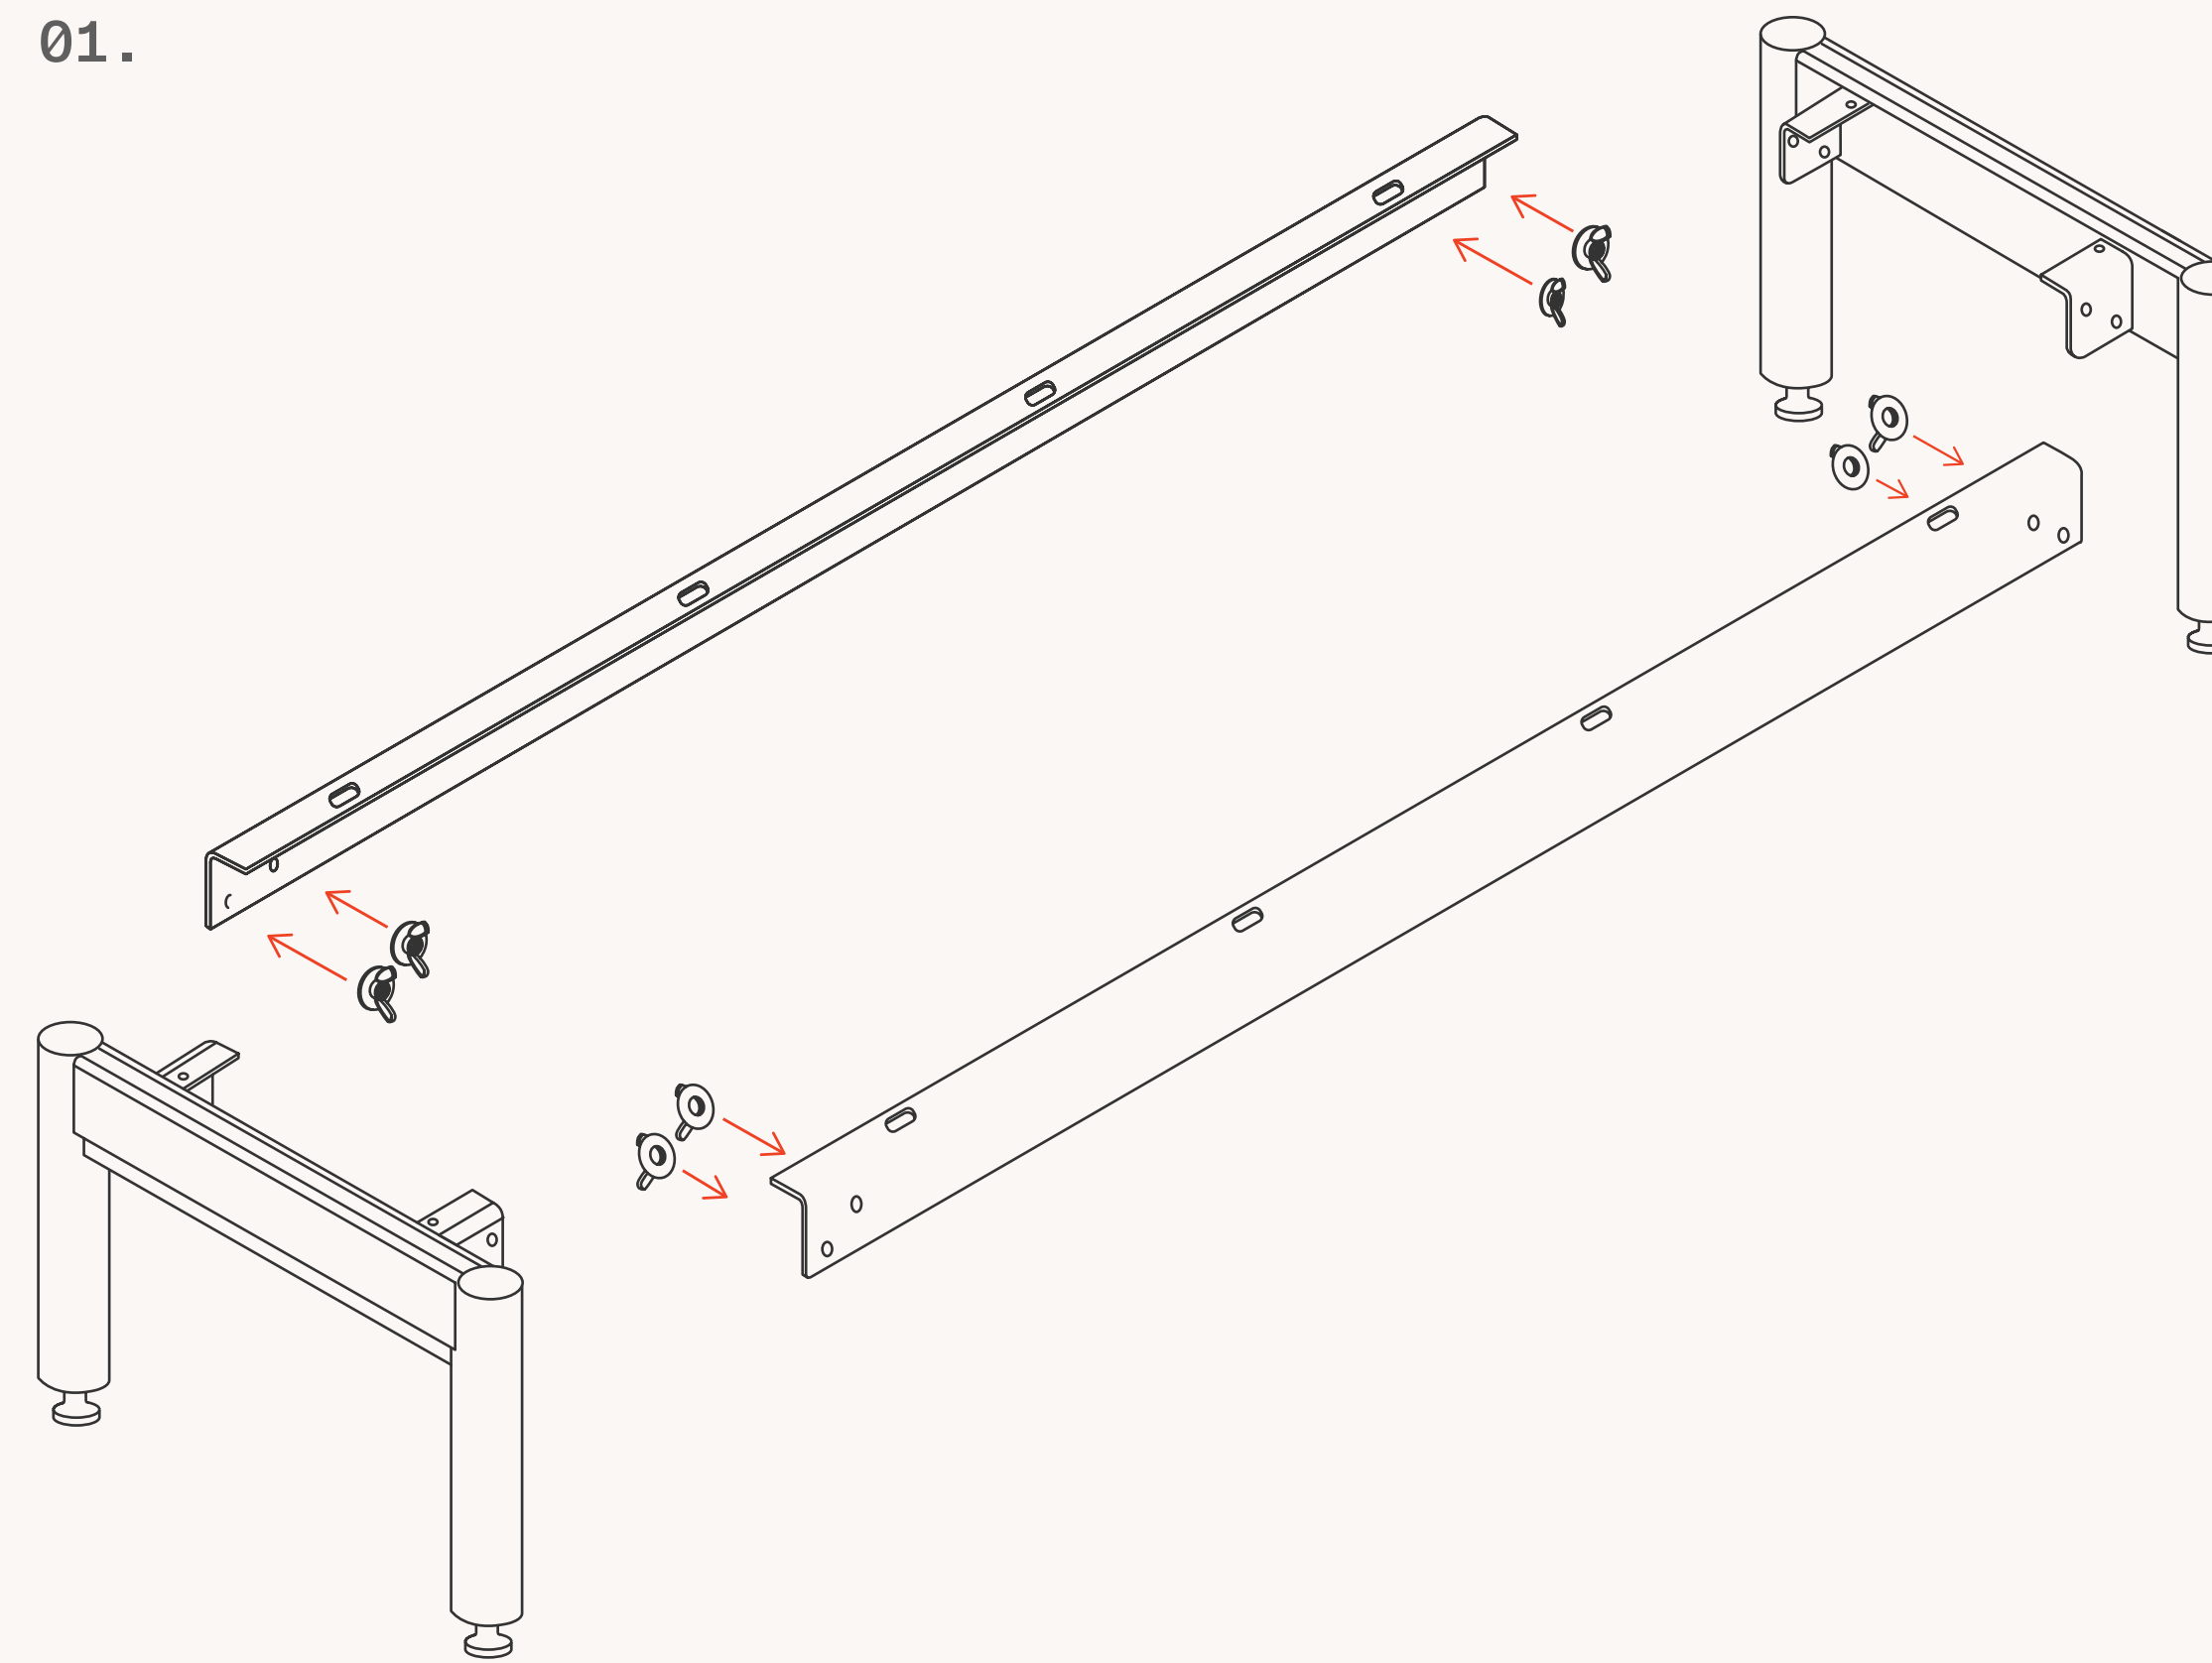


02.

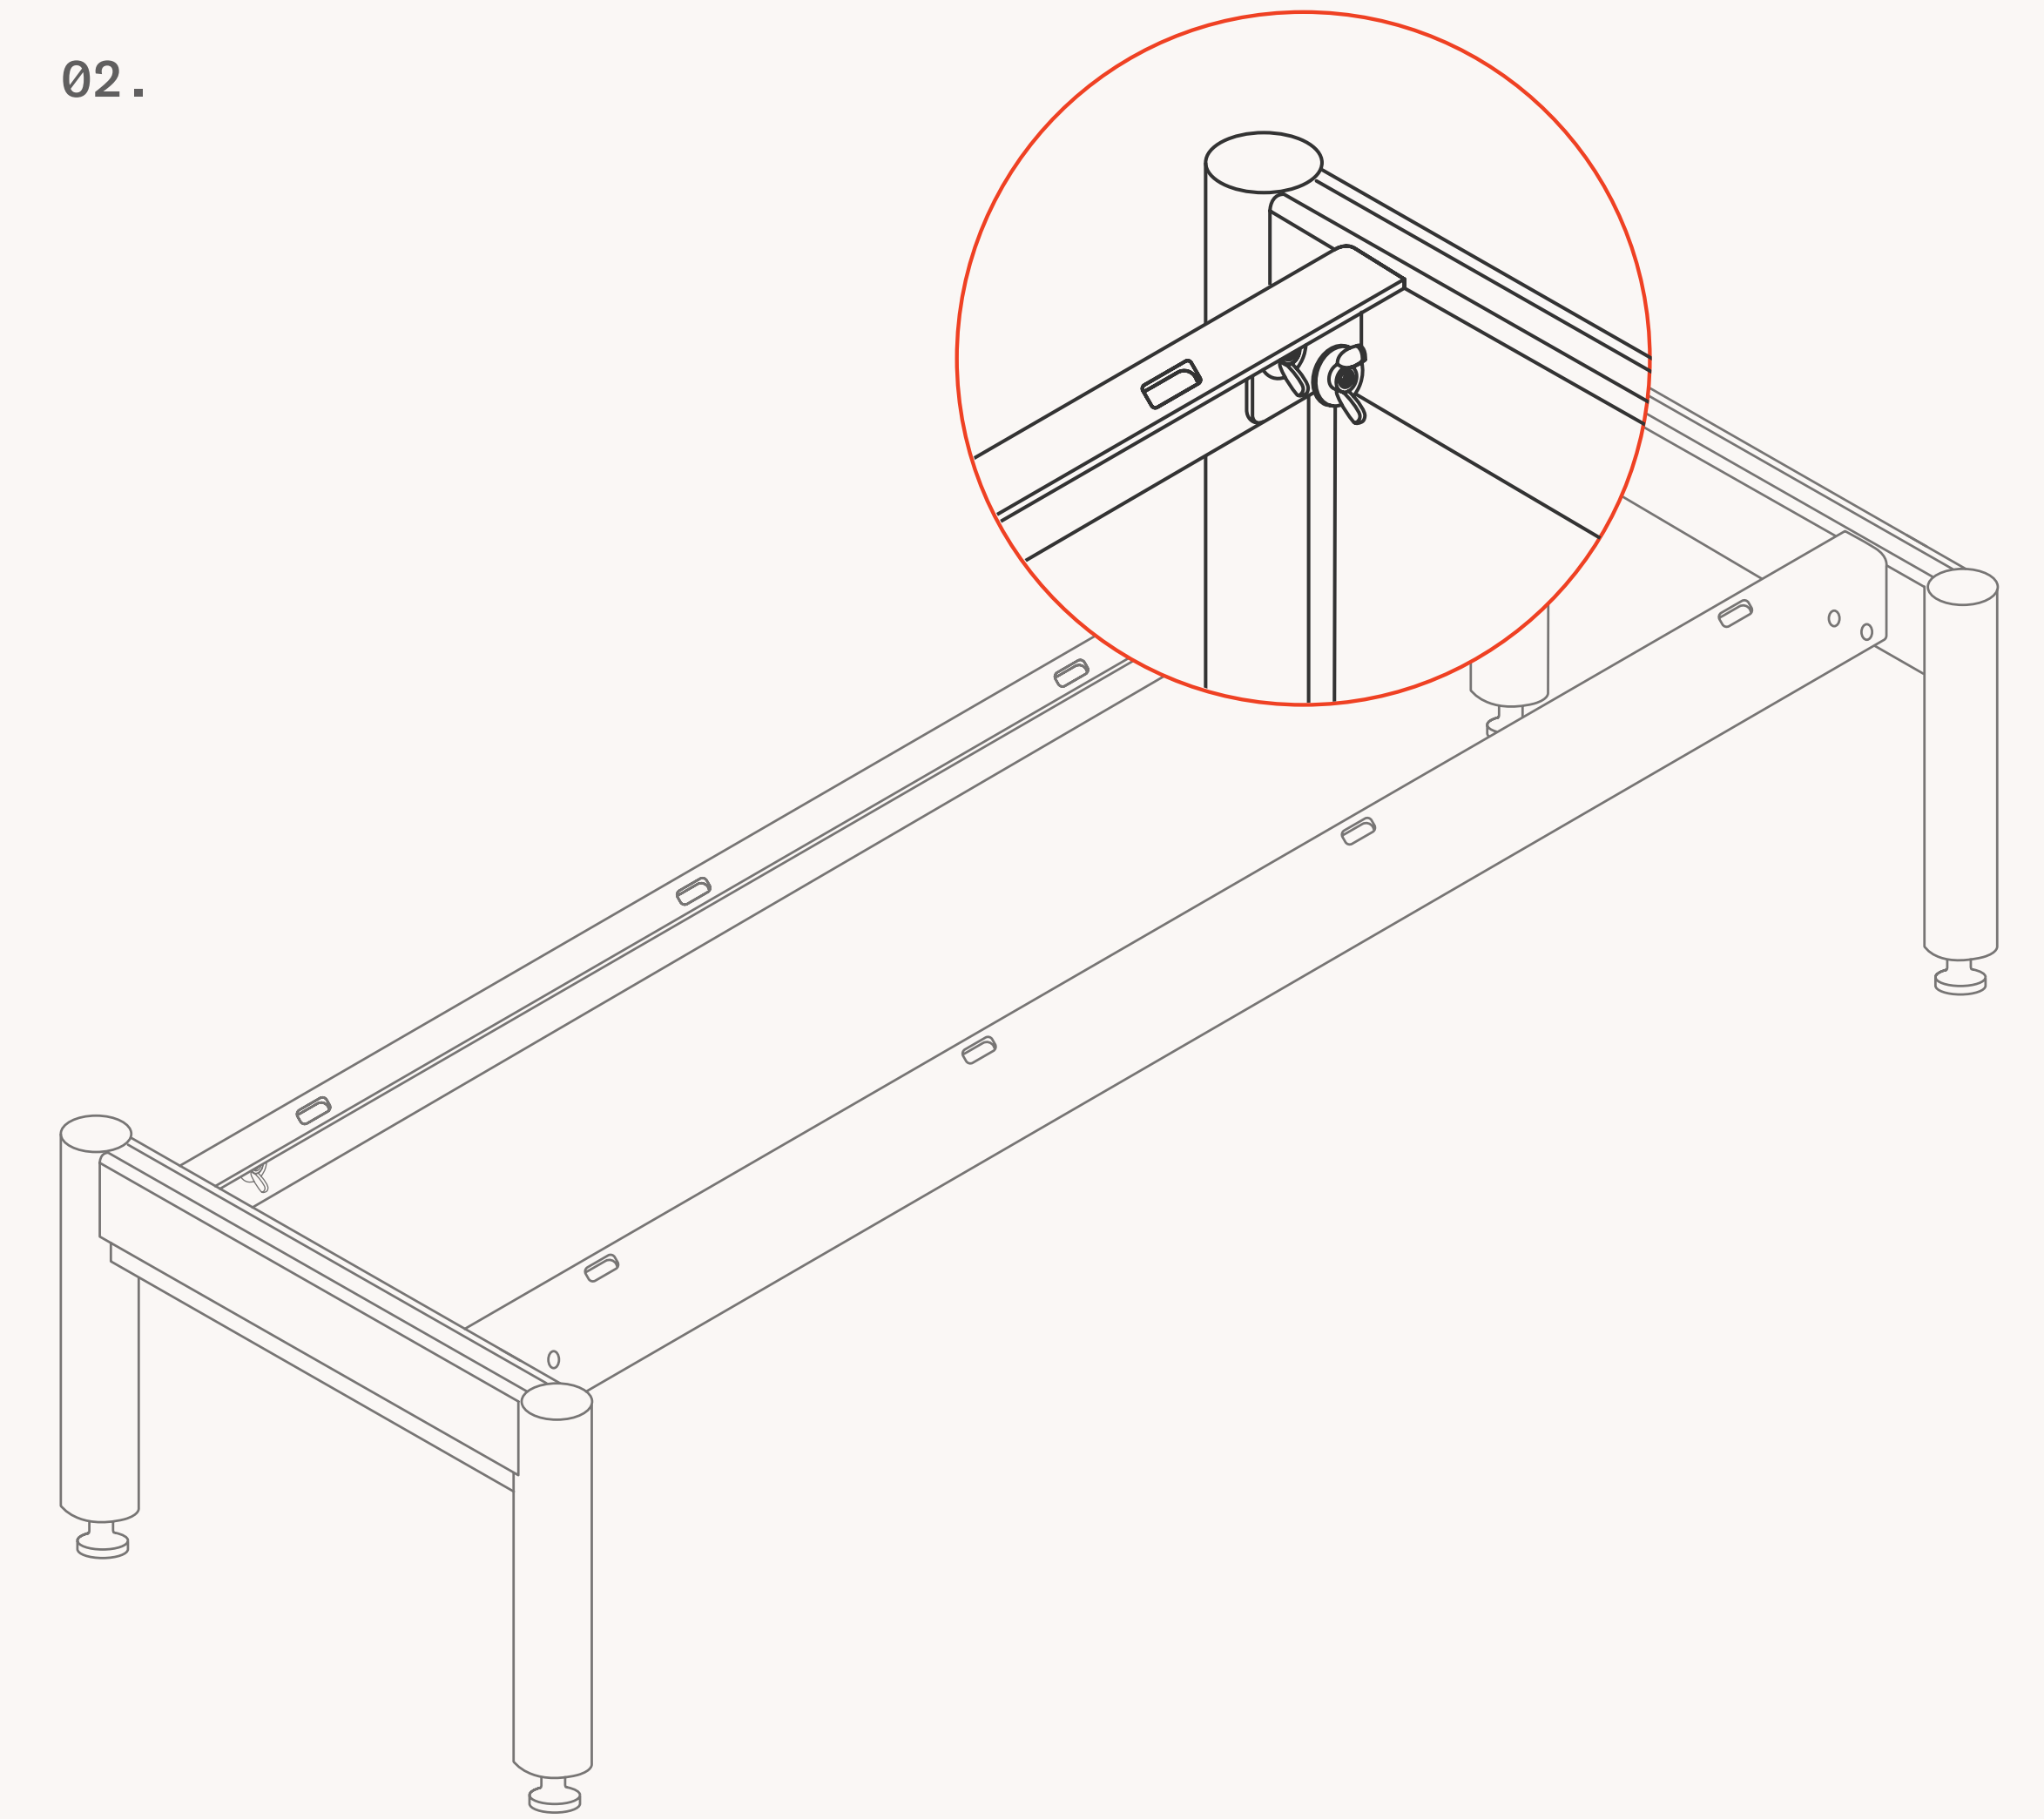

Step: 1B

Once assembled, place the Base on a level surface near its final location.

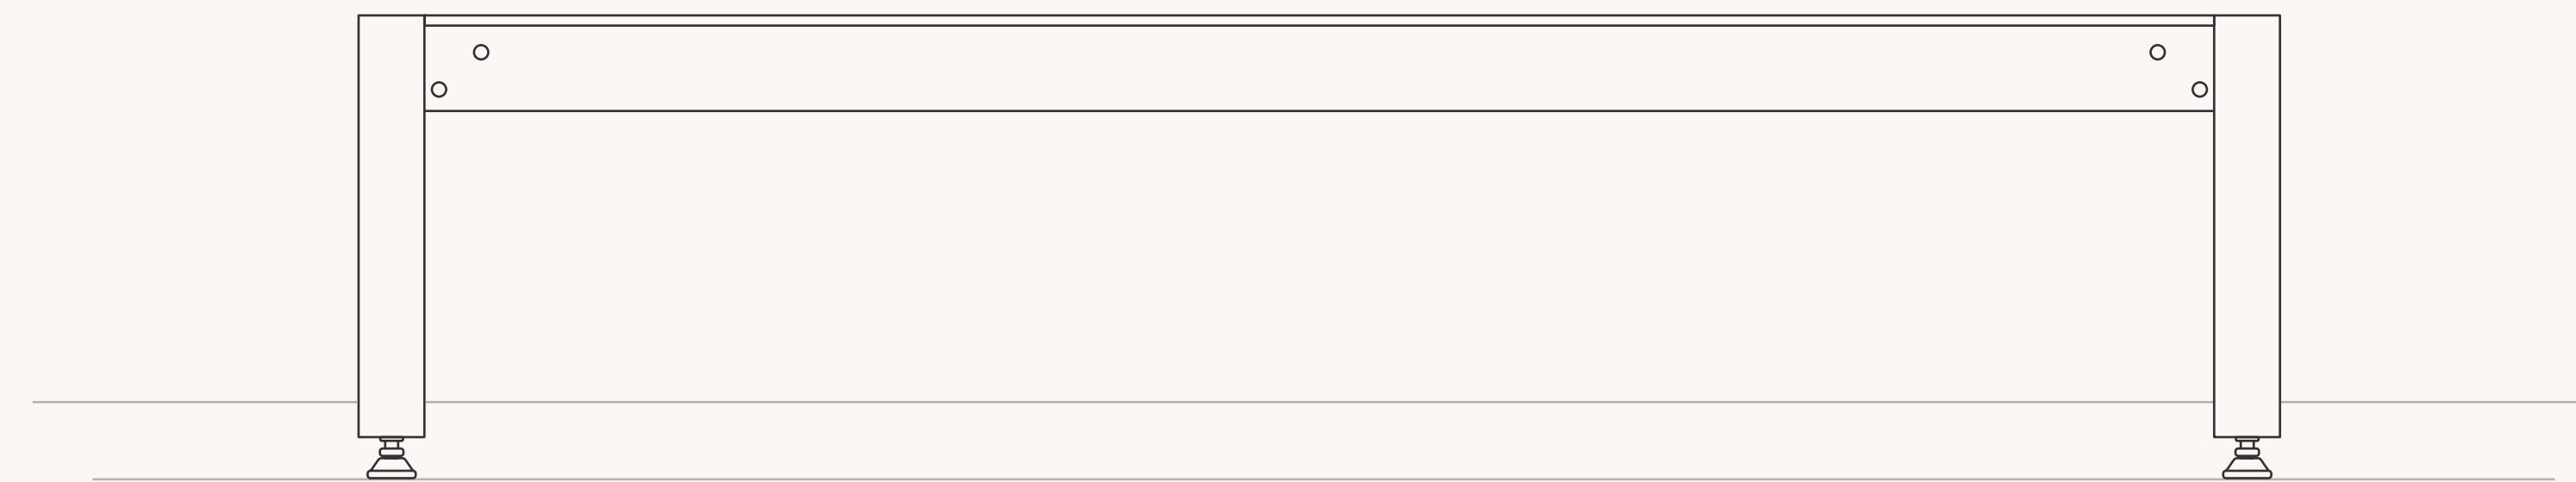

FLOYD

Step: 2


Adding the Units

FLOYD

Step: 2A

With a partner, begin by placing the first Module onto the side of your choice.

One block on the underside of the Module should be within the frame of the Base, while the other block will rest outside the Base.


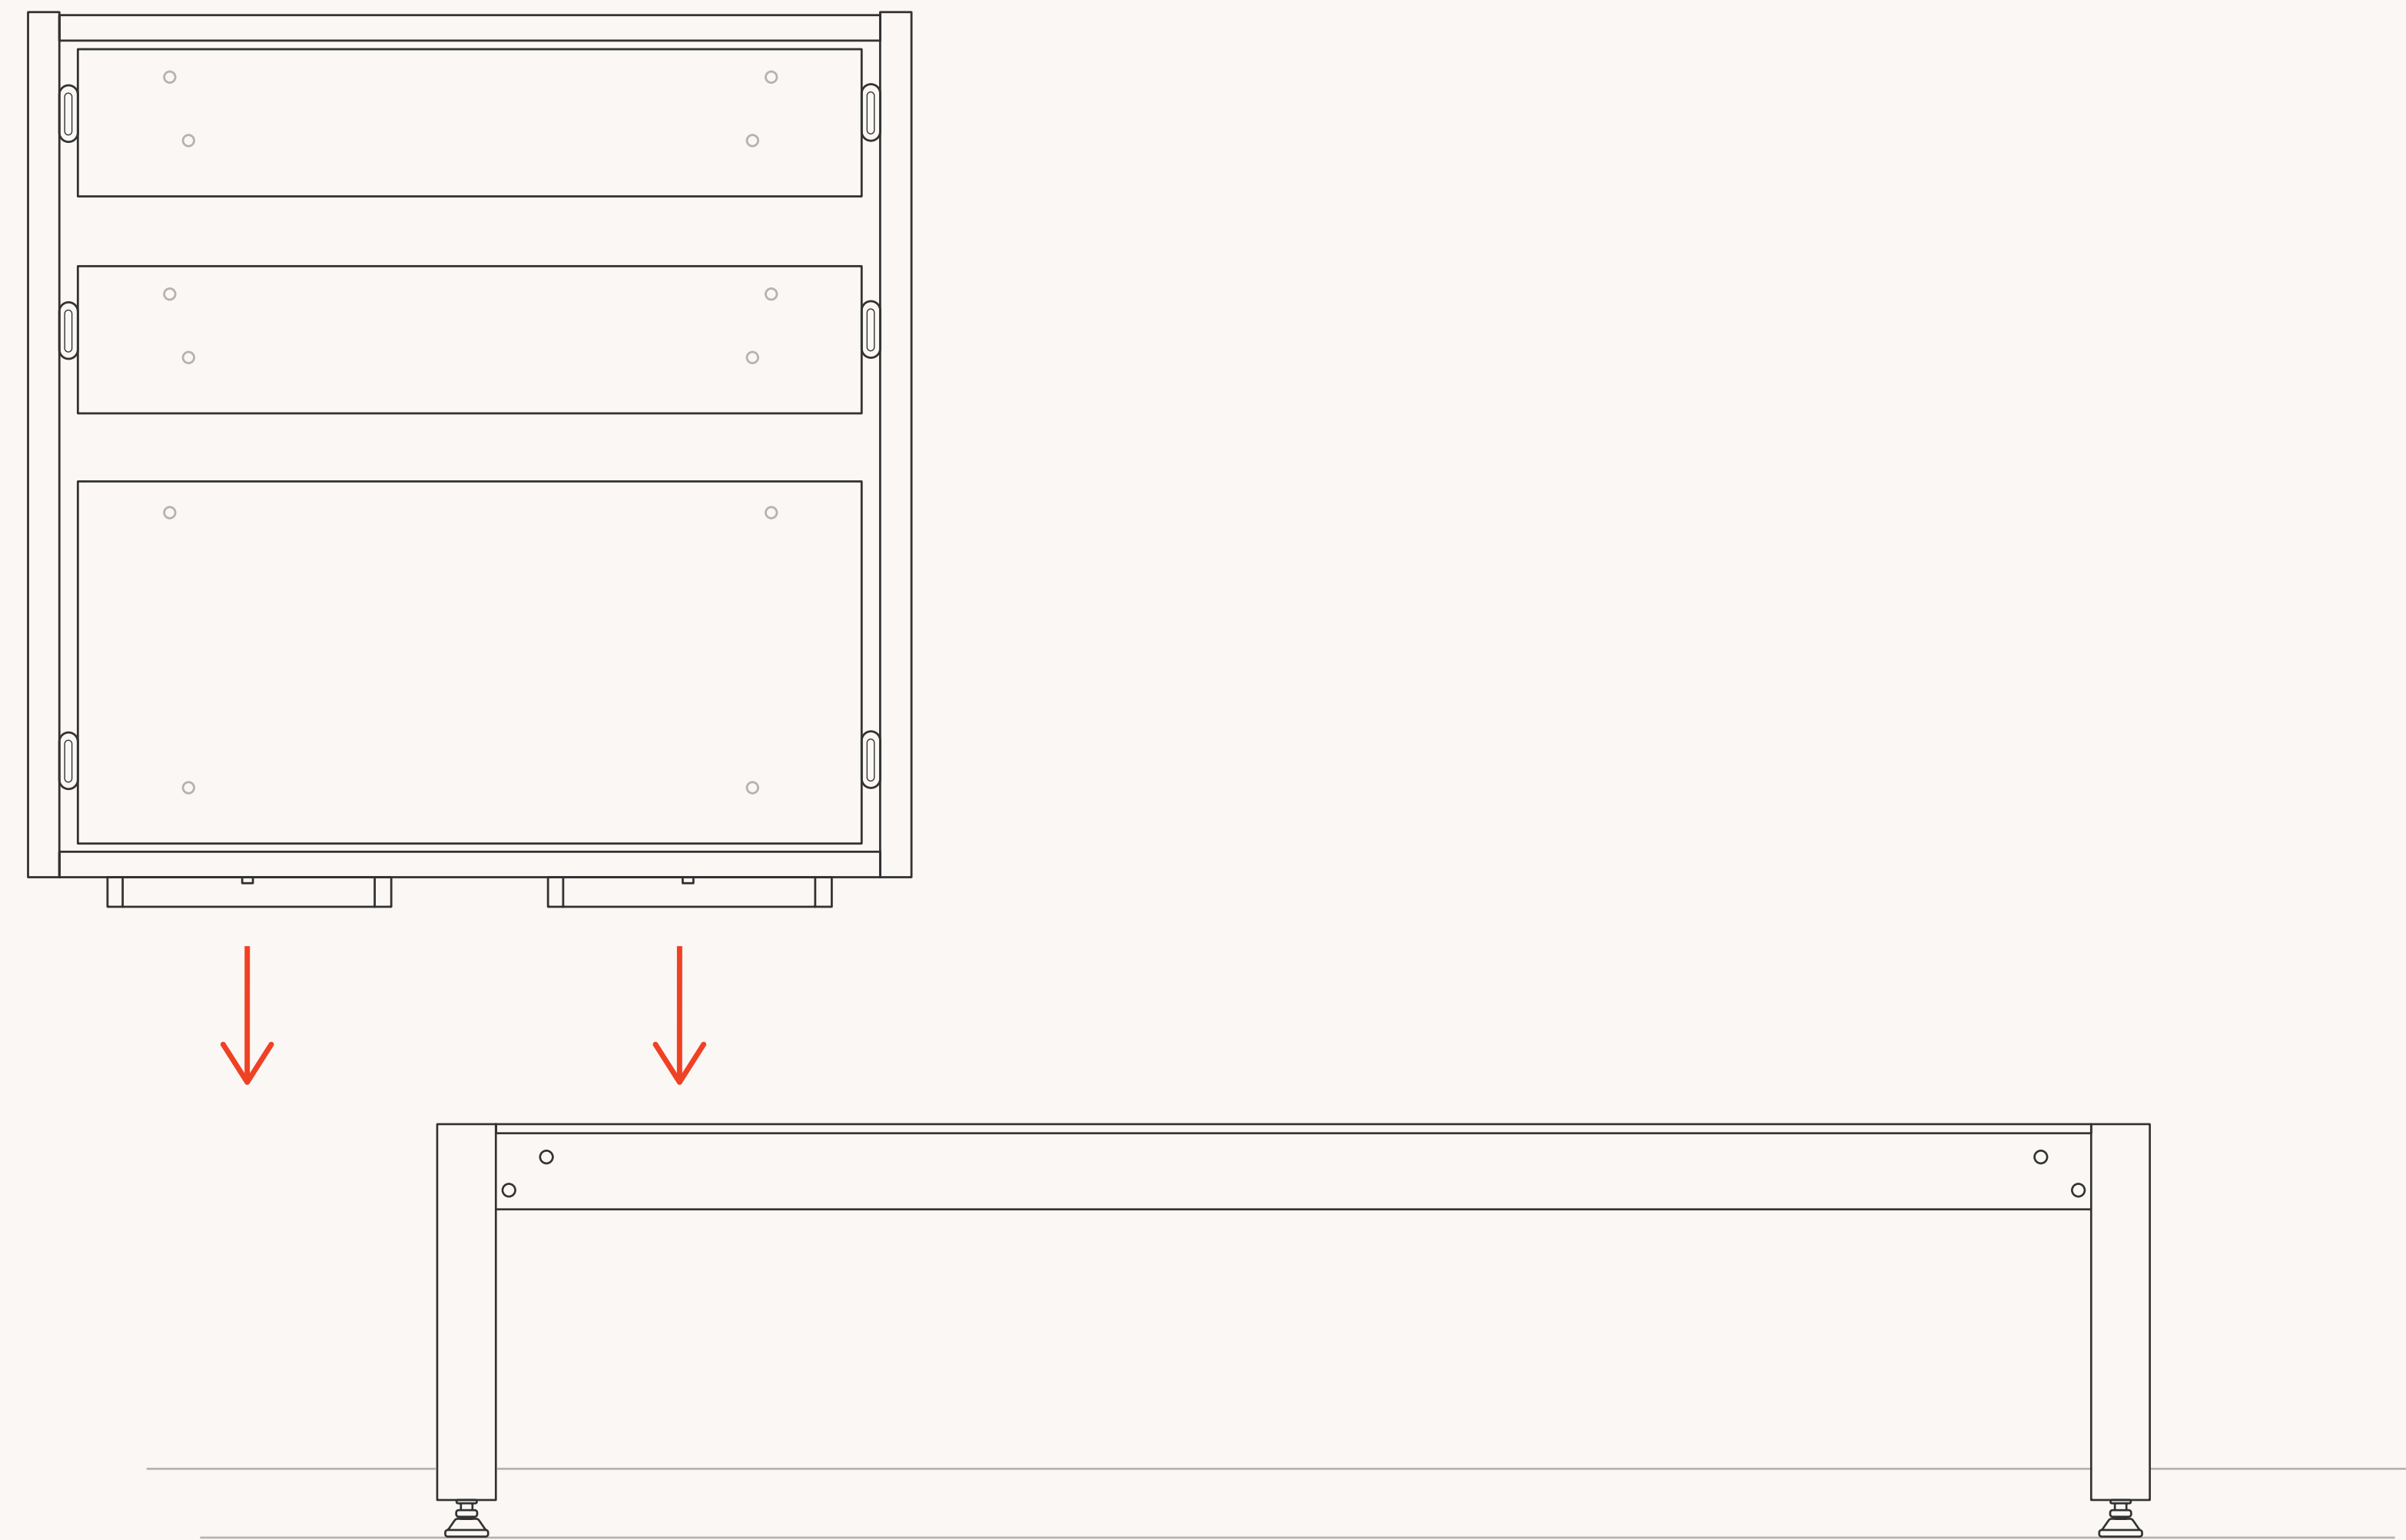


FLOYD

Step: 2B

Ensure that one of the blocks located on the underside of the Module is aligned squarely between the Base Aprons.



Slide the Module back and to the left until it stops.

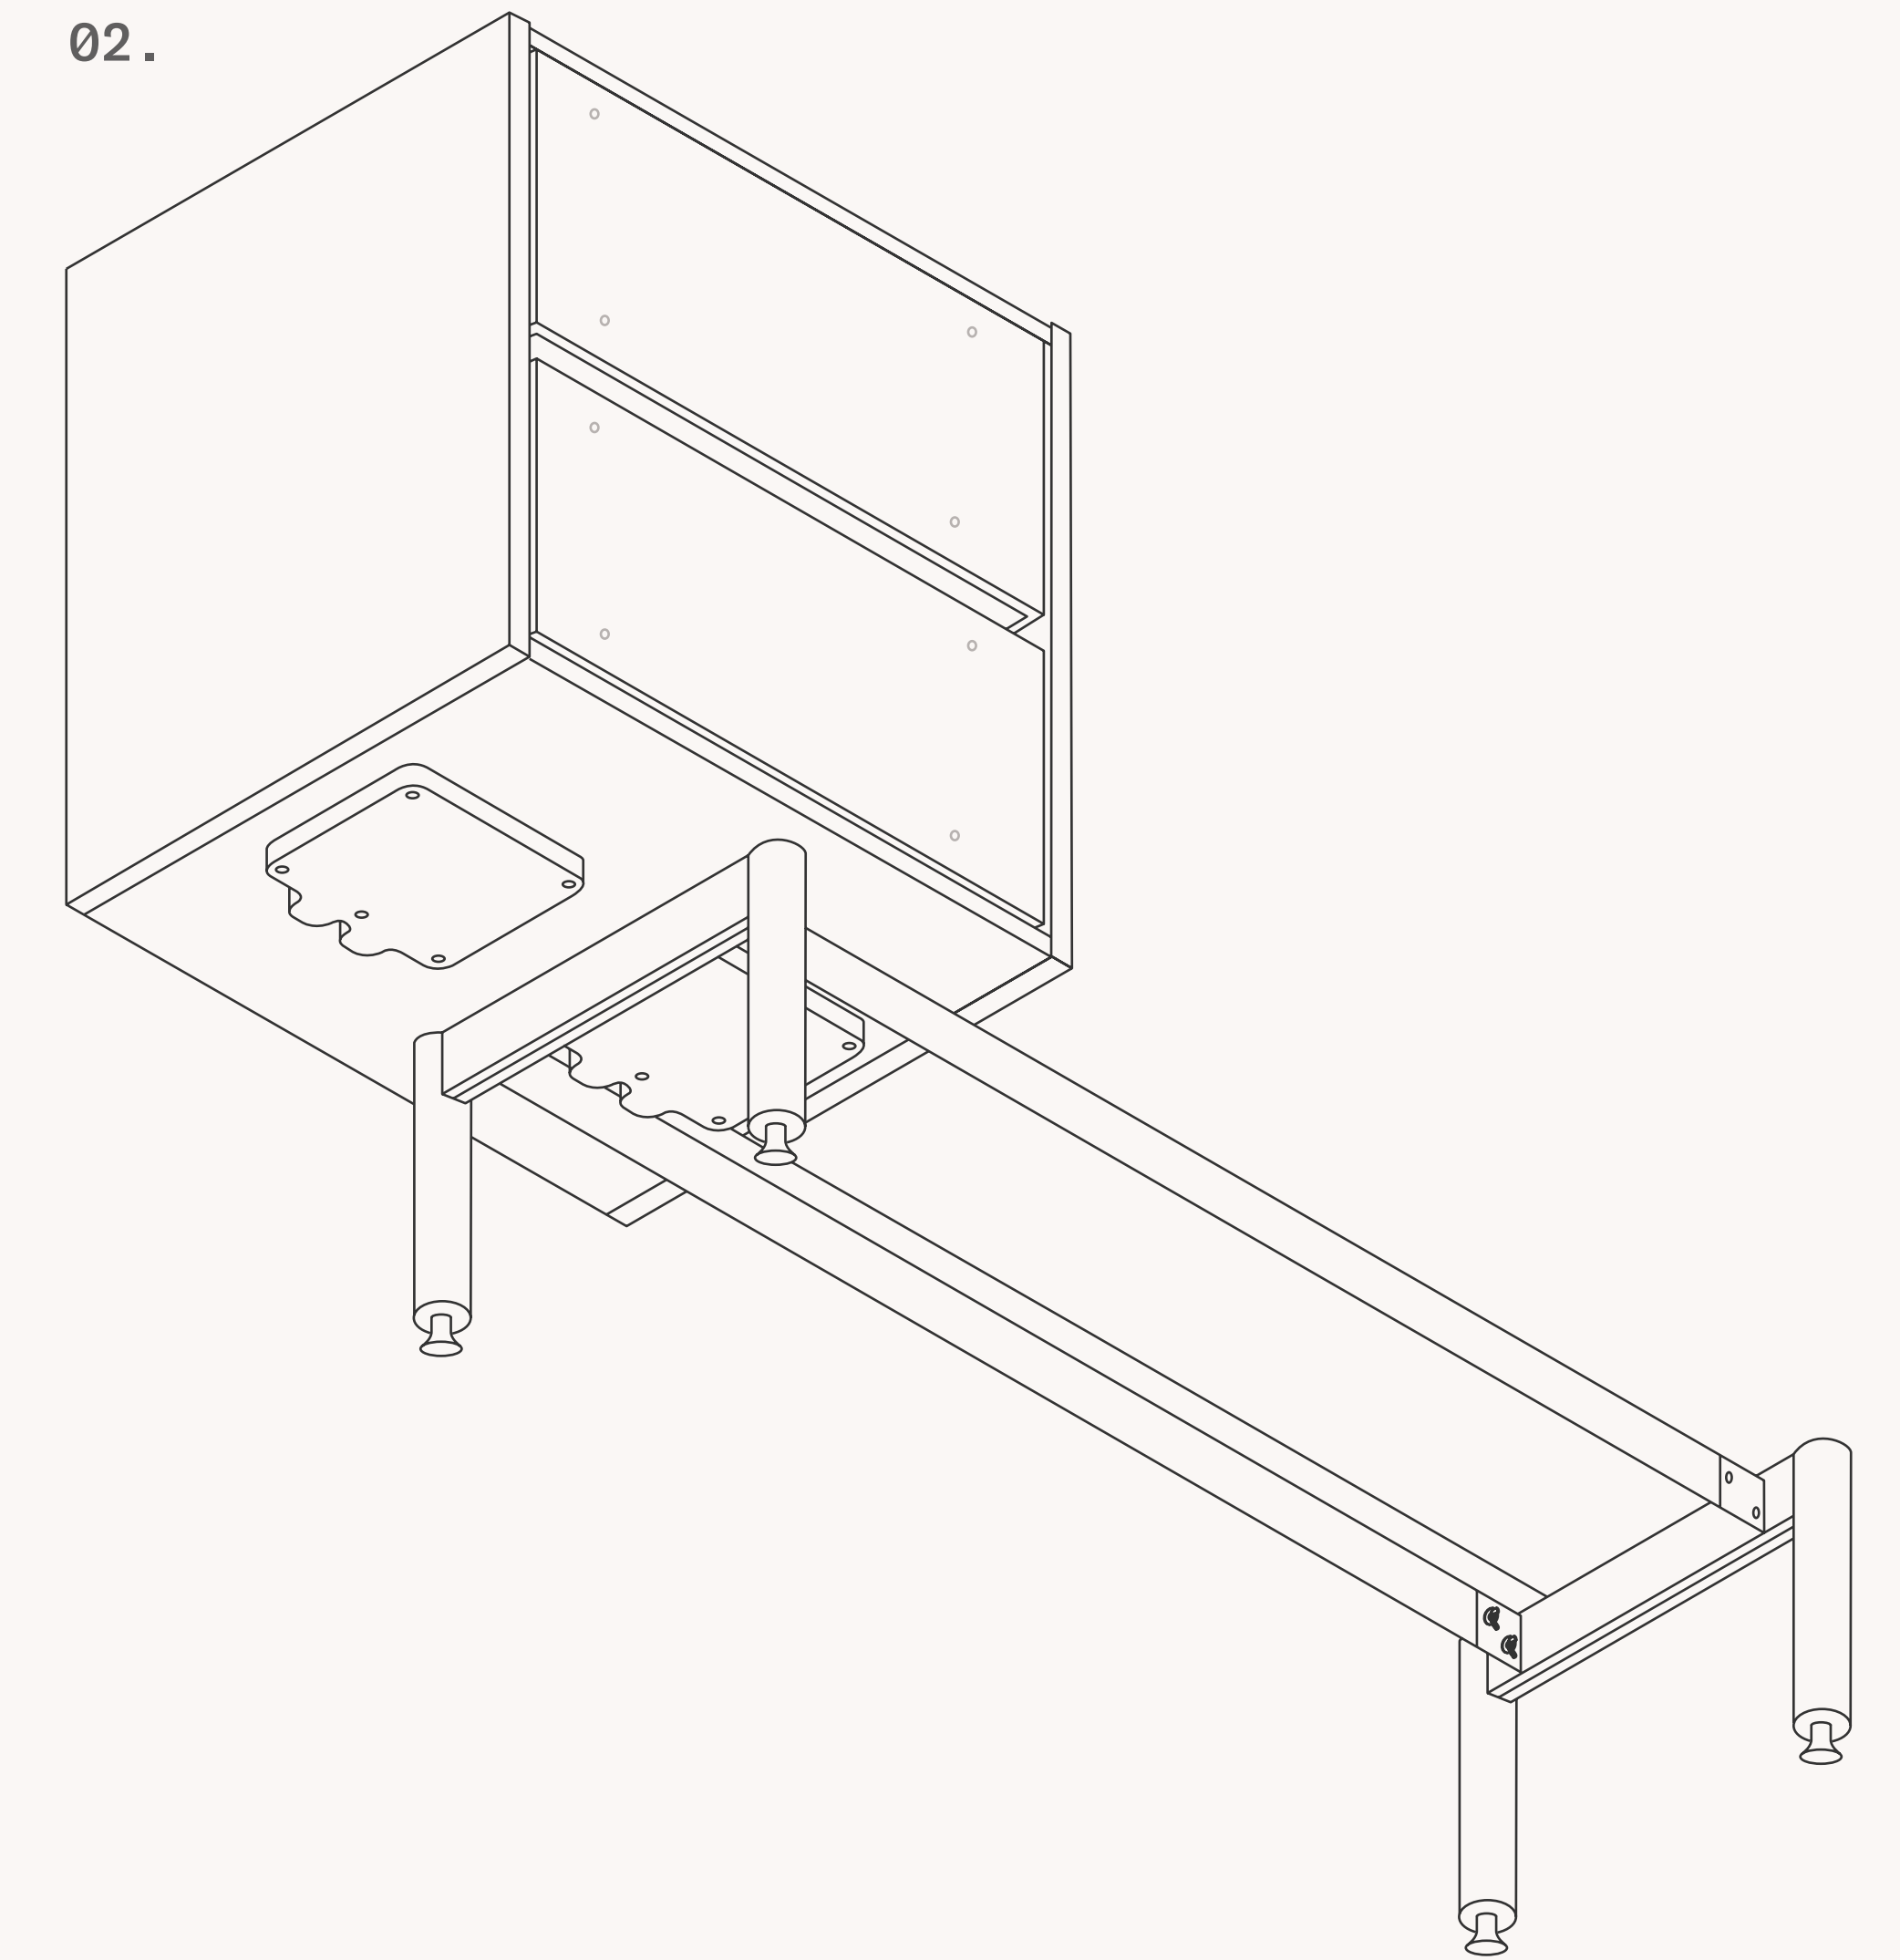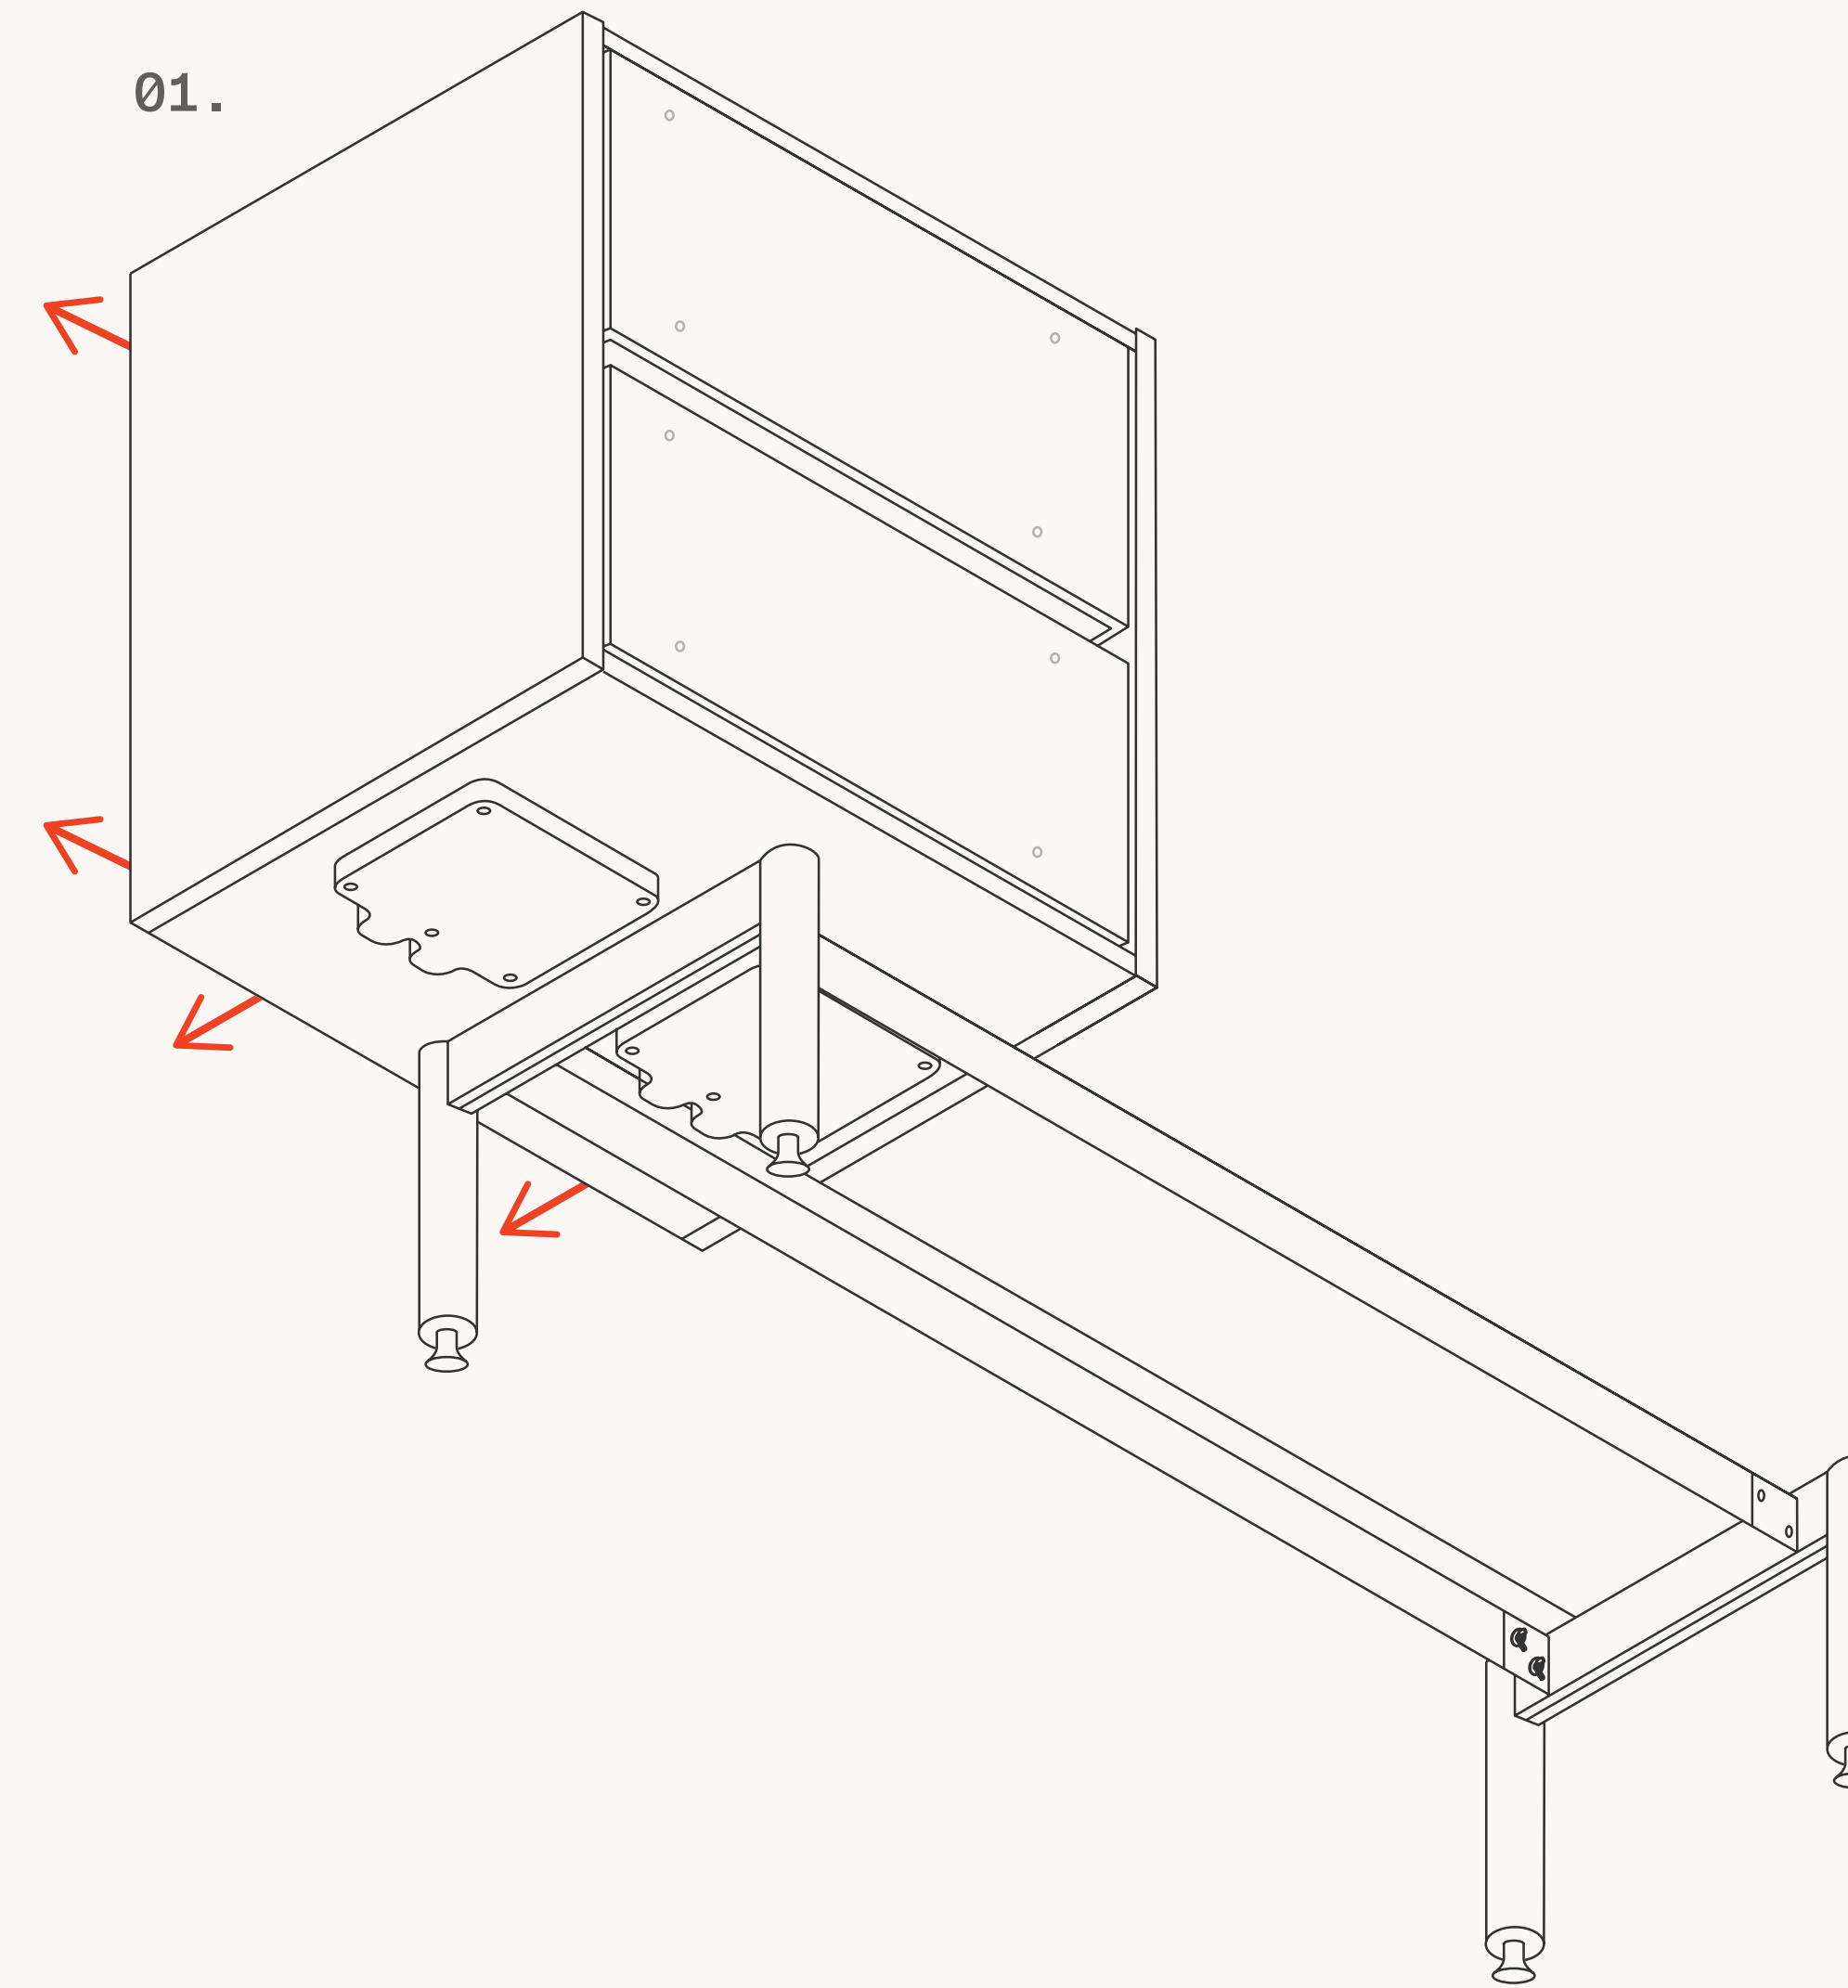

FLOYD

Step: 2C

Repeat Steps 2A-B to install the next Unit.

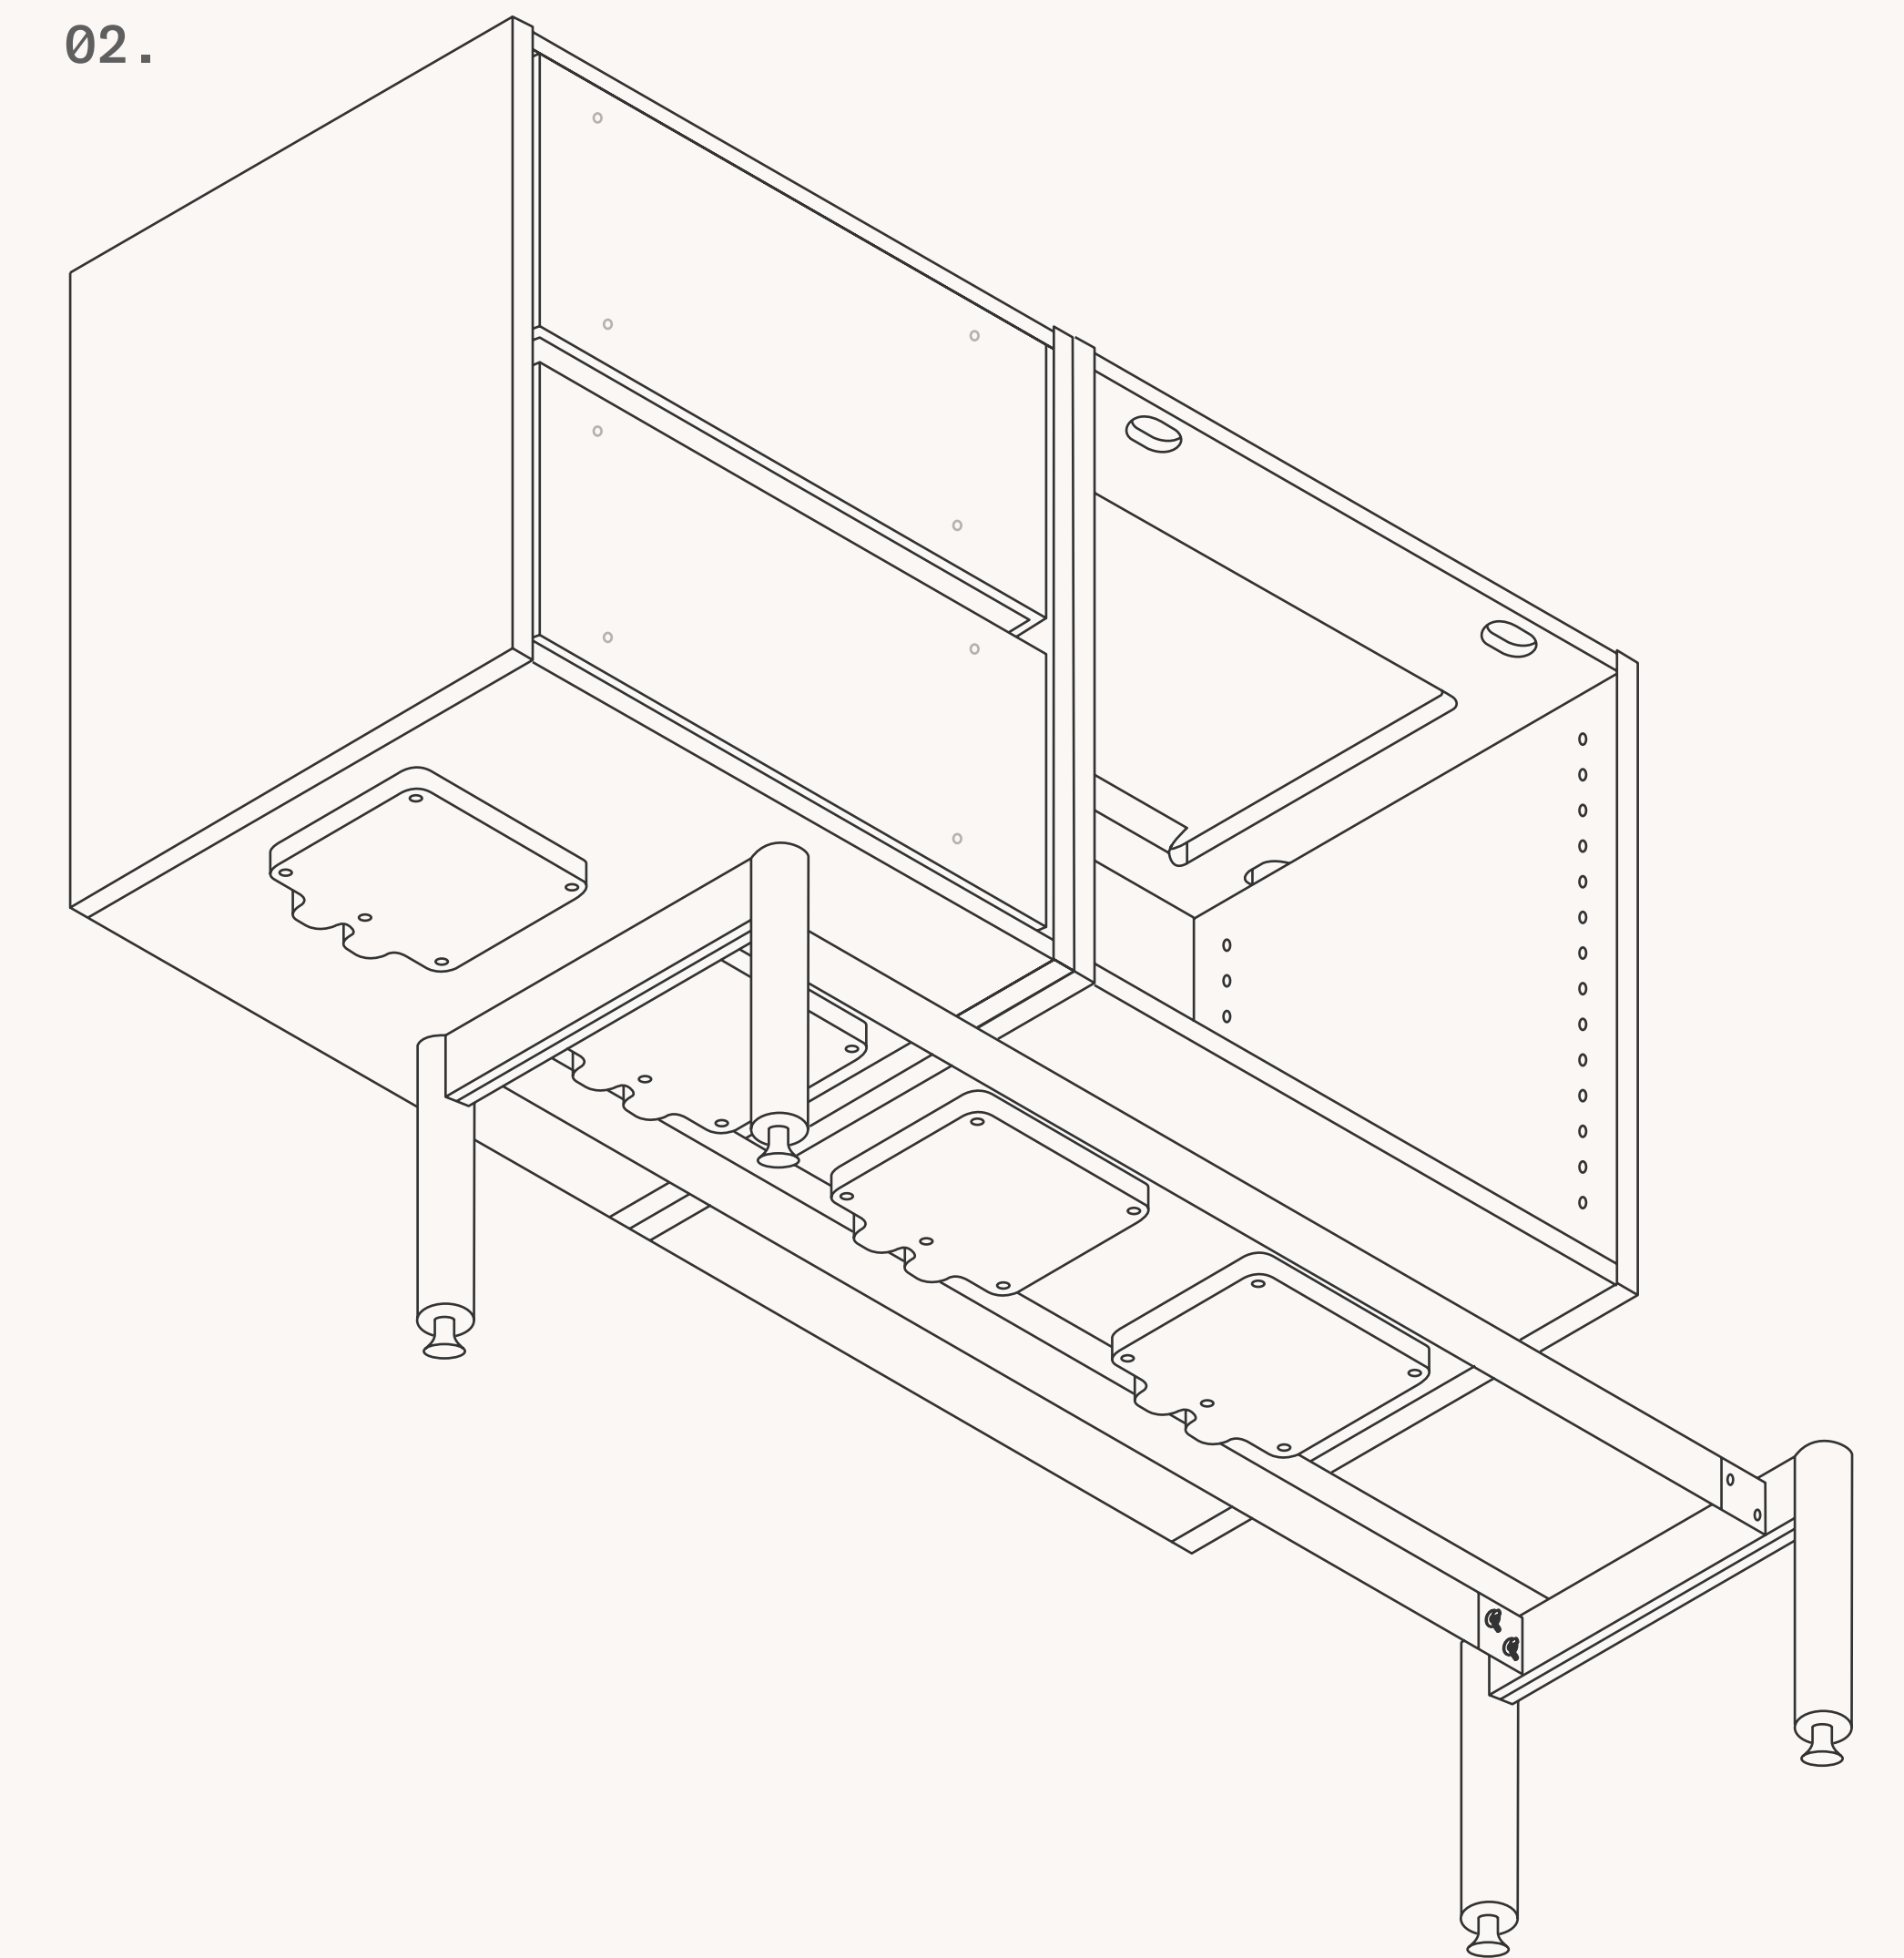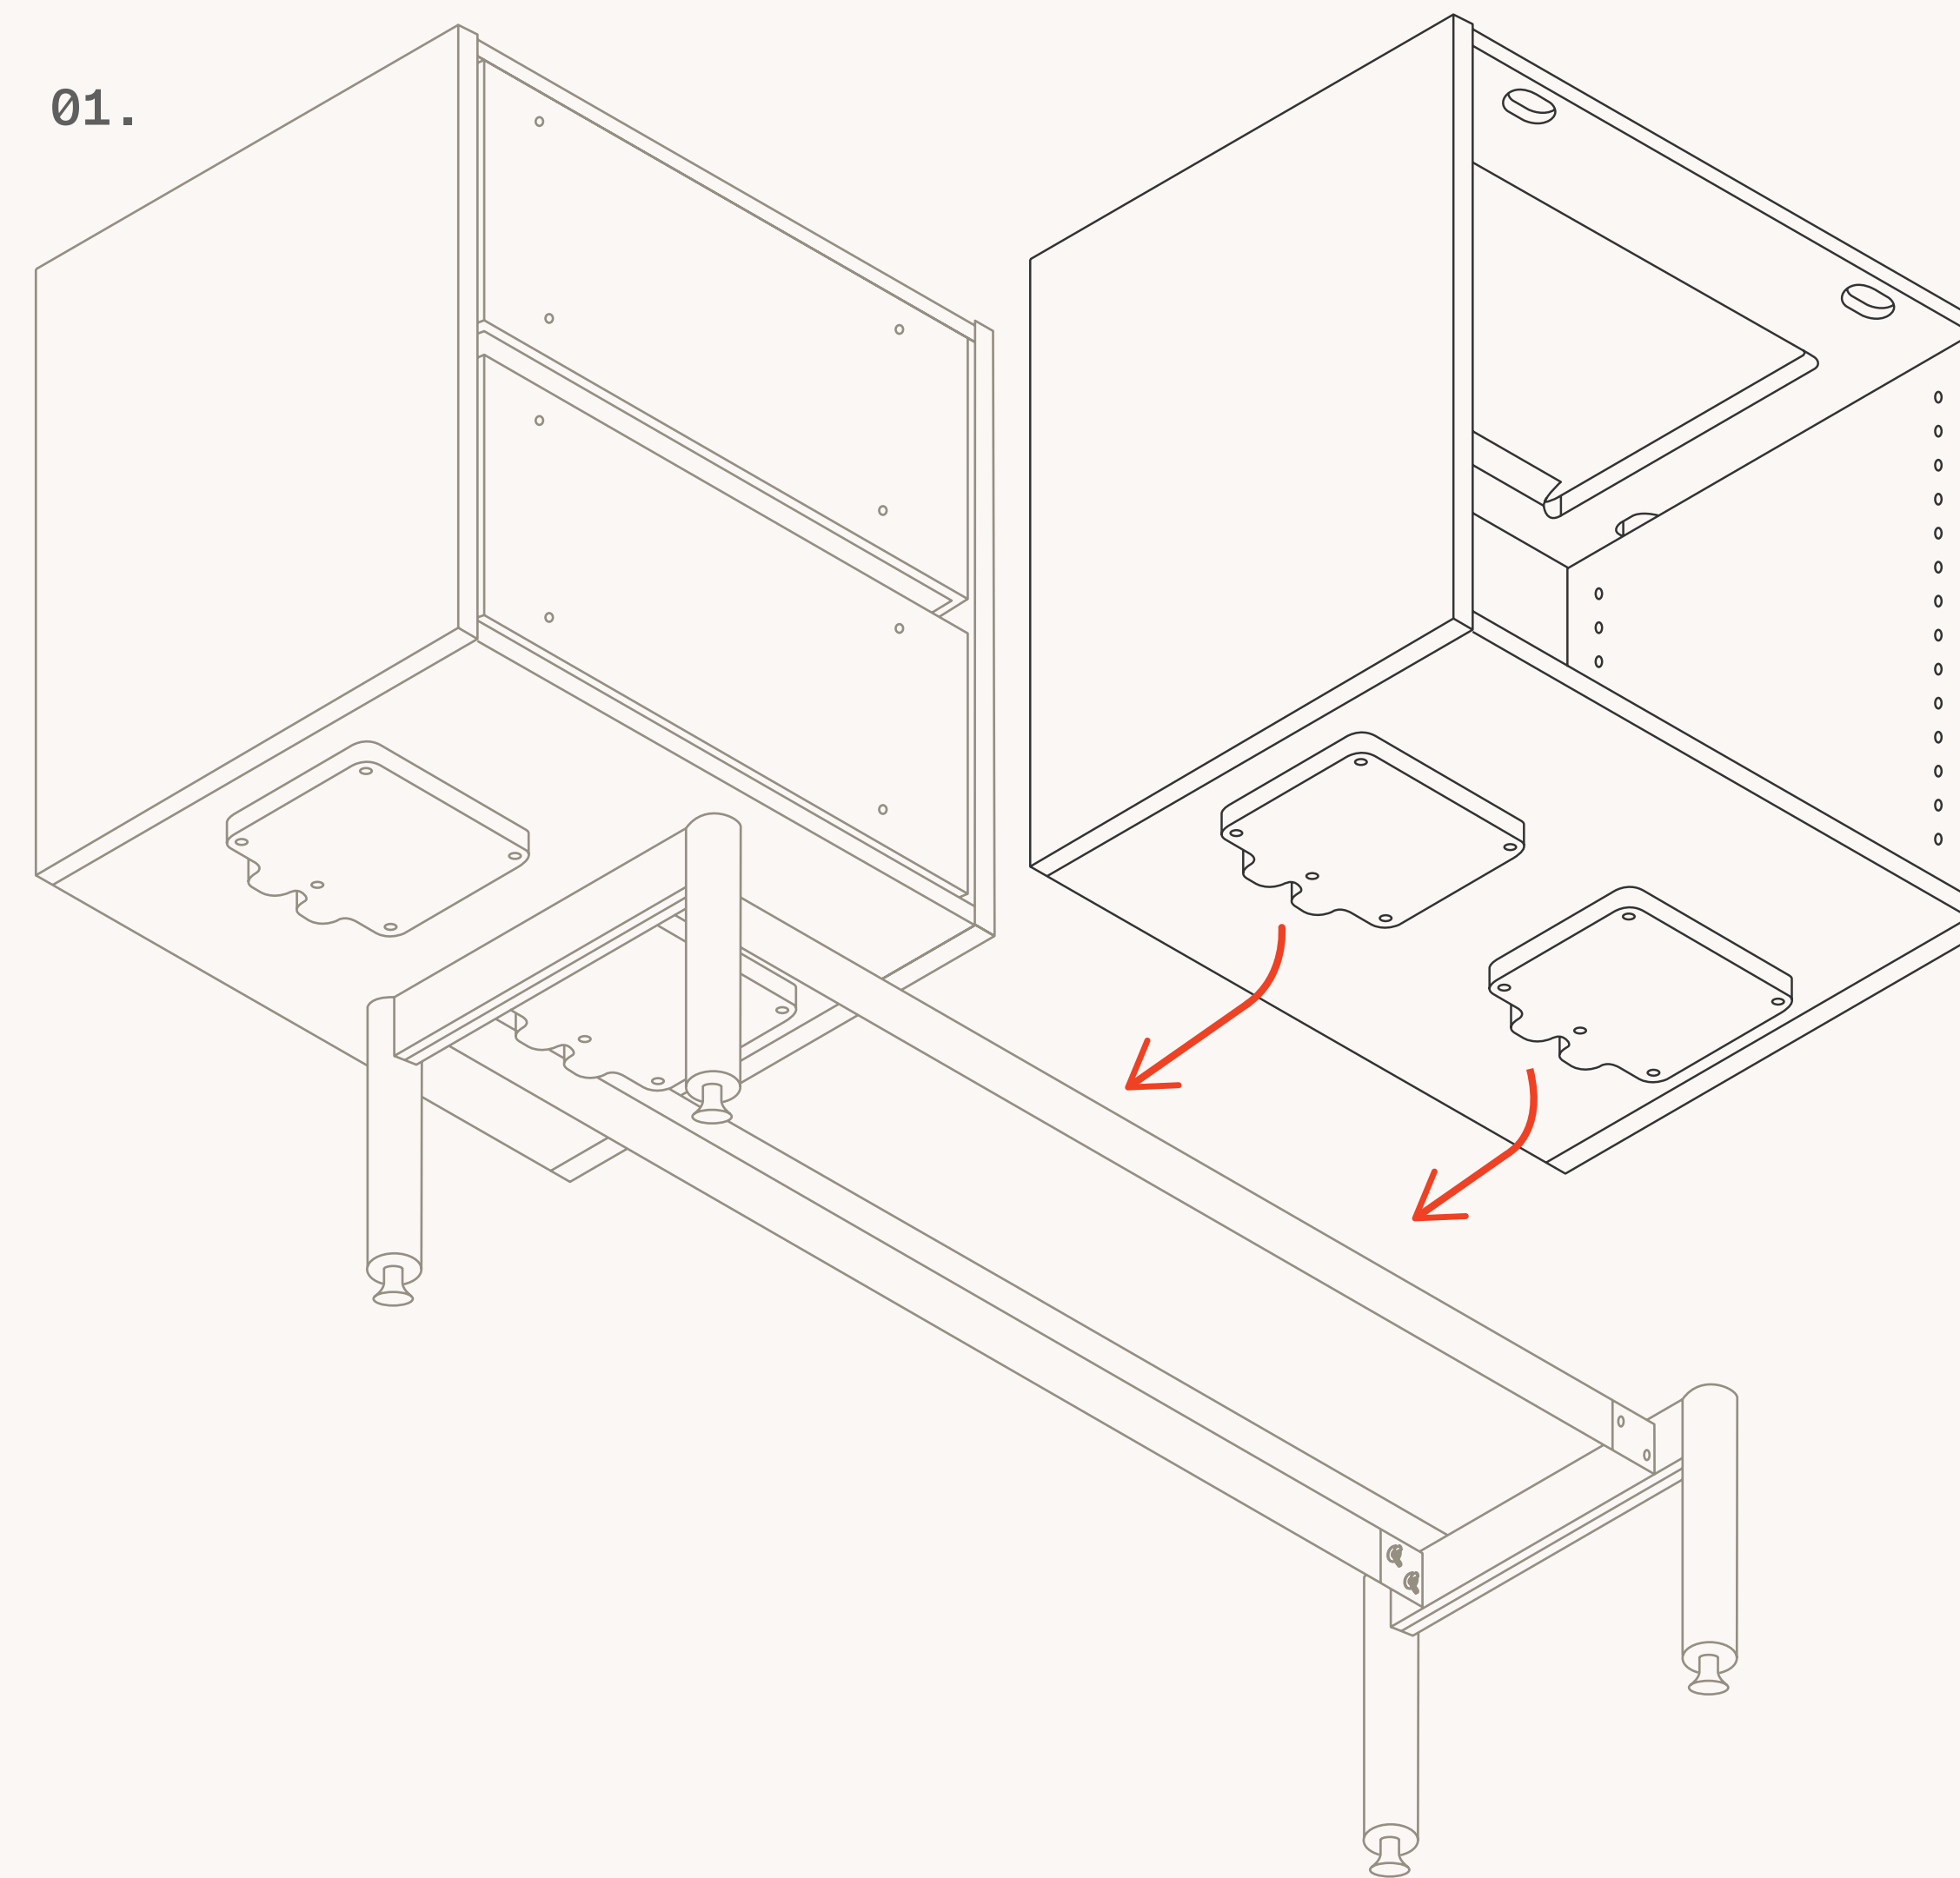


FLOYD

Step: 2D

After aligning the first two Modules,
insert 6 Bolts through the openings
in the Base Aprons as shown.


Loosely tighten each by hand.

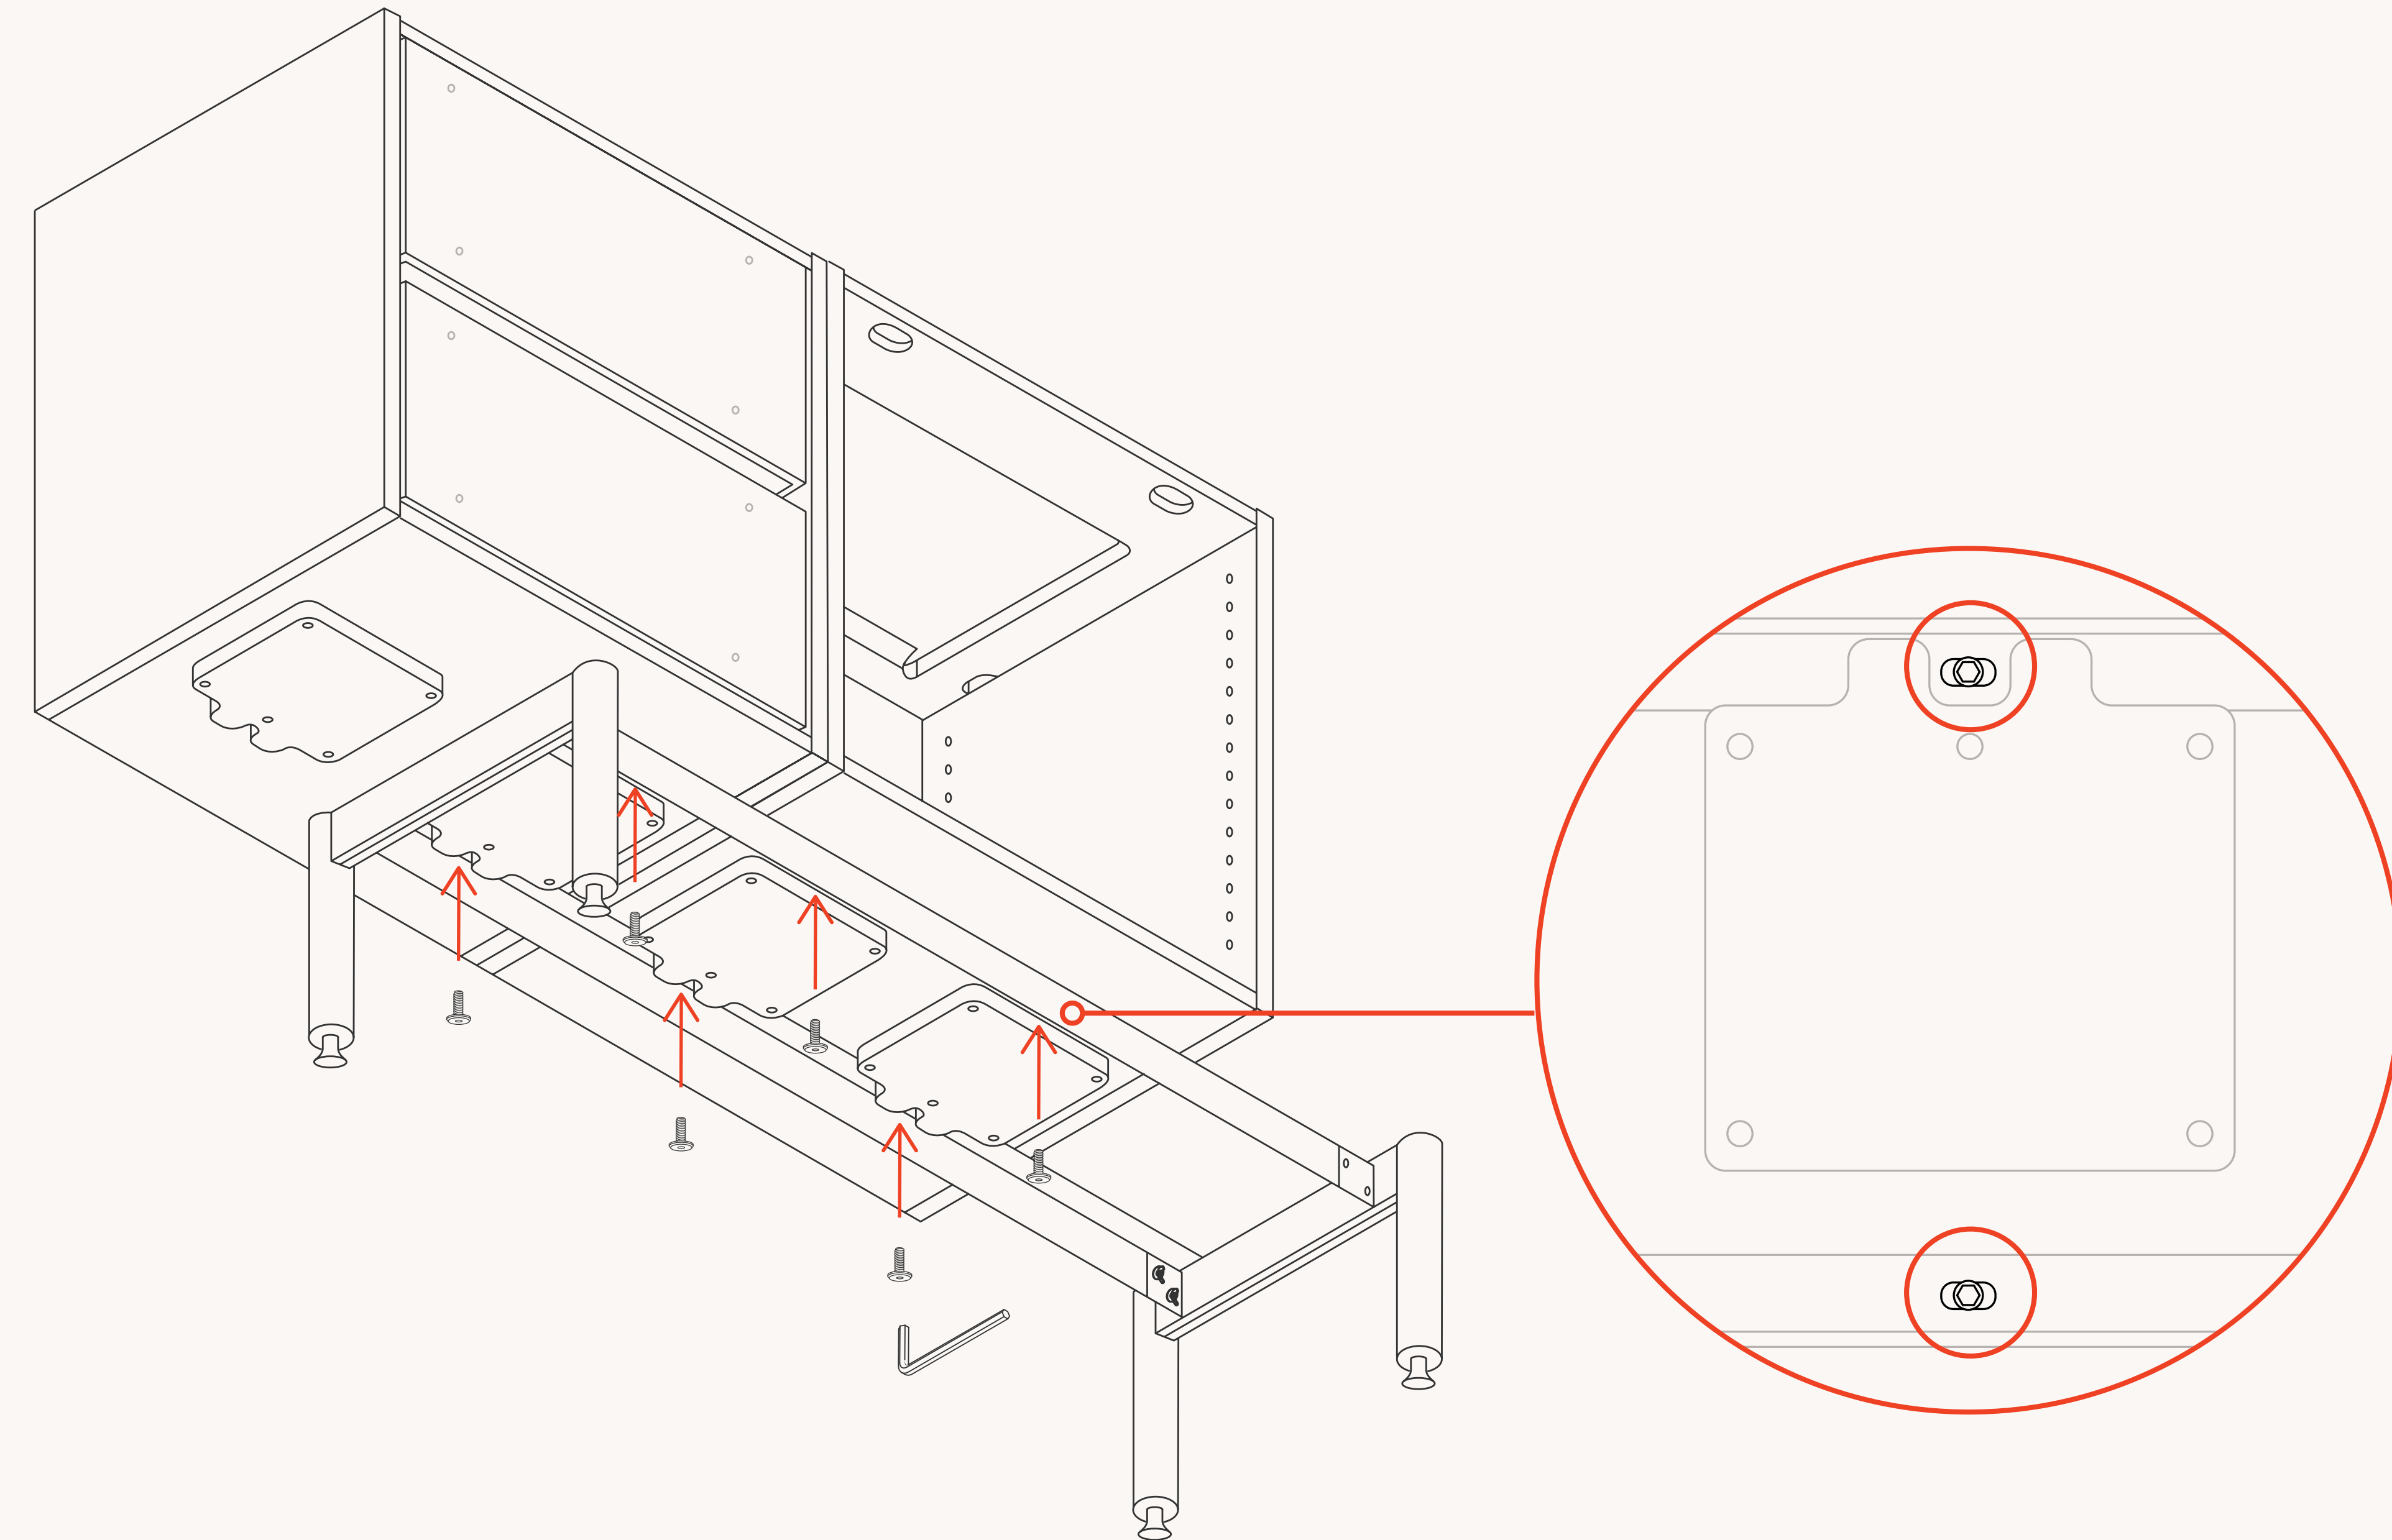

Step: 2E

Once the Units are in place and aligned, slide 2 U-Brackets into the slots at top of each Unit.

Push both Brackets down firmly to secure the Units to one another.

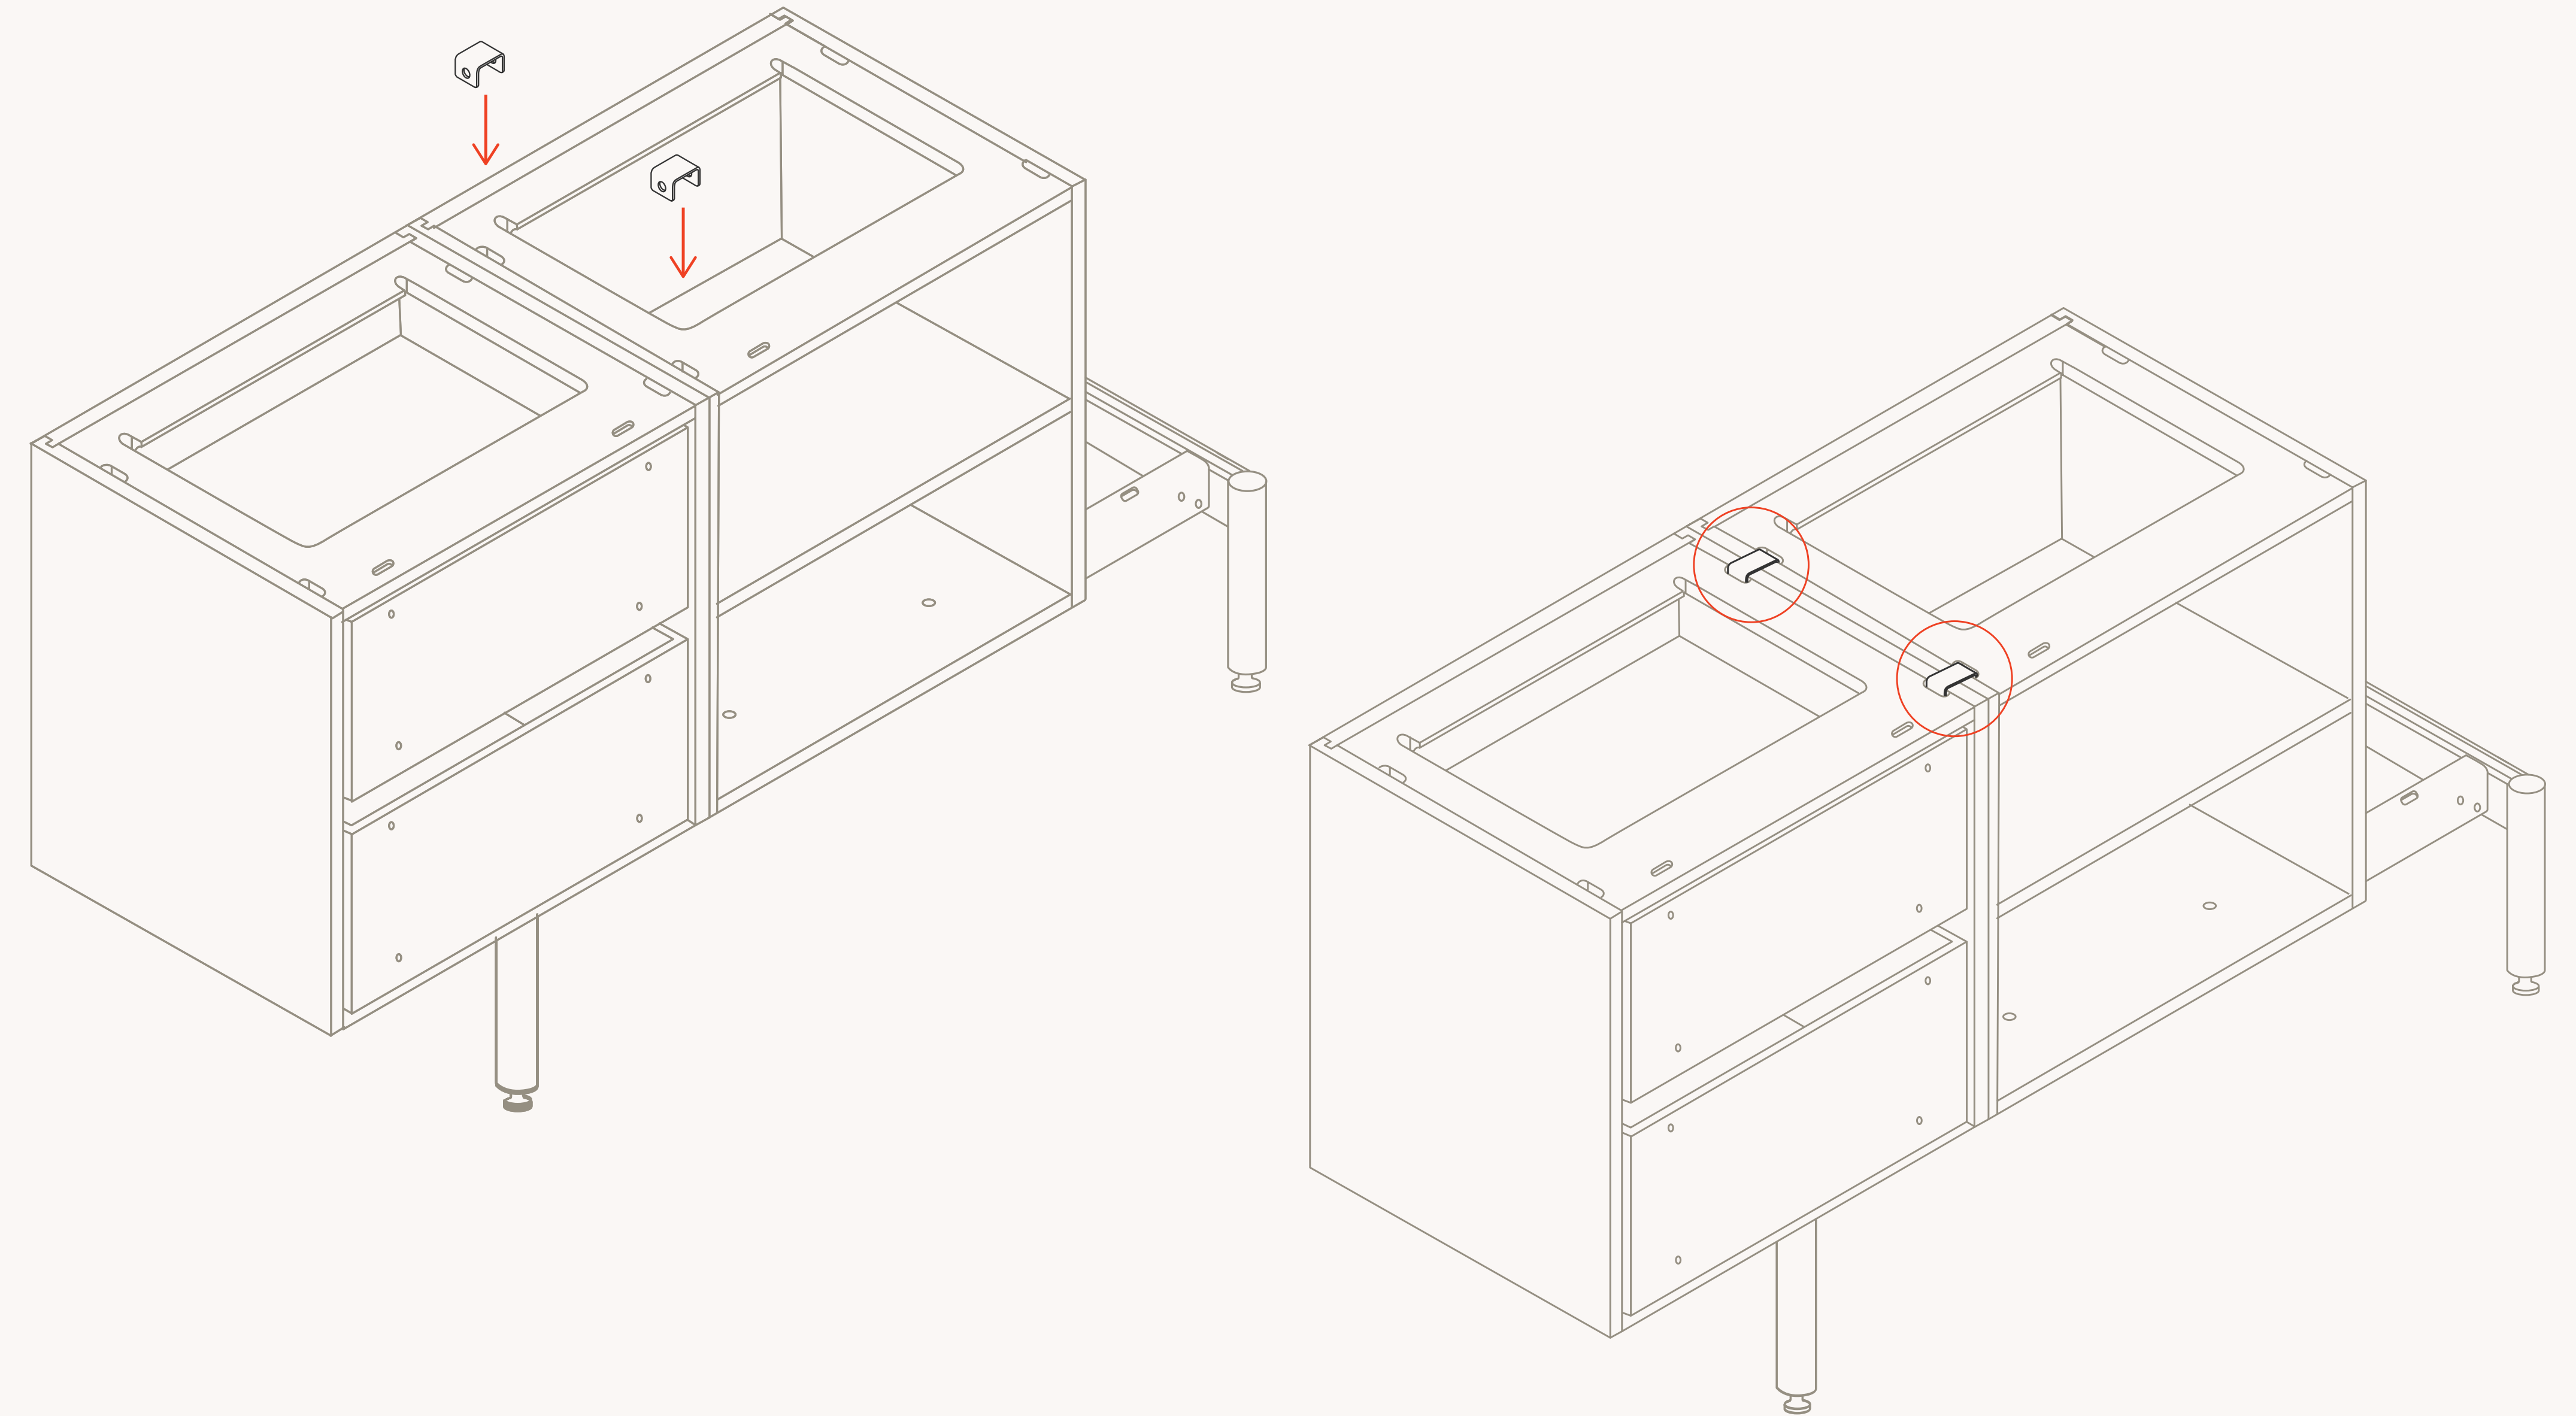

FLOYD


Step: 2F

Repeat Steps 2A-B to install the third and final Unit.


Once all 3 Modules are in place, insert and tighten the final 2 Bolts into the third Module.

Then, fully tighten all Bolts with the provided Hex Tool.

01.

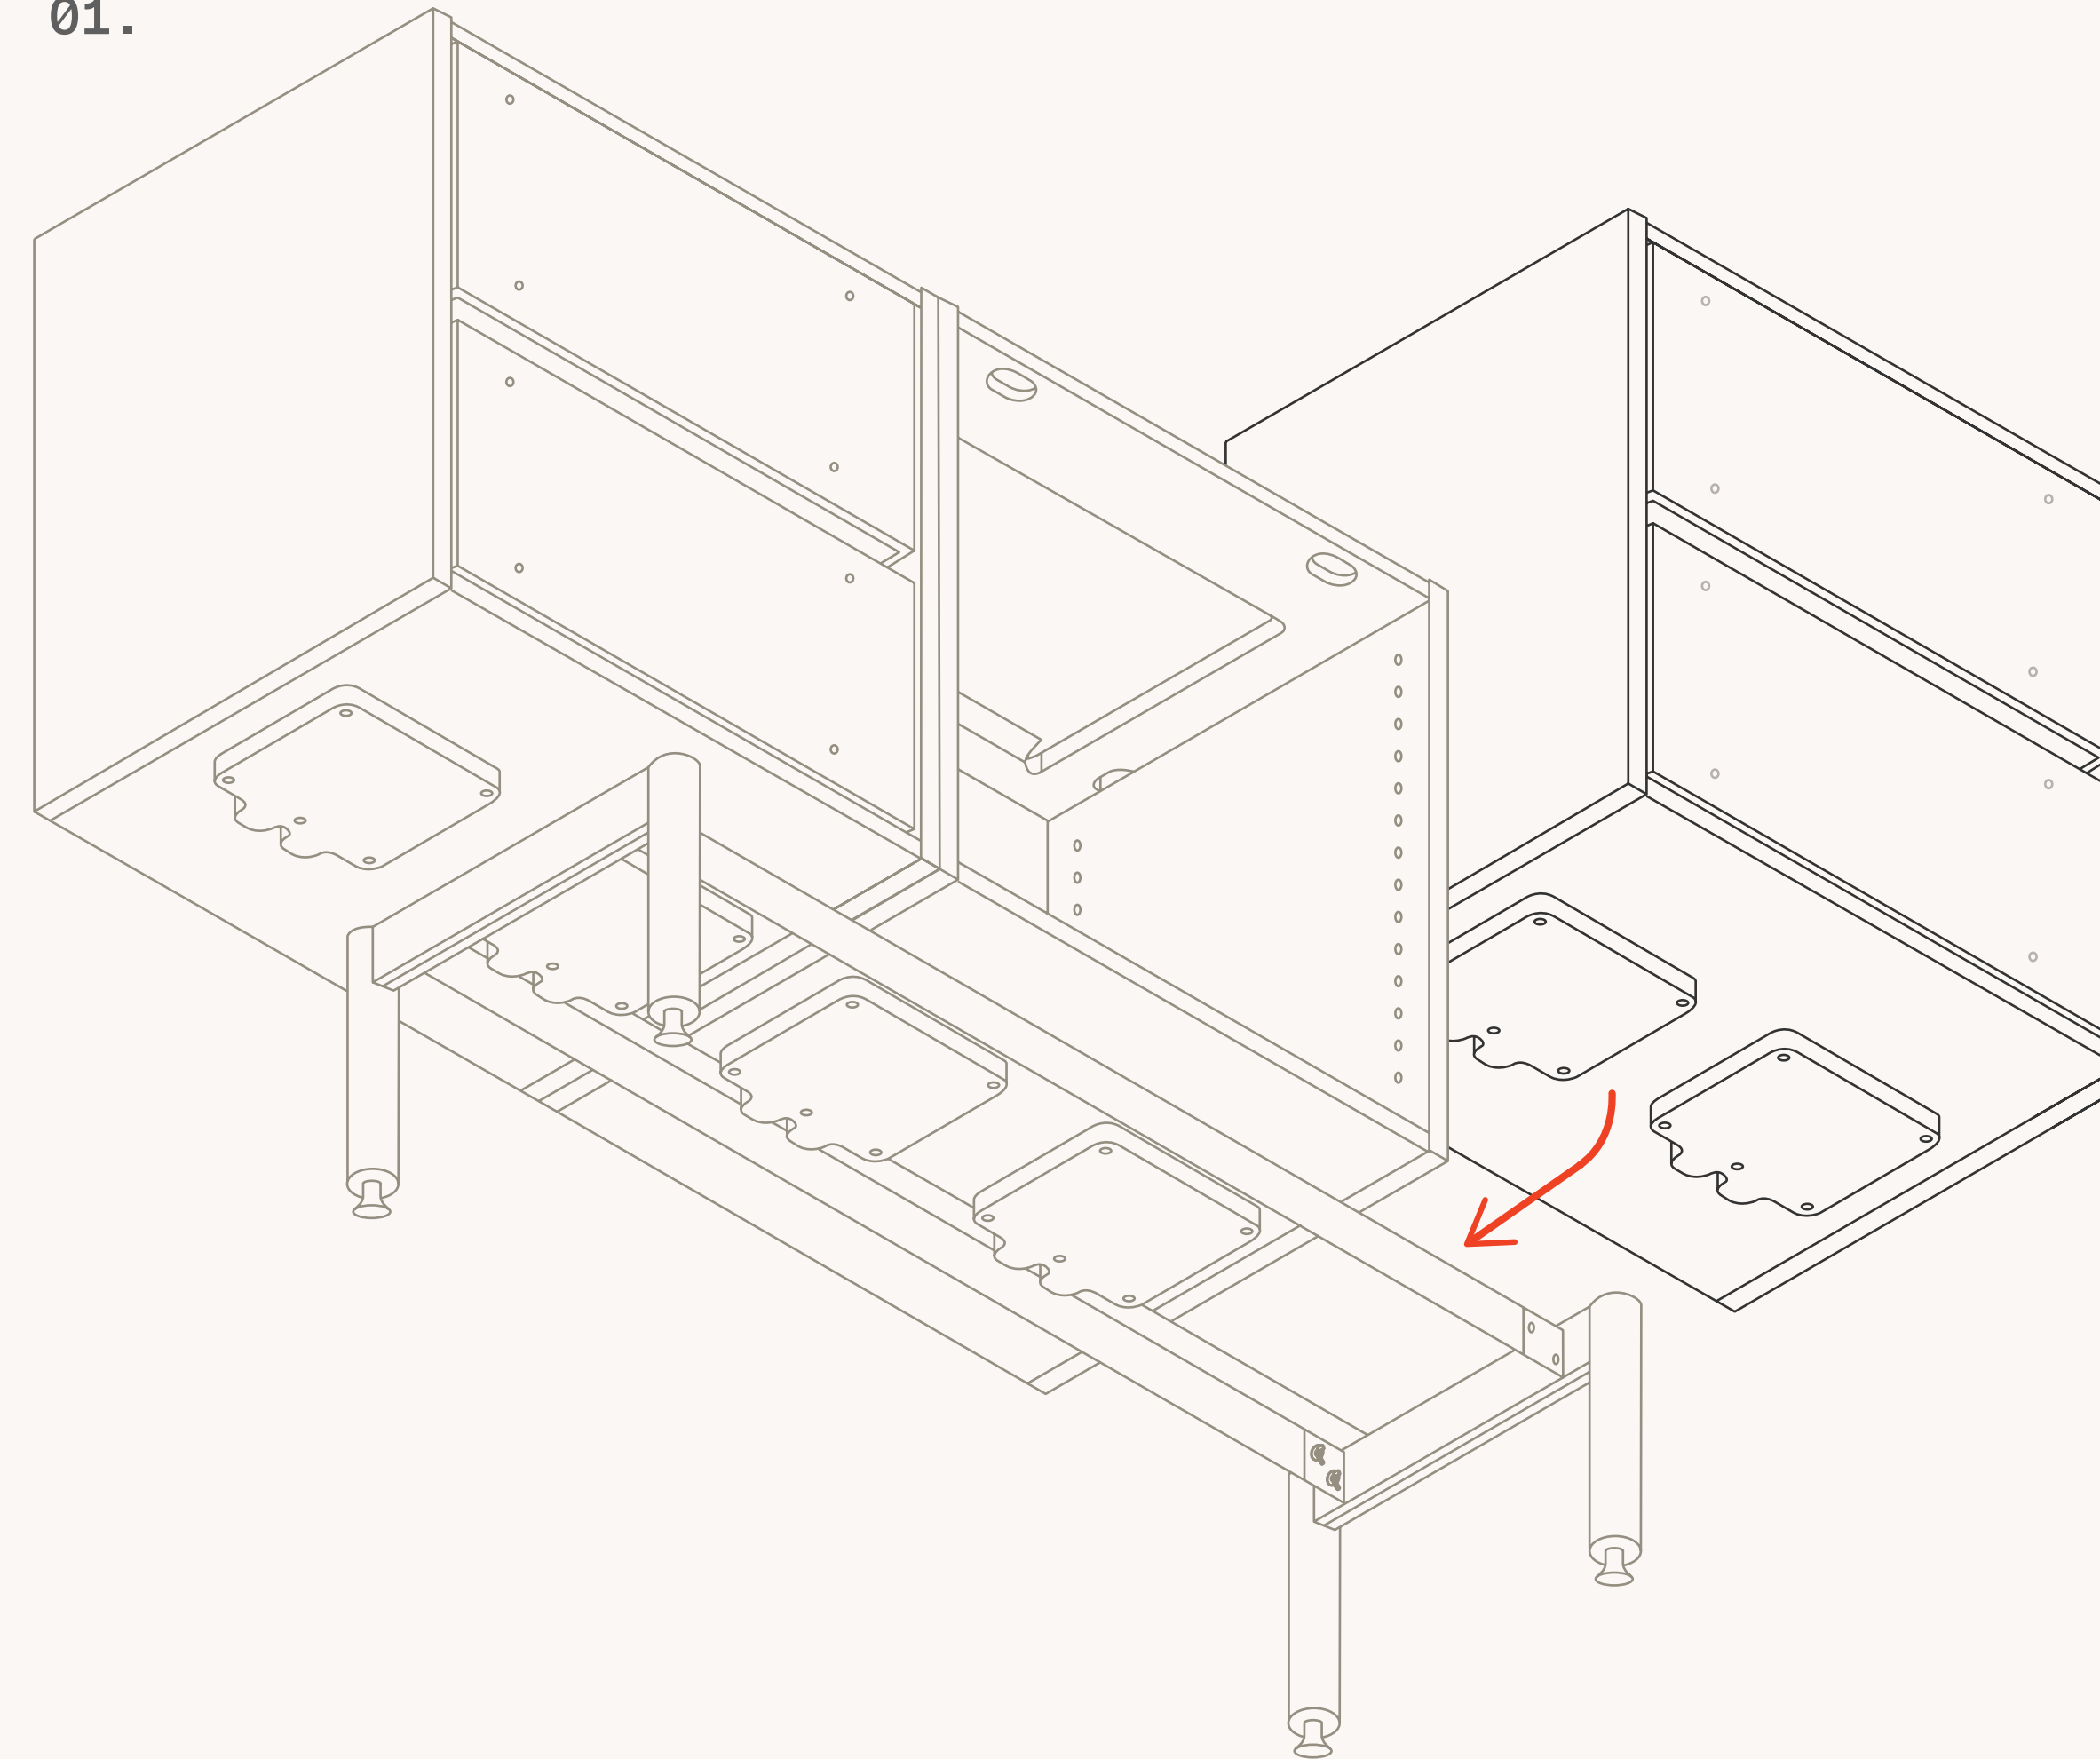


02.

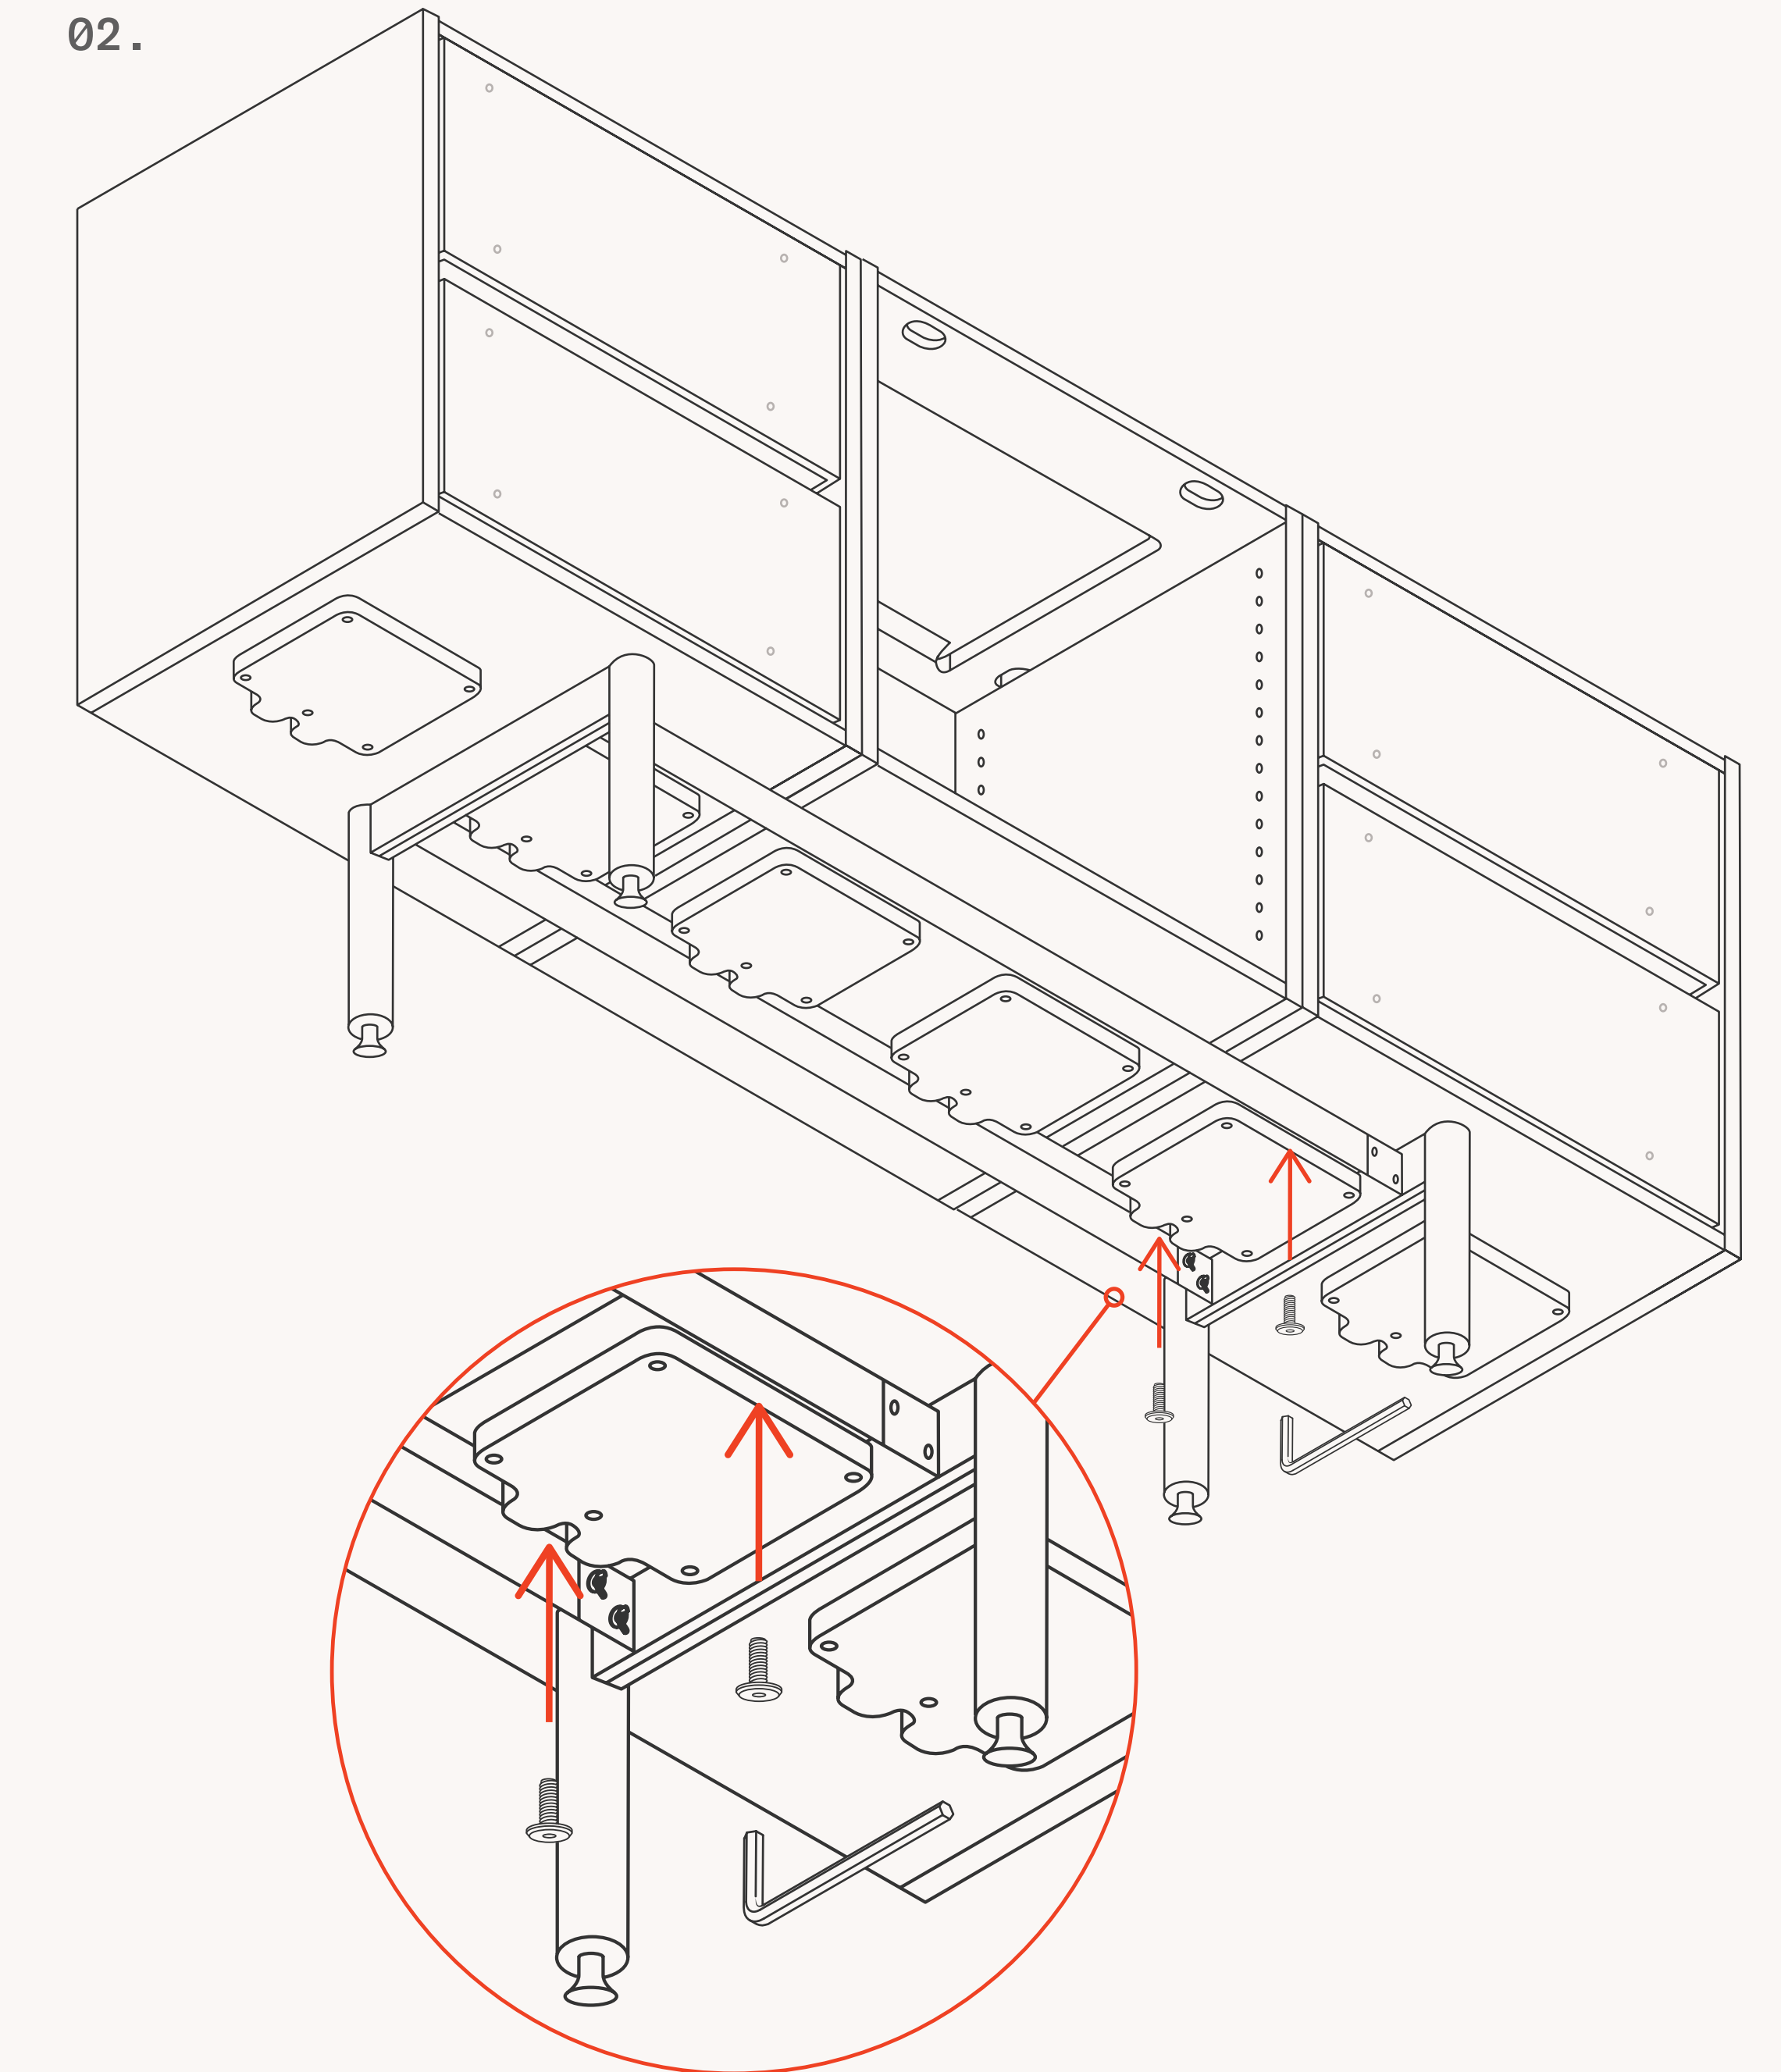

FLOYD

Step: 2G


With all 3 Units in place and aligned, install the final 2 U-Brackets by pushing firmly down.

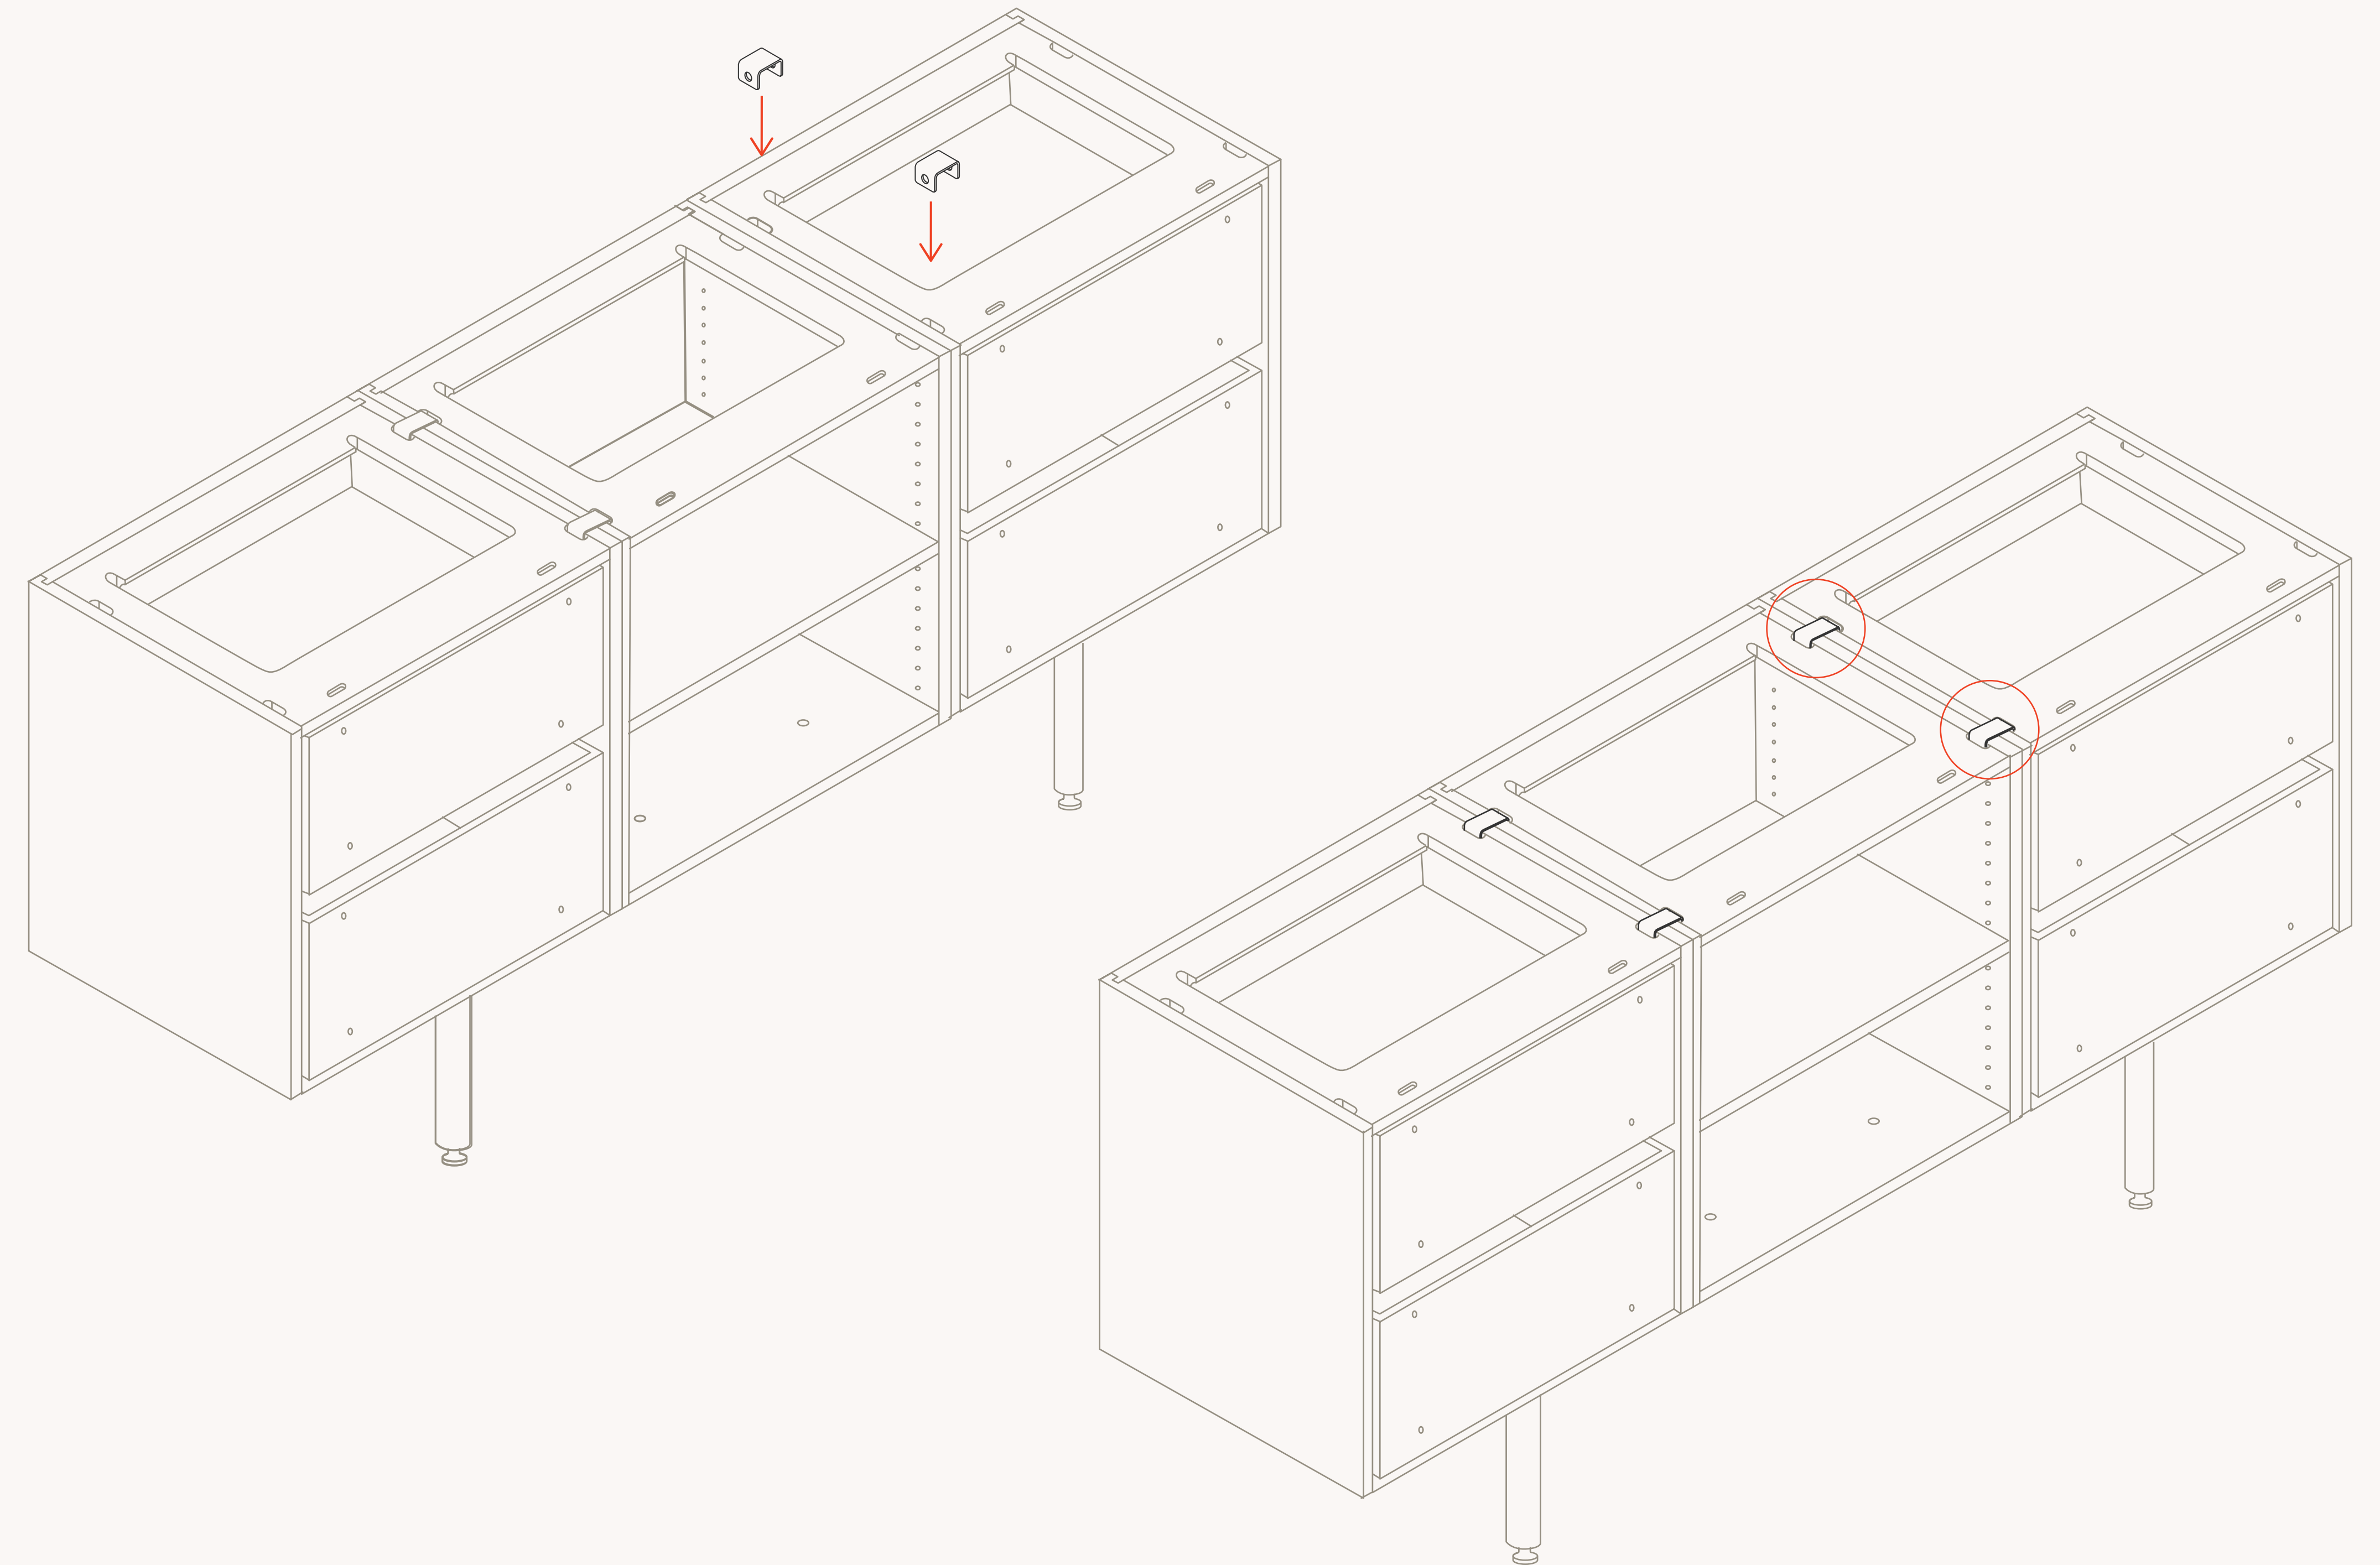

Step: 2H

Place the Top onto the The Dresser.

Ensure the angled metal cleat on its underside fits between the opening at top of the Units.

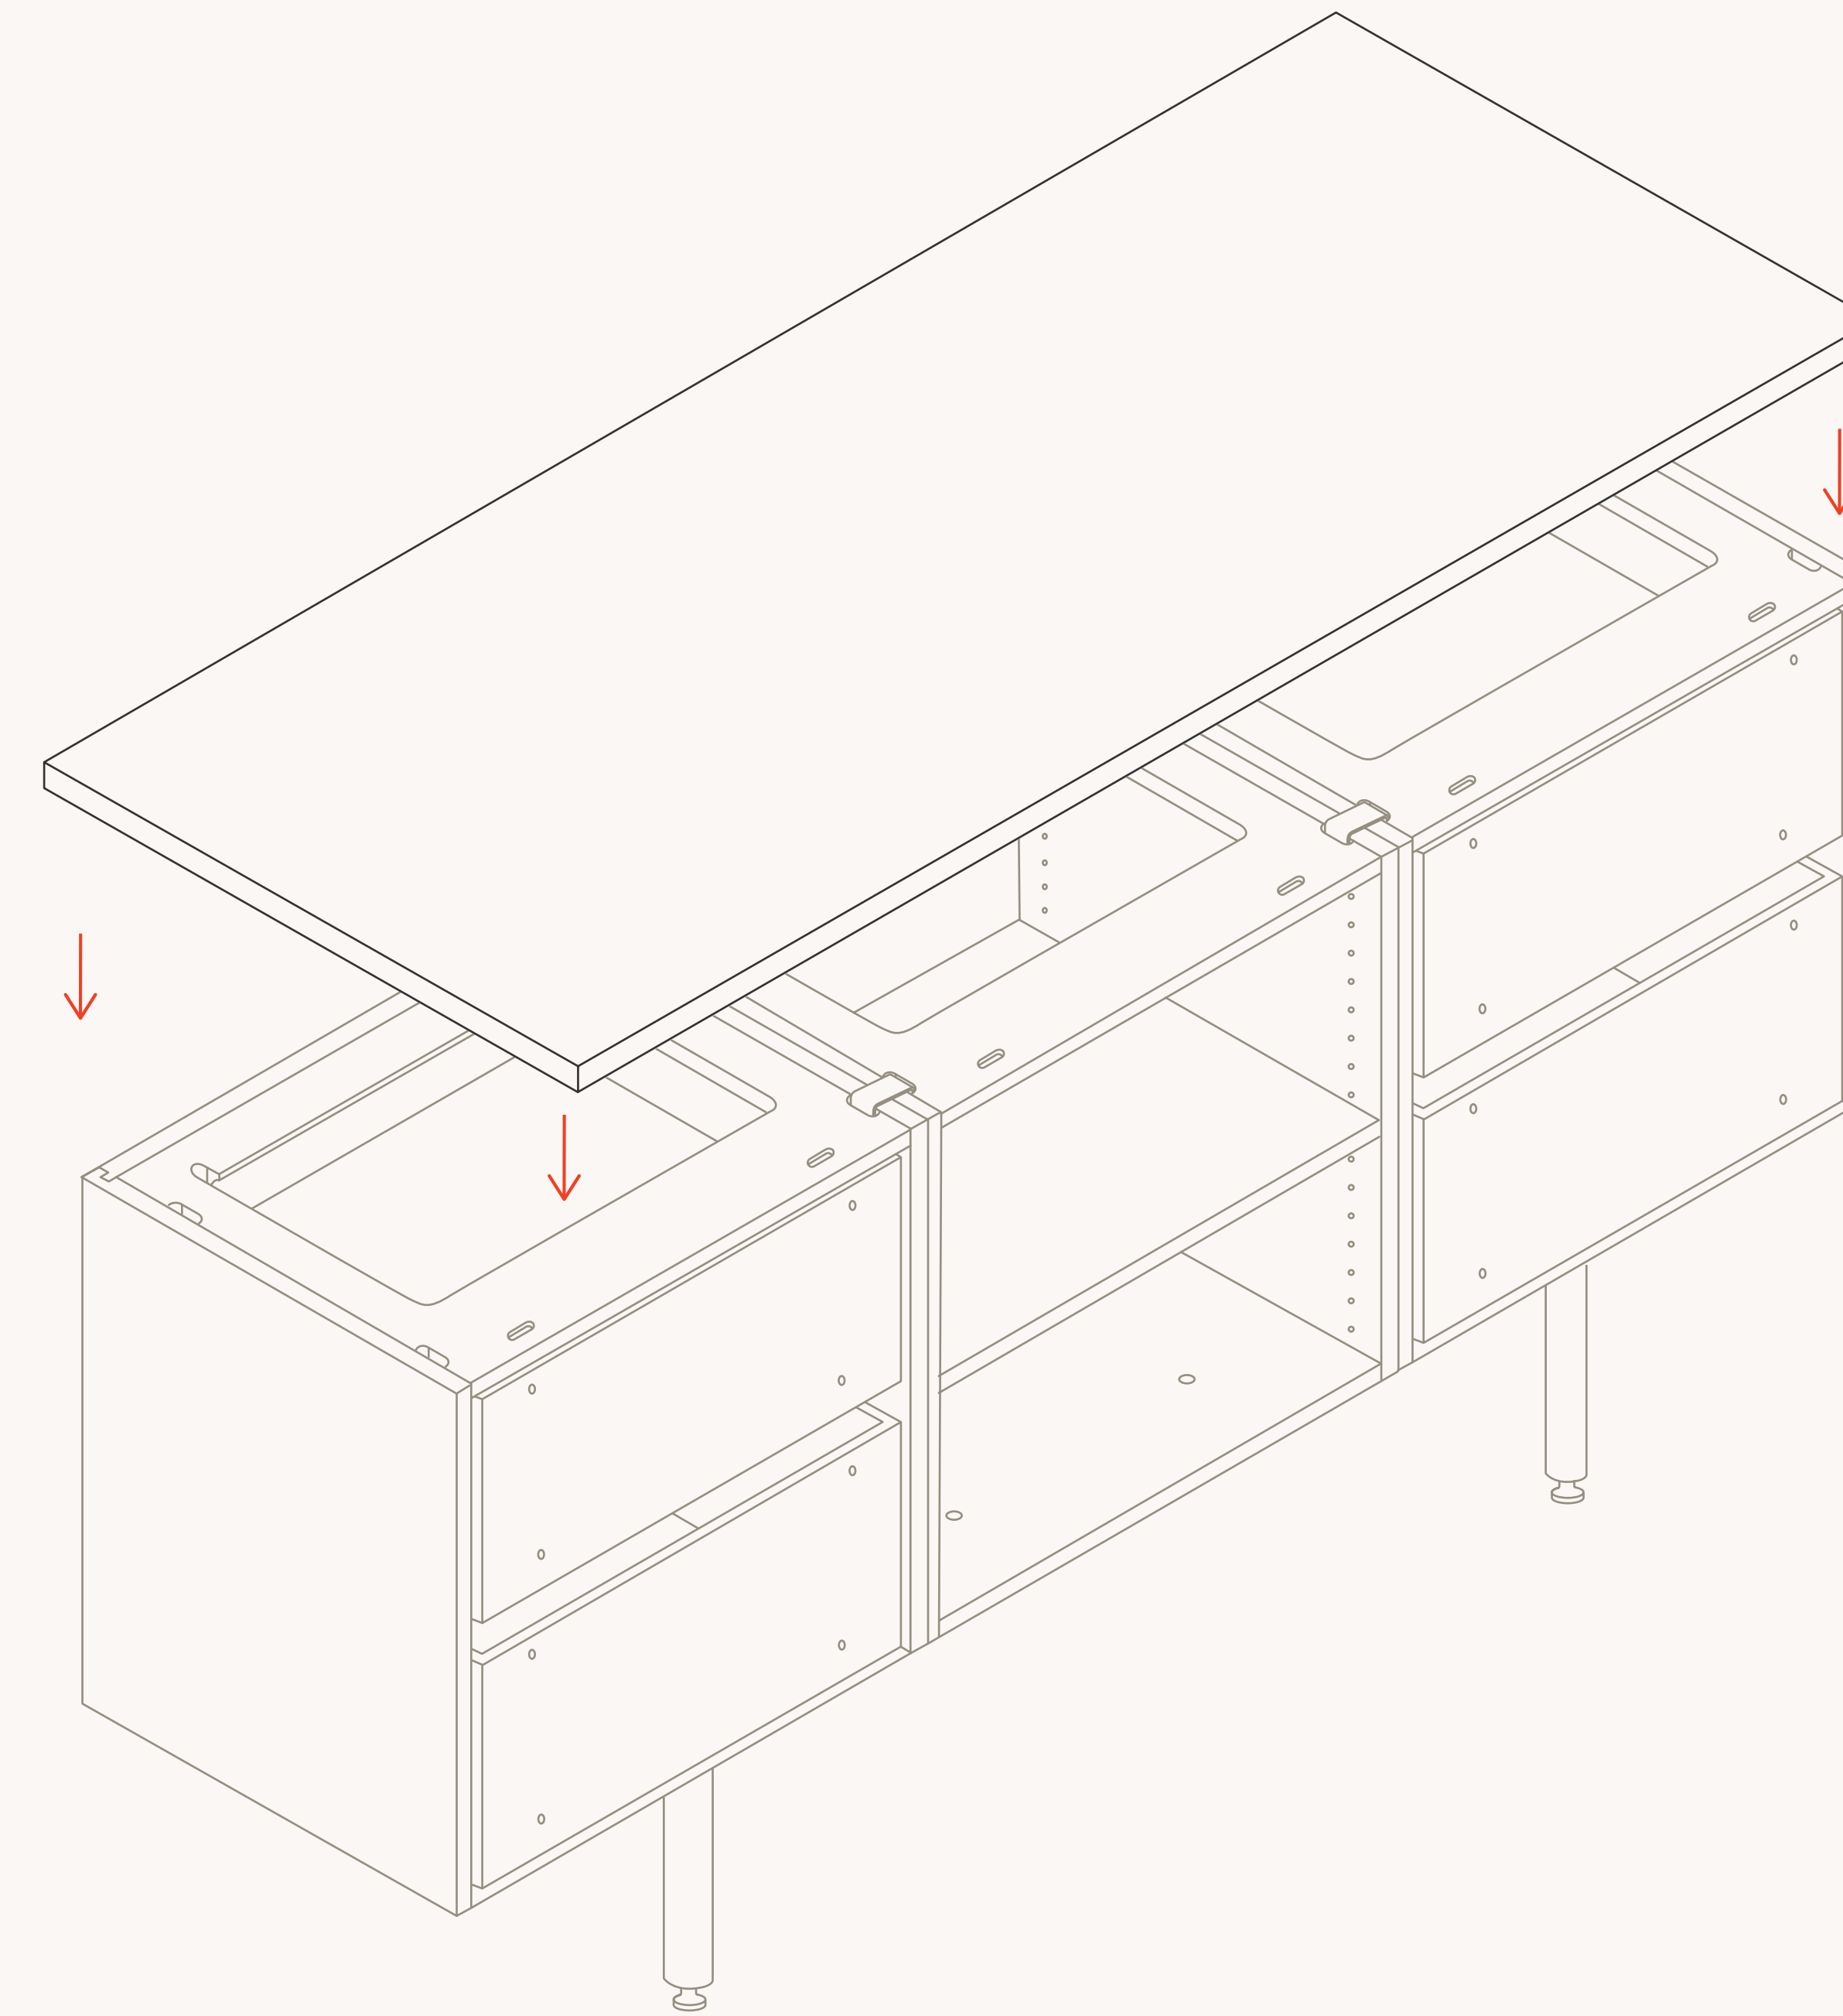


FLOYD

Step: 2I


With the angled metal cleat between the opening in the top of the Unit, push the Top back.

The cleat should lock into place with corresponding cleat on top of the Unit.


01.

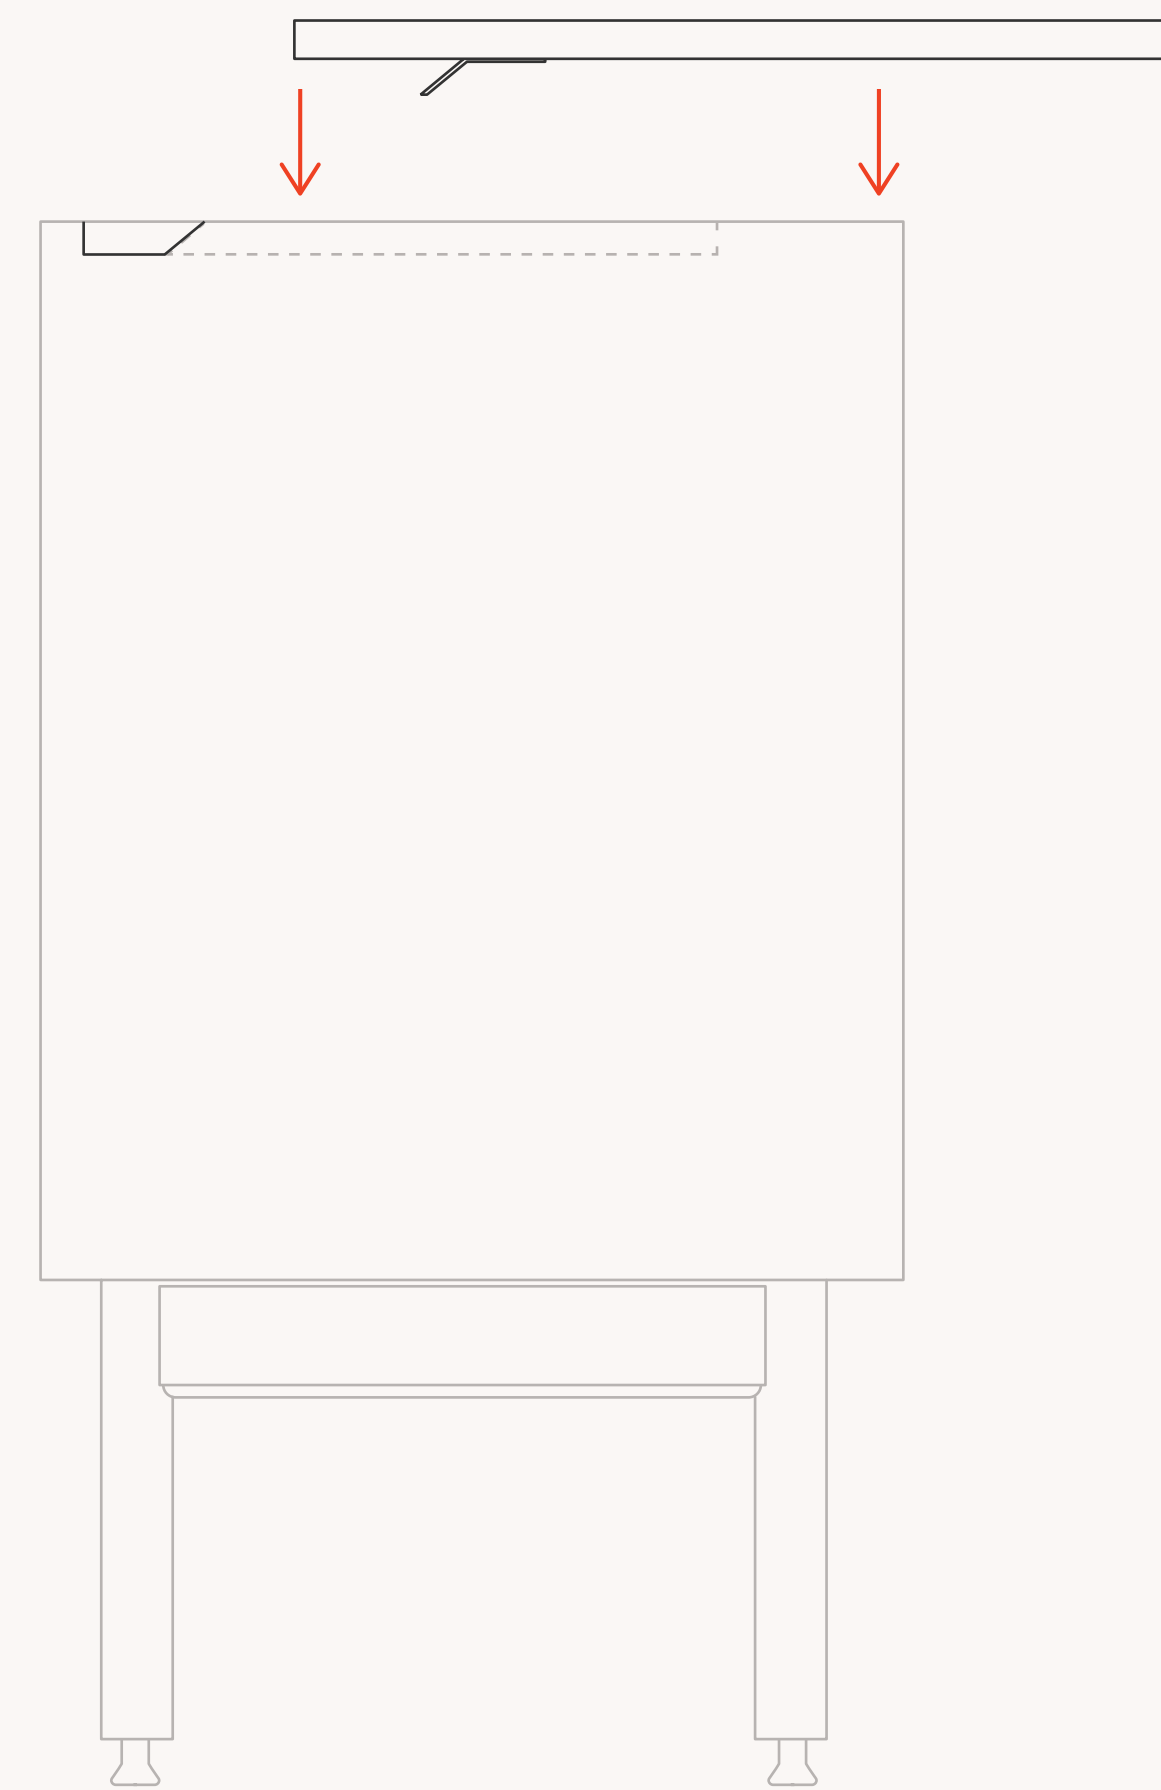

02.

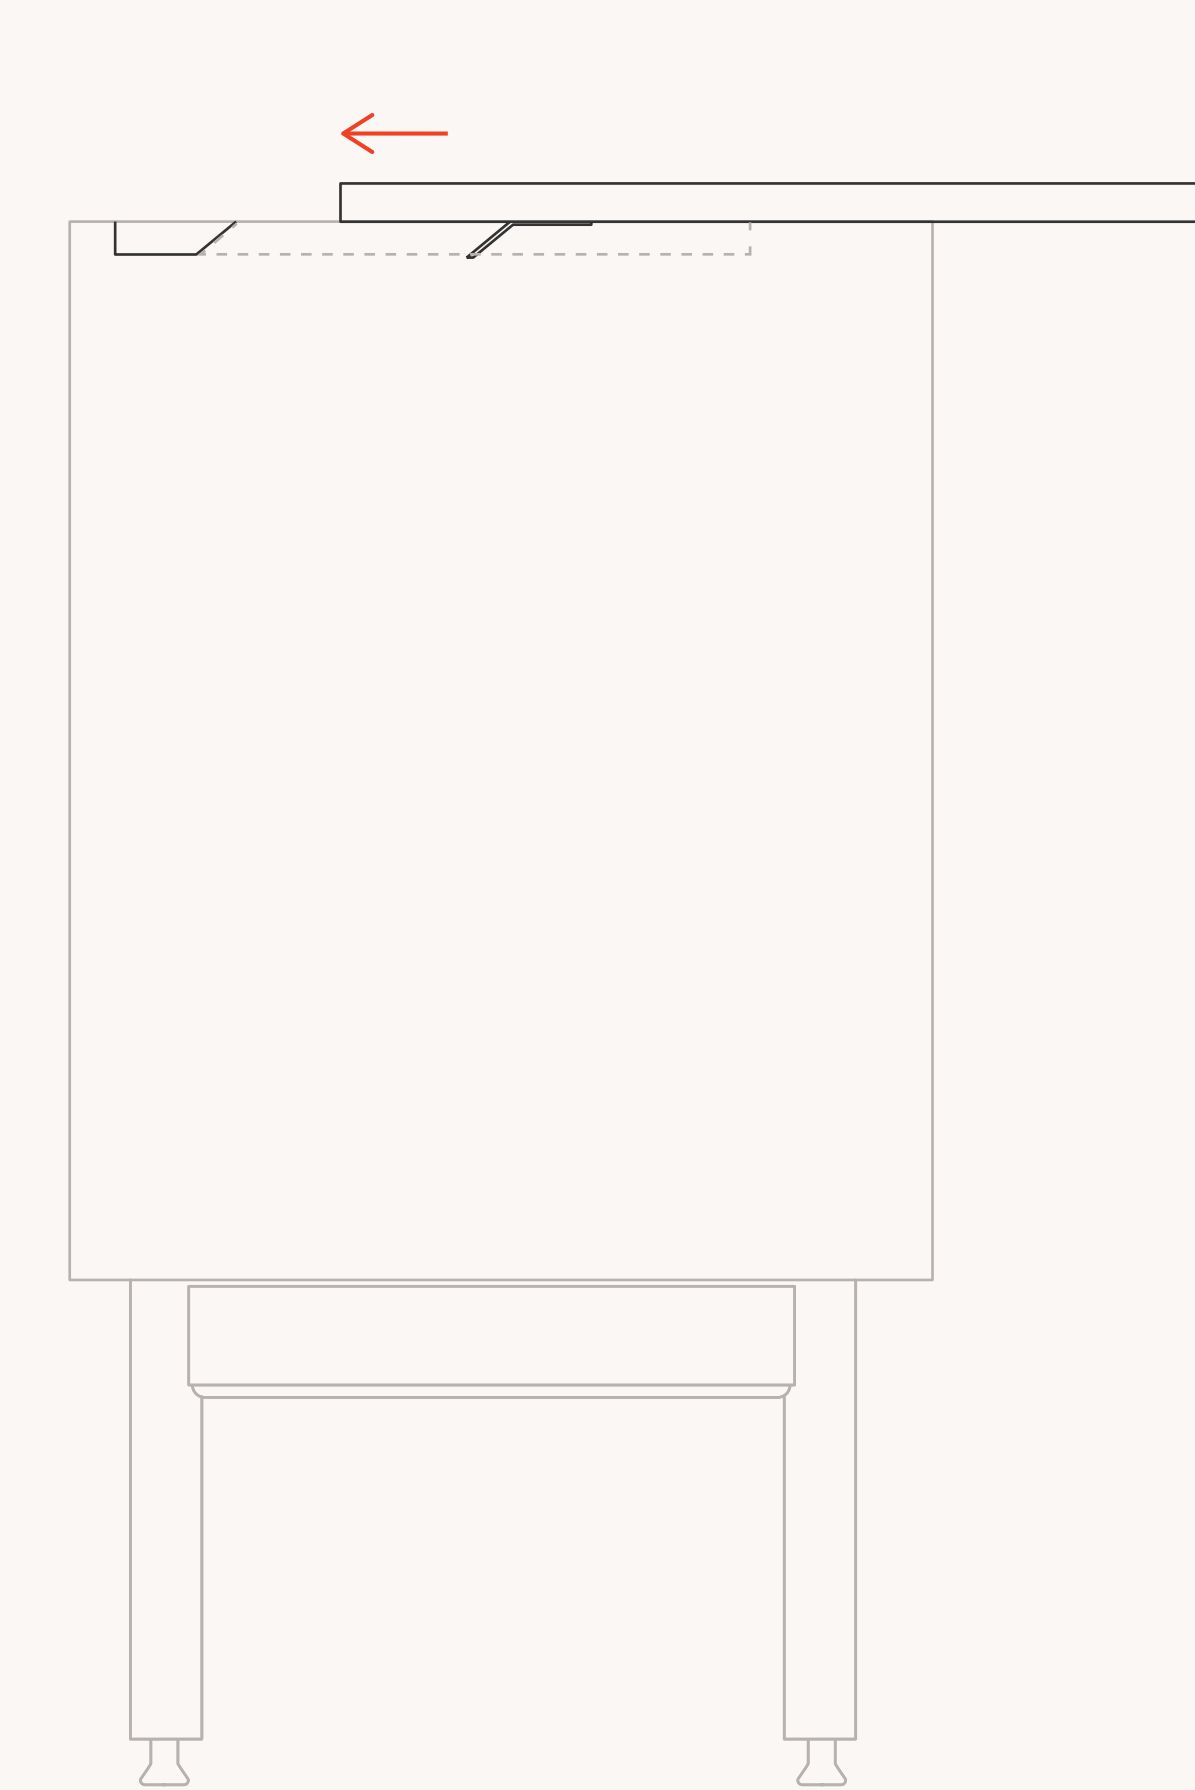

03.




Step: 2J

Ensure all the components are square and aligned.

Then, insert Bolts through the marked holes in the underside of the Units' tops and into corresponding holes in the underside of the Top.

Tighten with the Hex Tool.

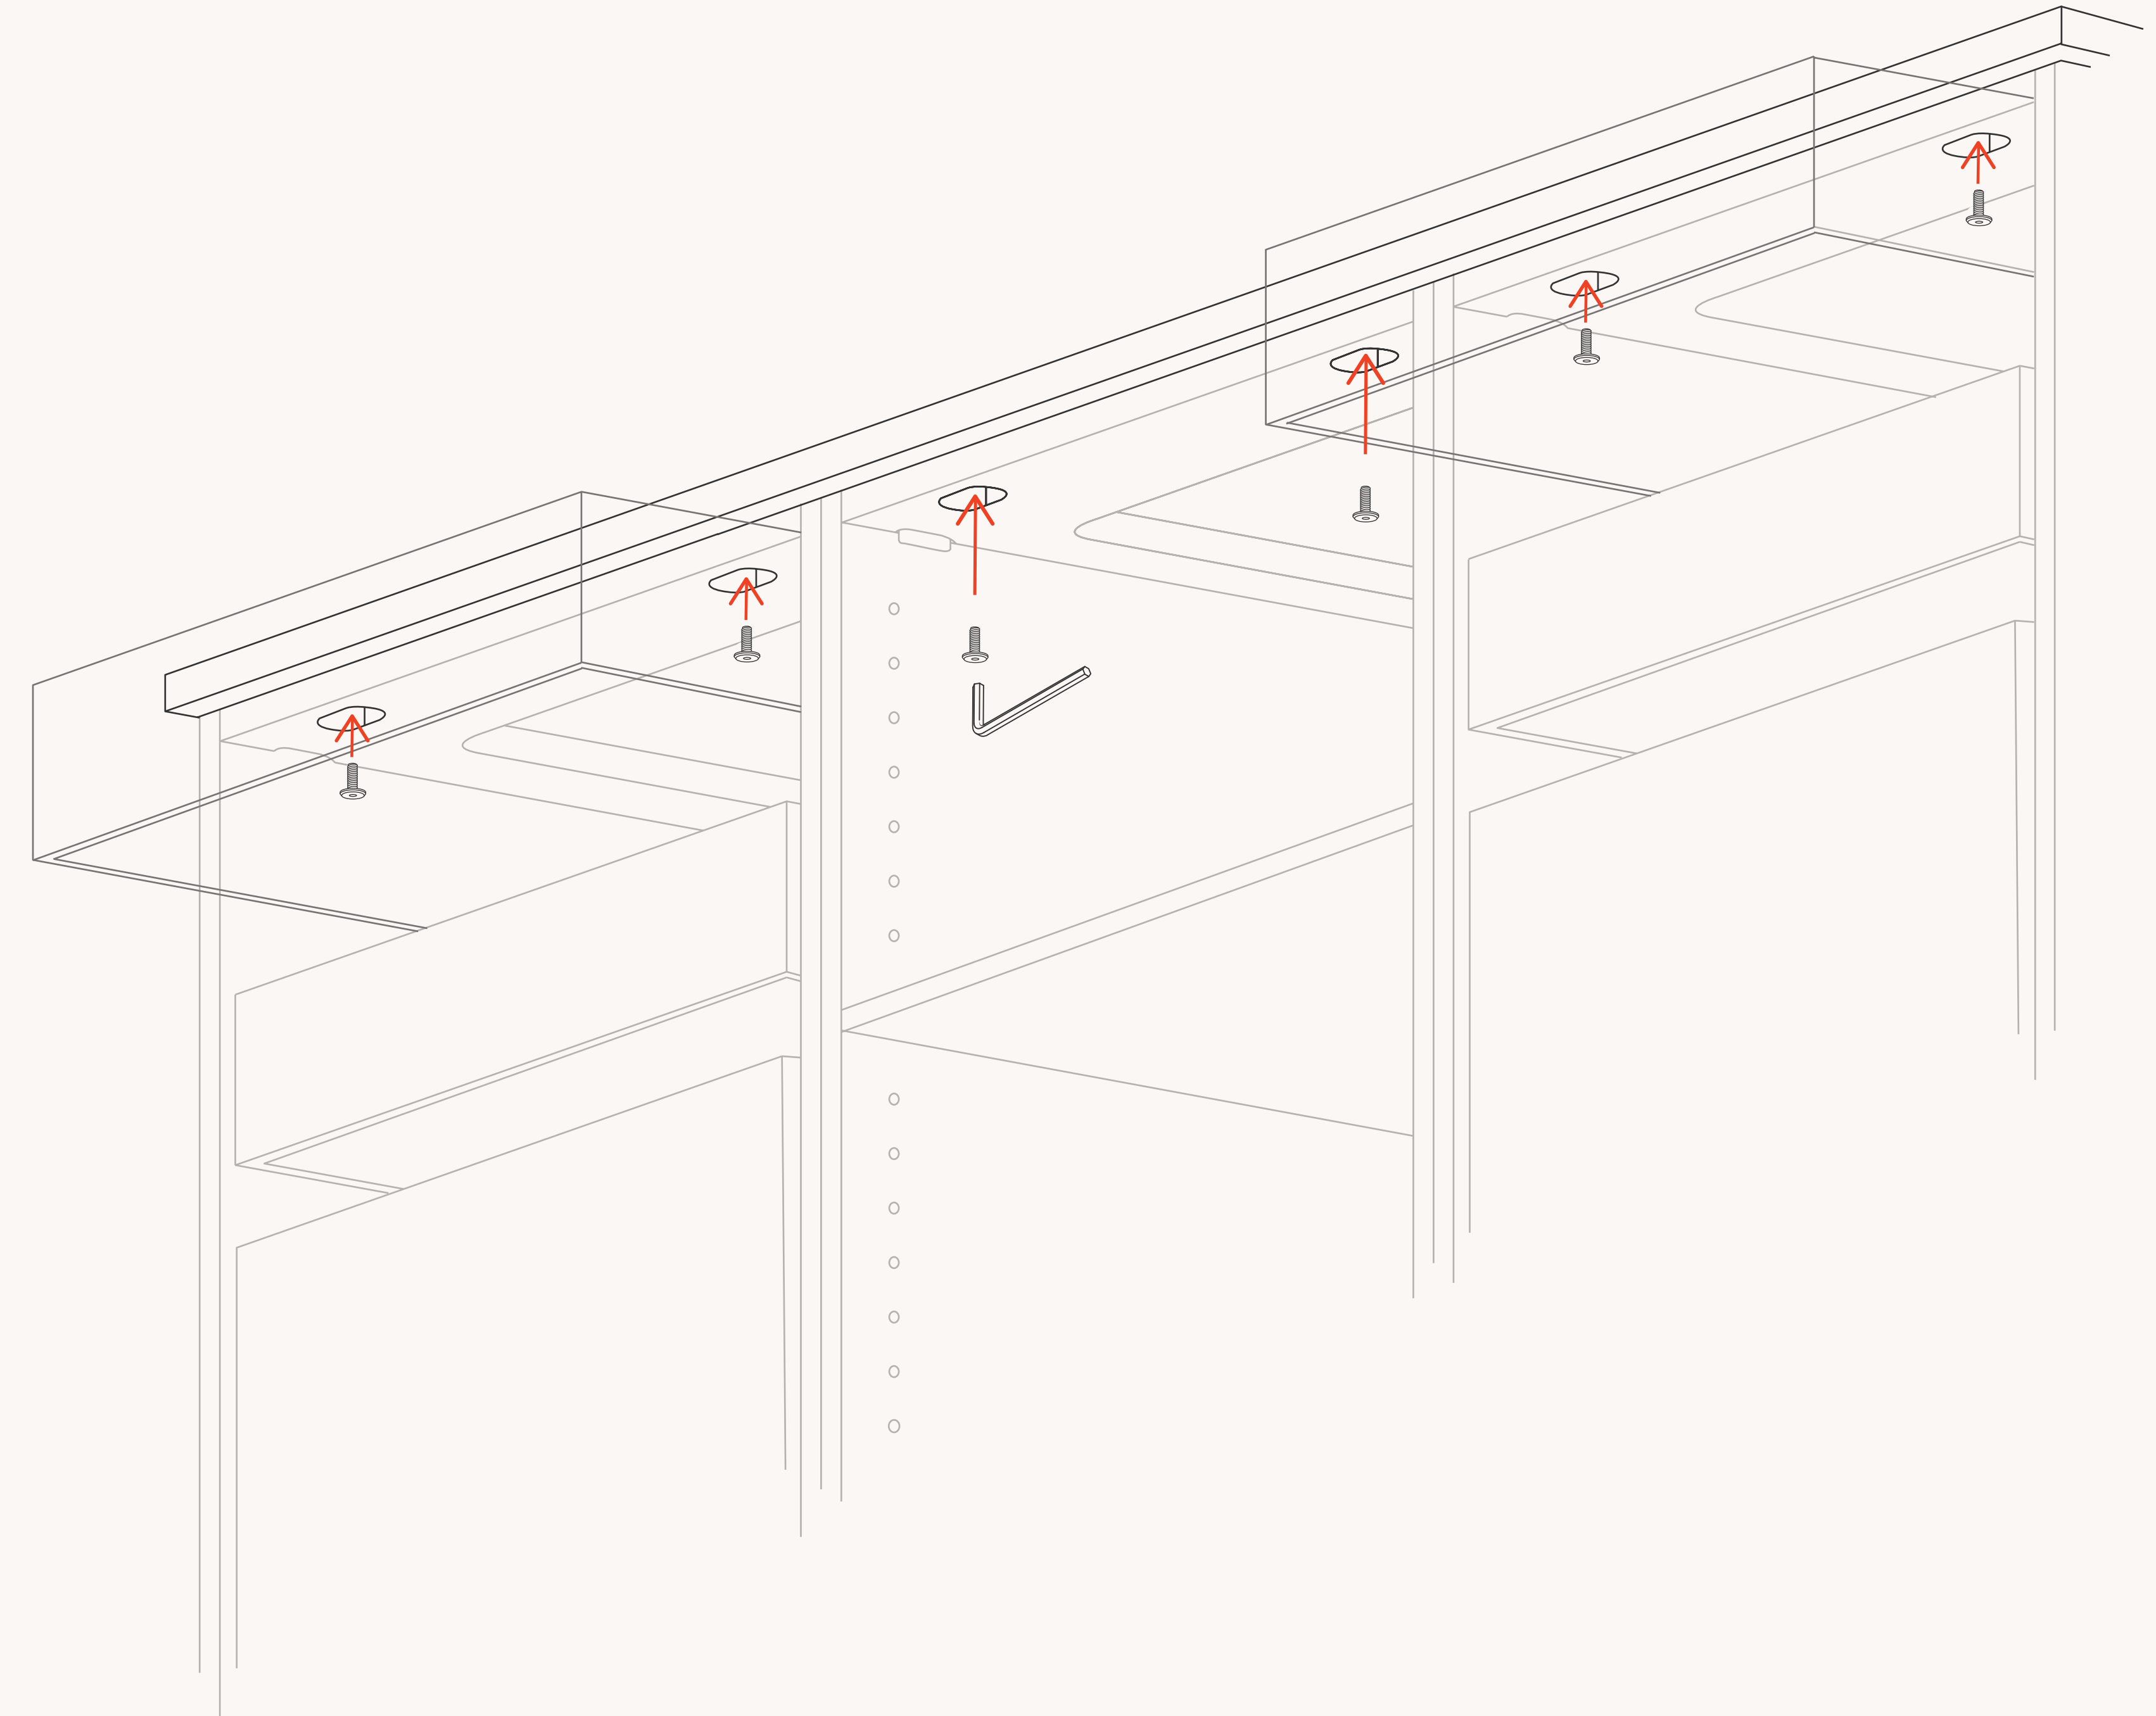

NOTE: For Units with drawers, open top drawer to insert Bolts.

FLOYD


Step: 2K

Install the Anti-Tip Kit.

Use the center holes in the back of the unit to attach the Anti-Tip Kit.

Follow the instructions included with the Anti-Tip Kit to install. Always install and use the Anti-Tip Kit.

Once Unit is in place and secured to wall follow next steps to attach drawer faces or doors.

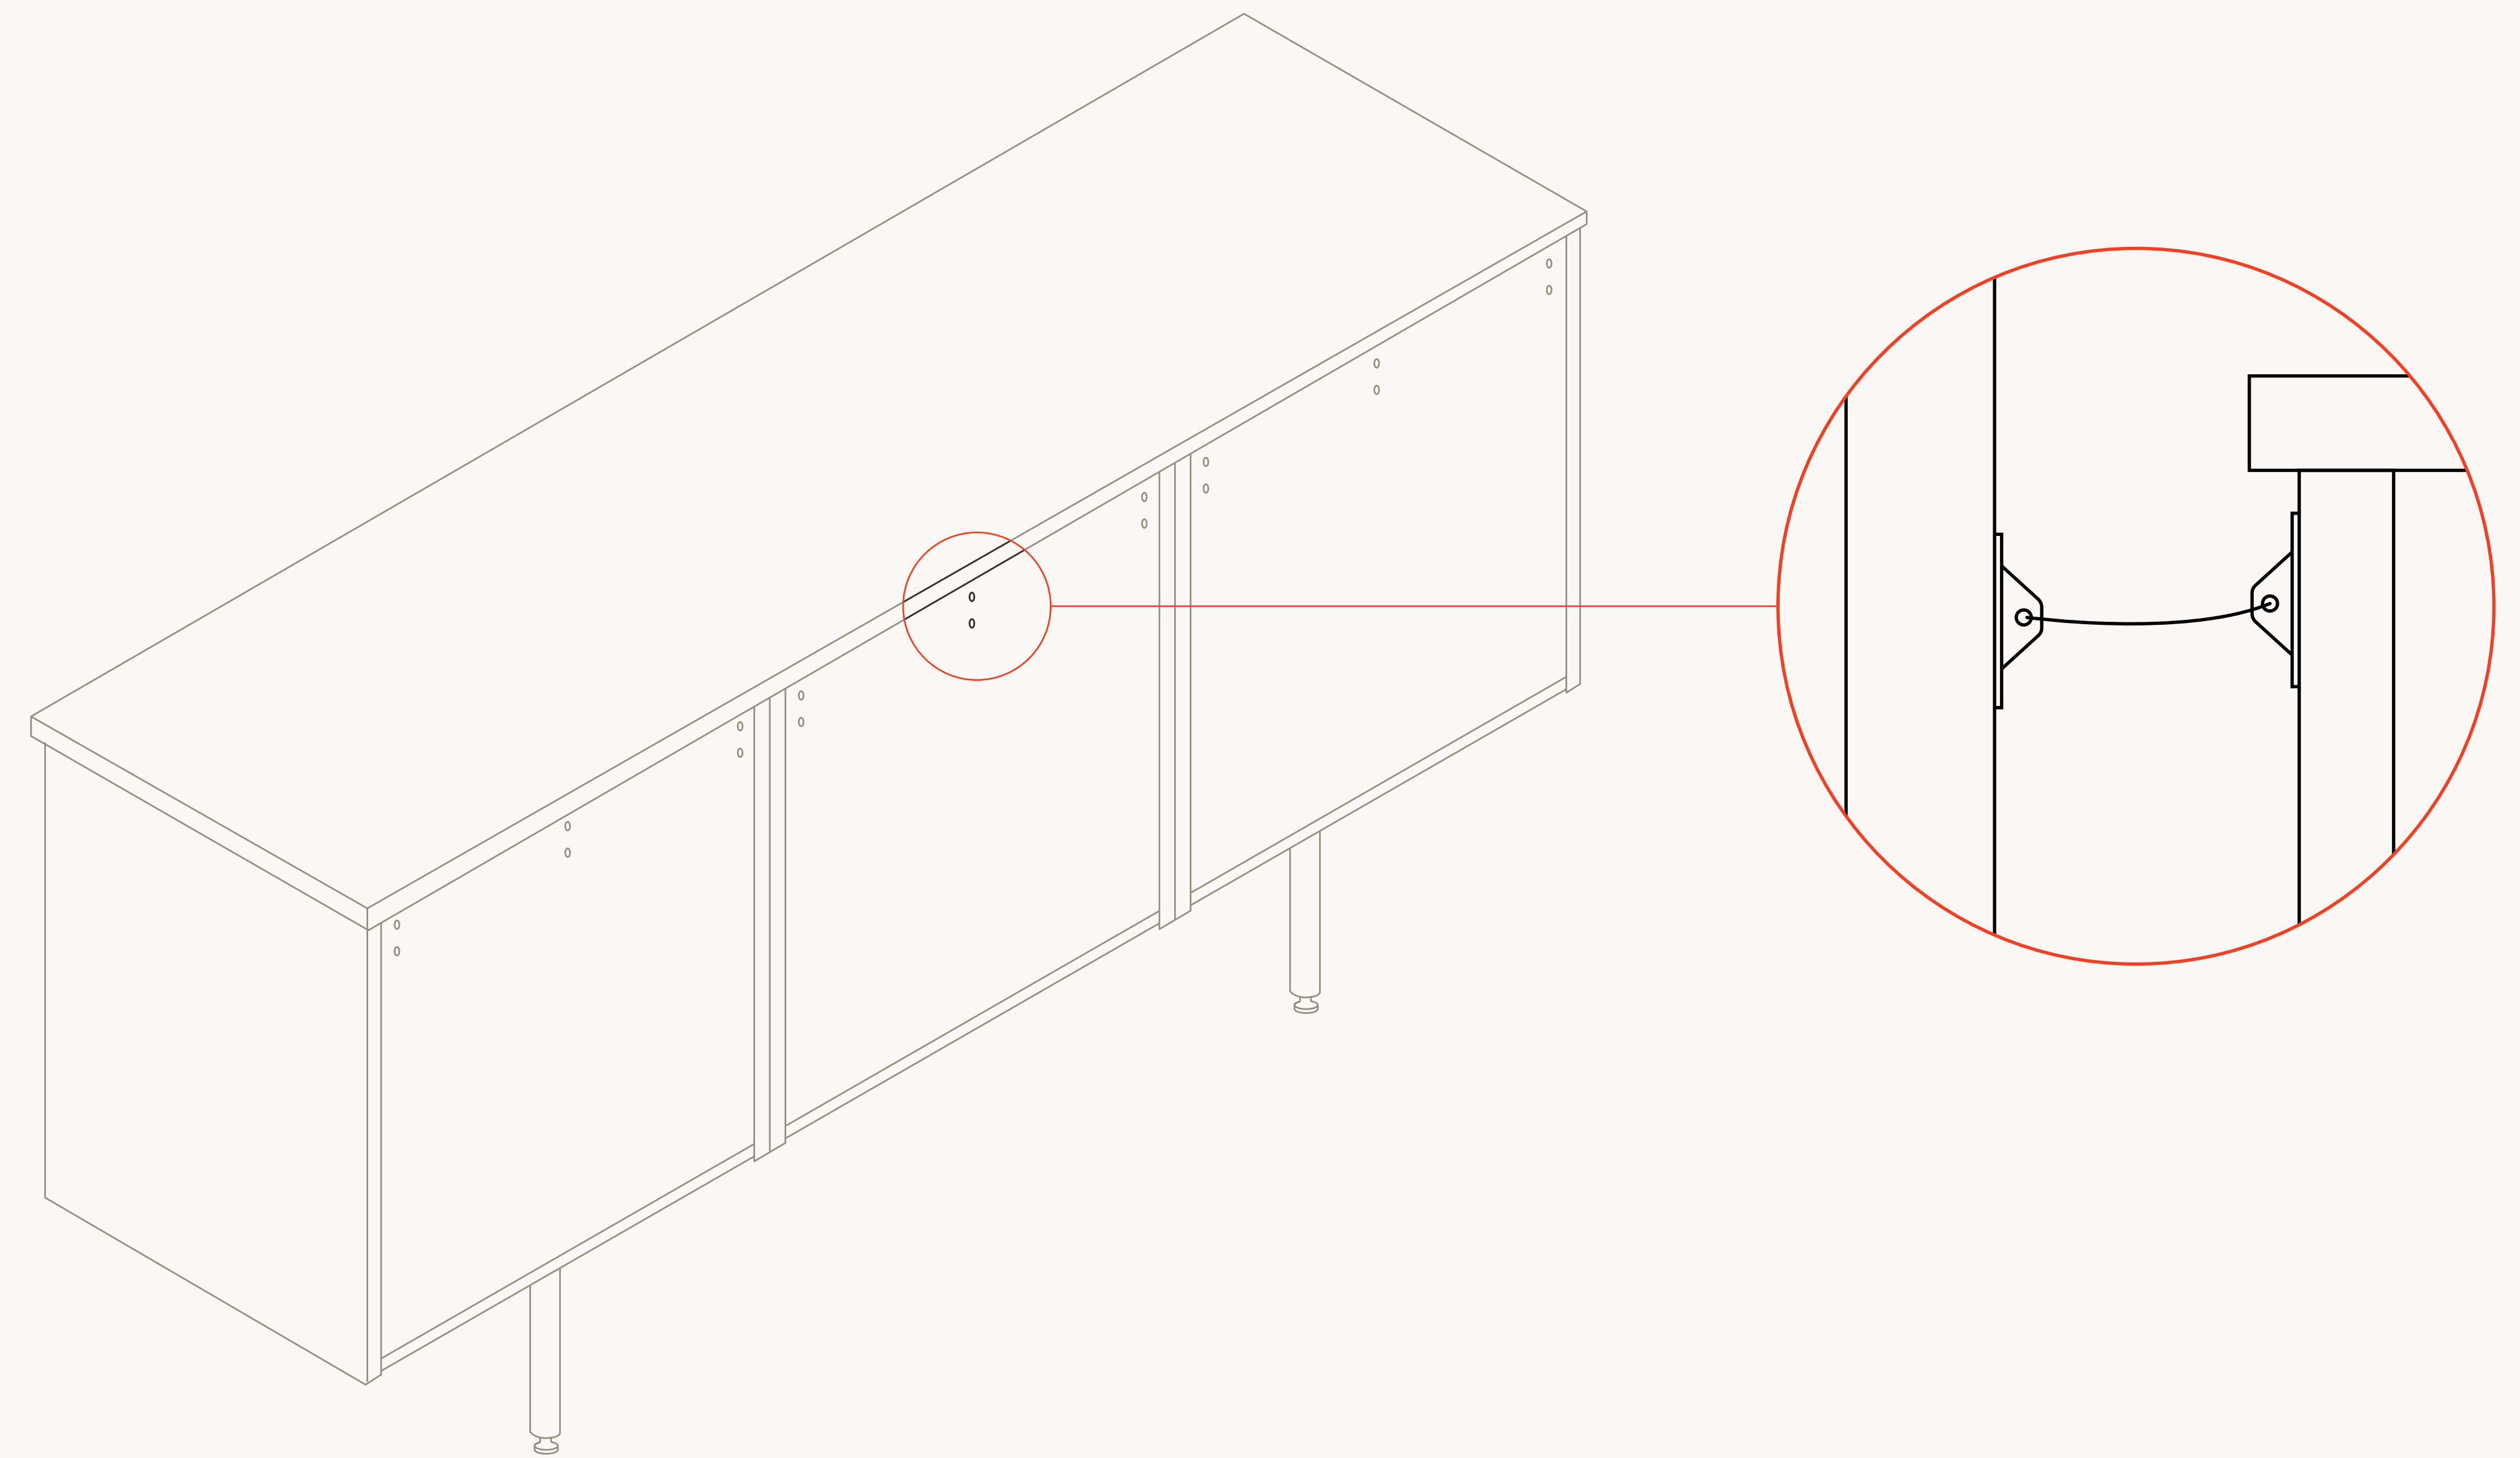

WARNING: Serious or fatal crushing injuries can occur from furniture tip-over. Always install tip-over restraint provided to help reduce risk of tip-over.

FLOYD










Step: 3

Finishing the Units

FLOYD

Drawer Units

Components

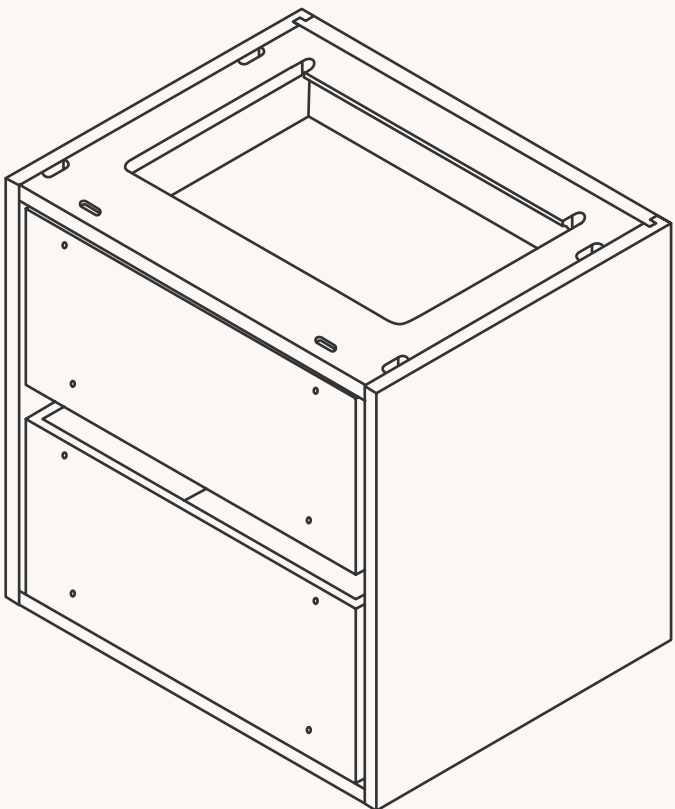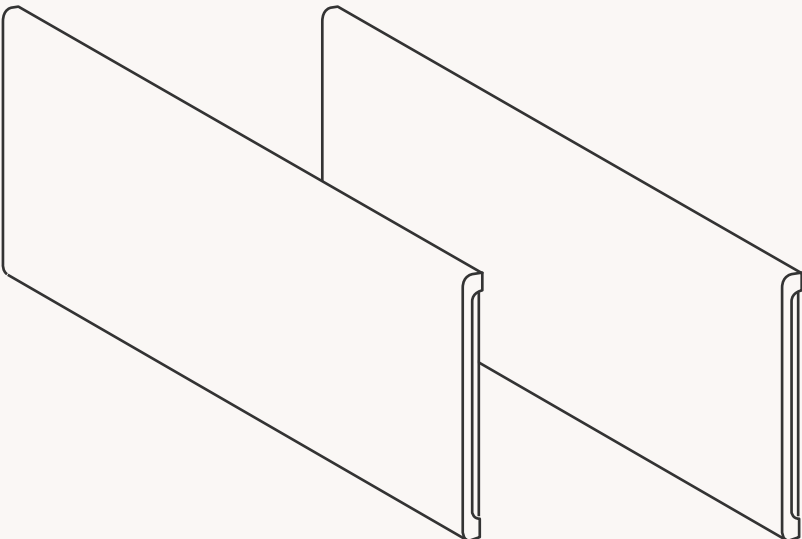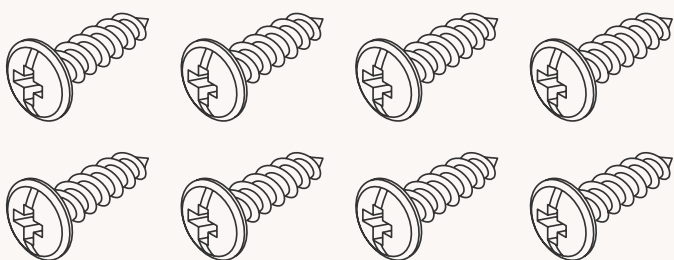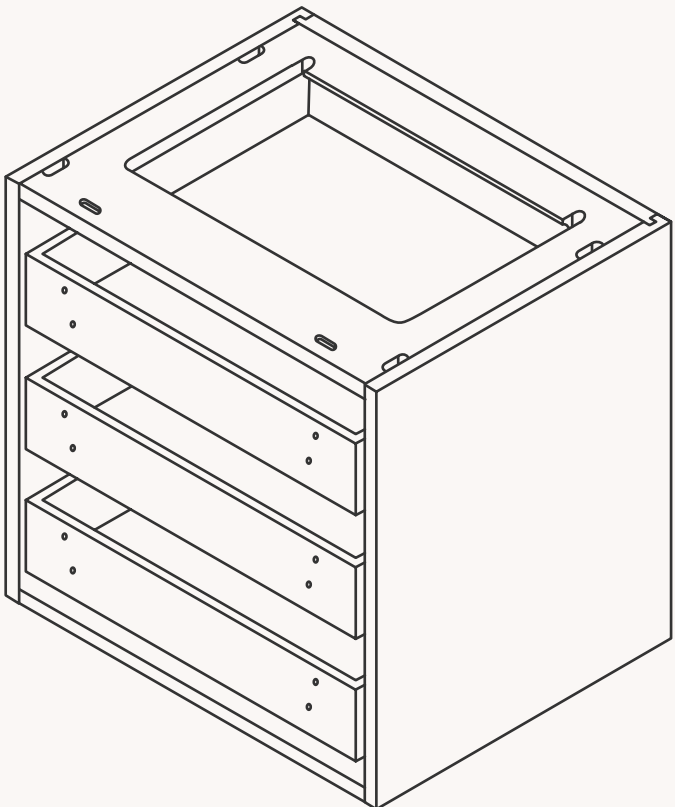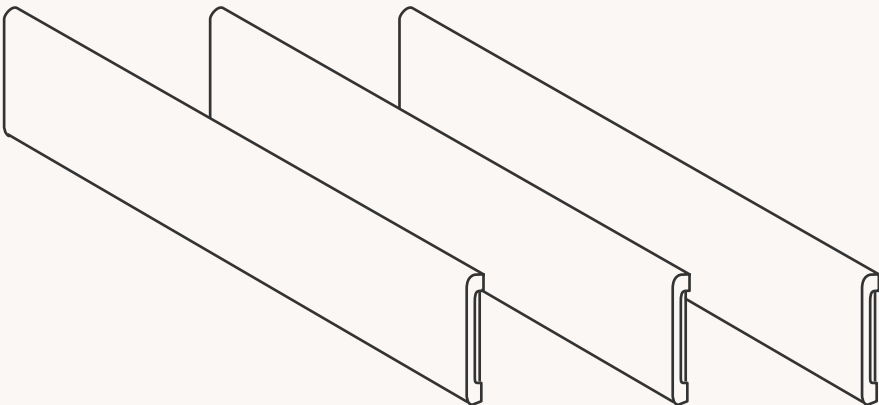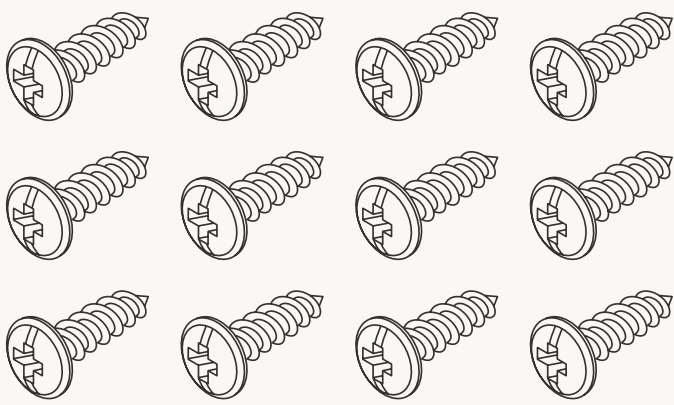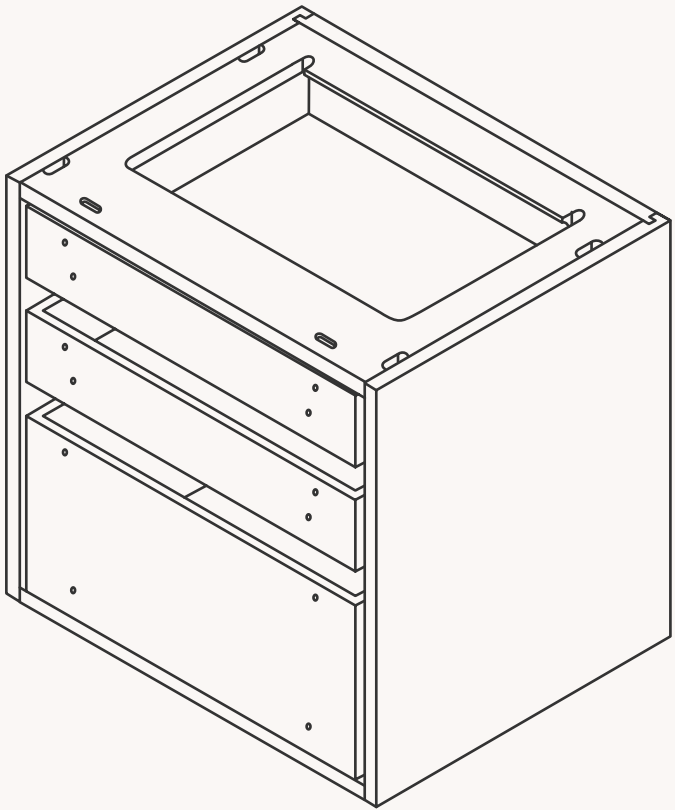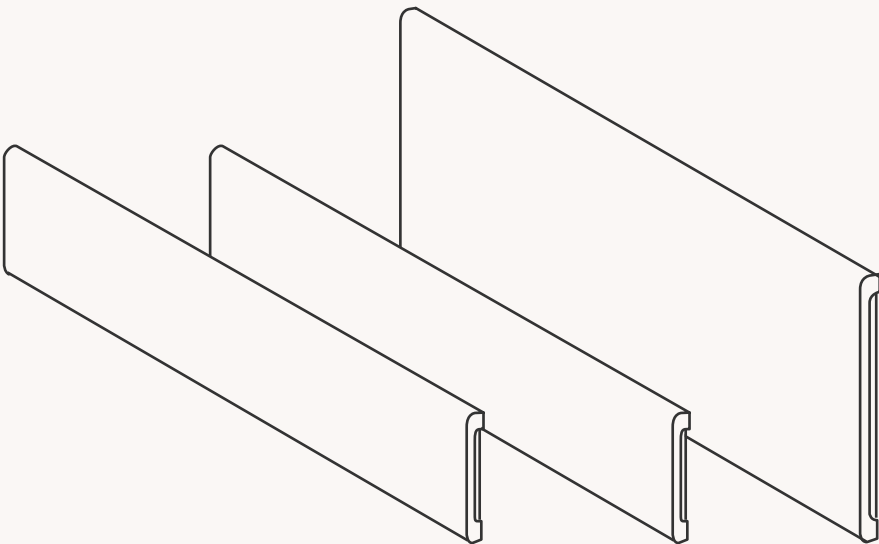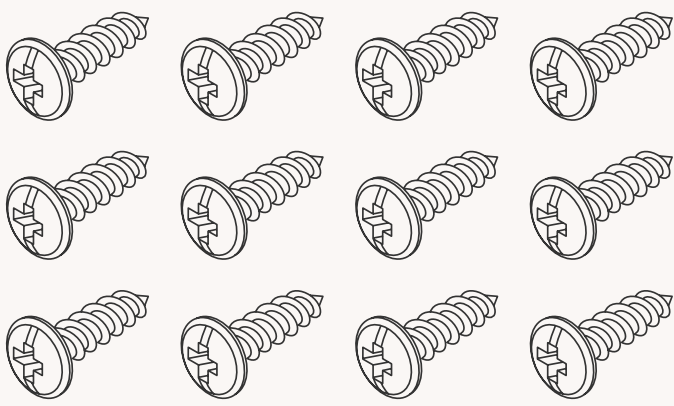2 Large Drawer Unit		2x Drawer Faces		8x Screws	
2 Medium Drawer Unit		3x Drawer Faces		12x Screws	
2 Mixed Drawer Unit		3x Drawer Faces		12x Screws	

NOTE: To assemble these components, you'll need a #2 Phillips-Head Screwdriver (not provided).


Drawer Units

Start by opening the top Drawer.


Align Drawer Face and attach it to the Module from the inside of the Drawer, using 4 of the provide Screws and a #2 Phillips-Head Screwdriver.

Once all 4 Screws are in place, tighten each. Then, one at a time, repeat these steps with the remaining Drawers.

01.

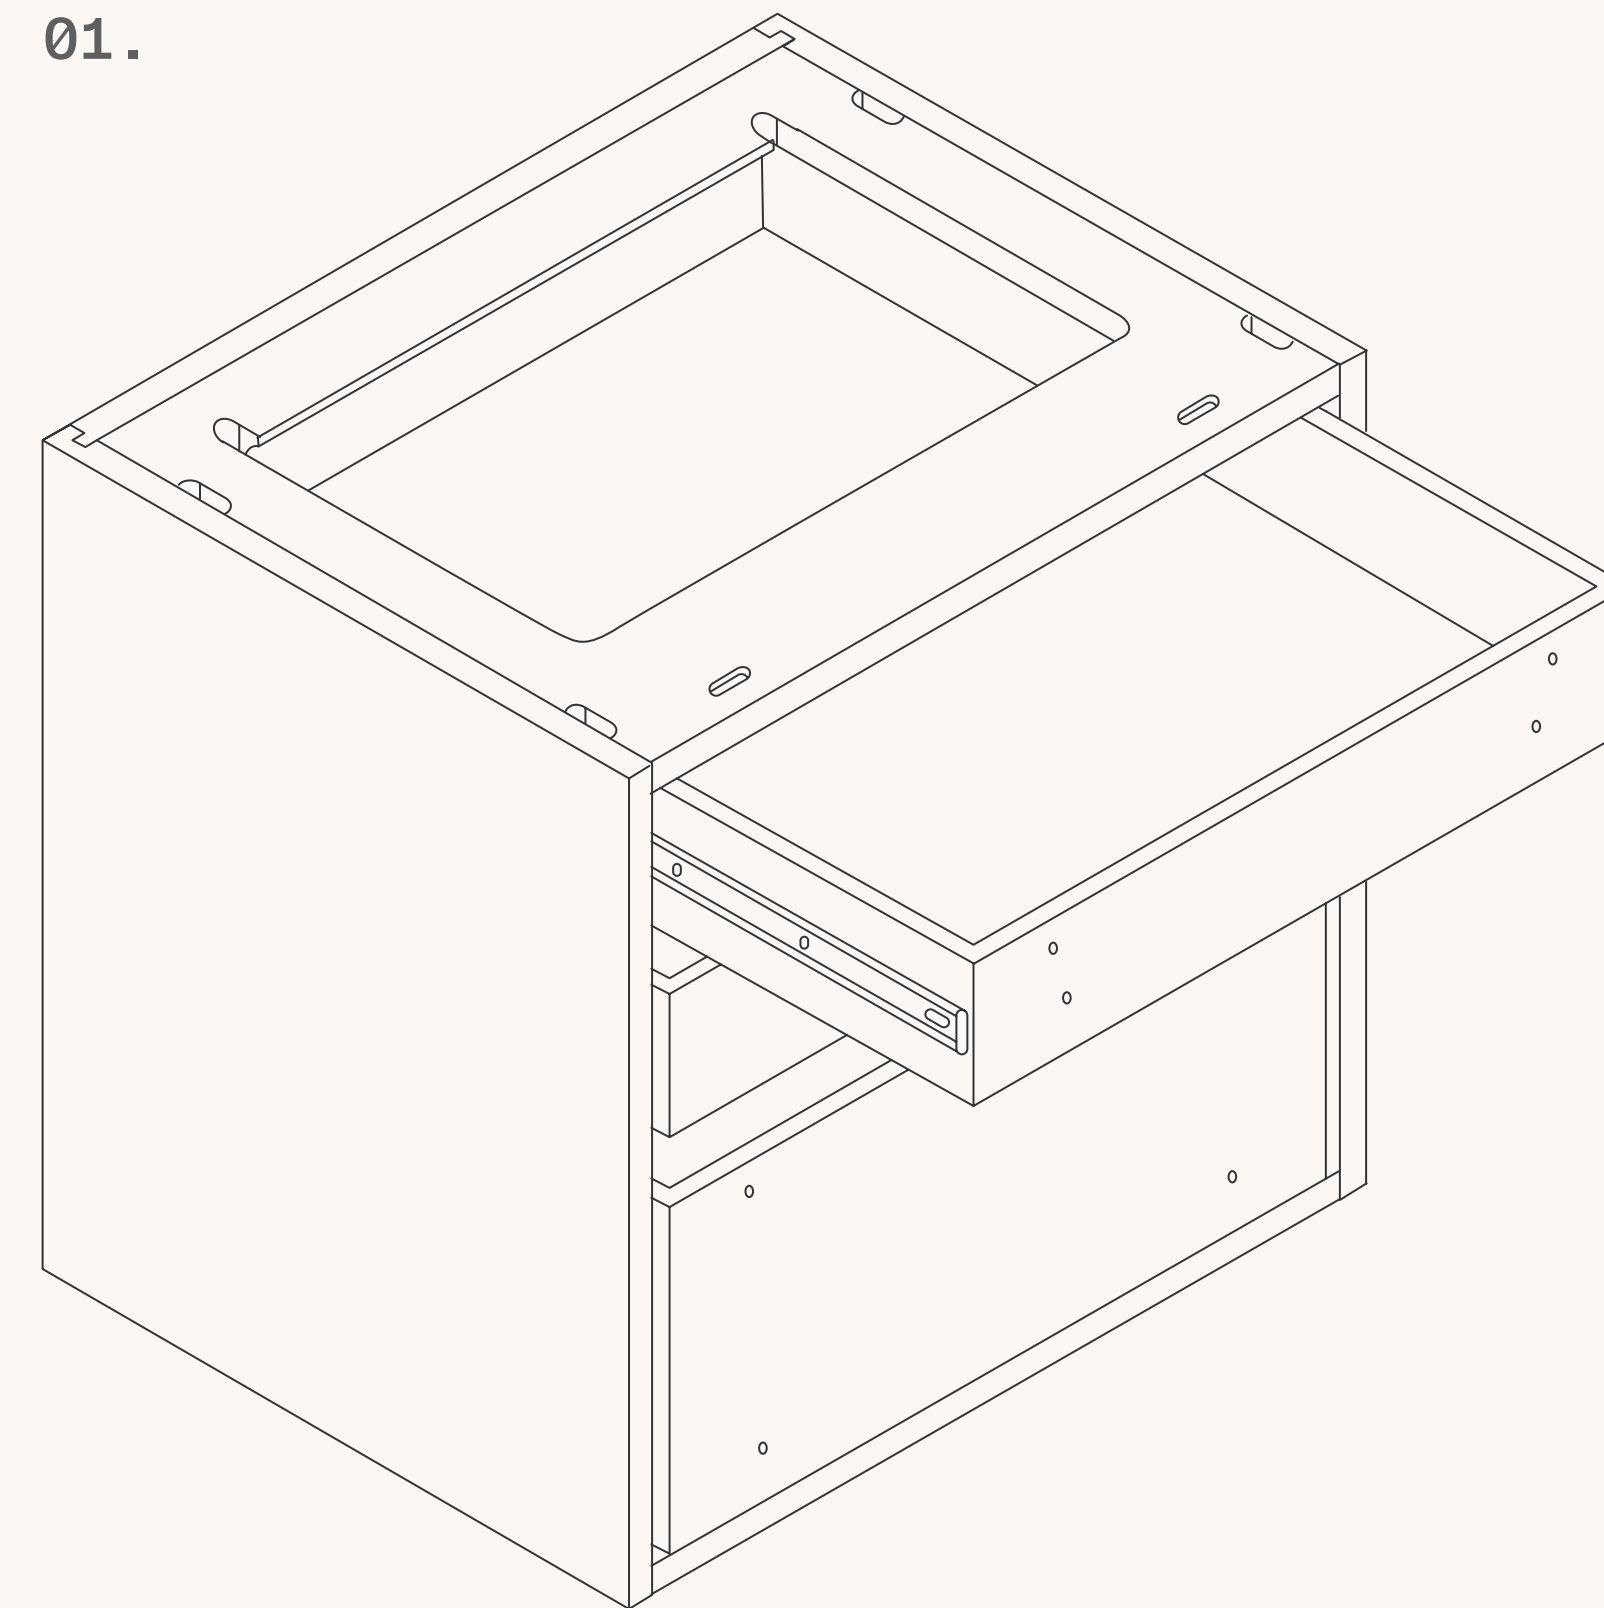

02.








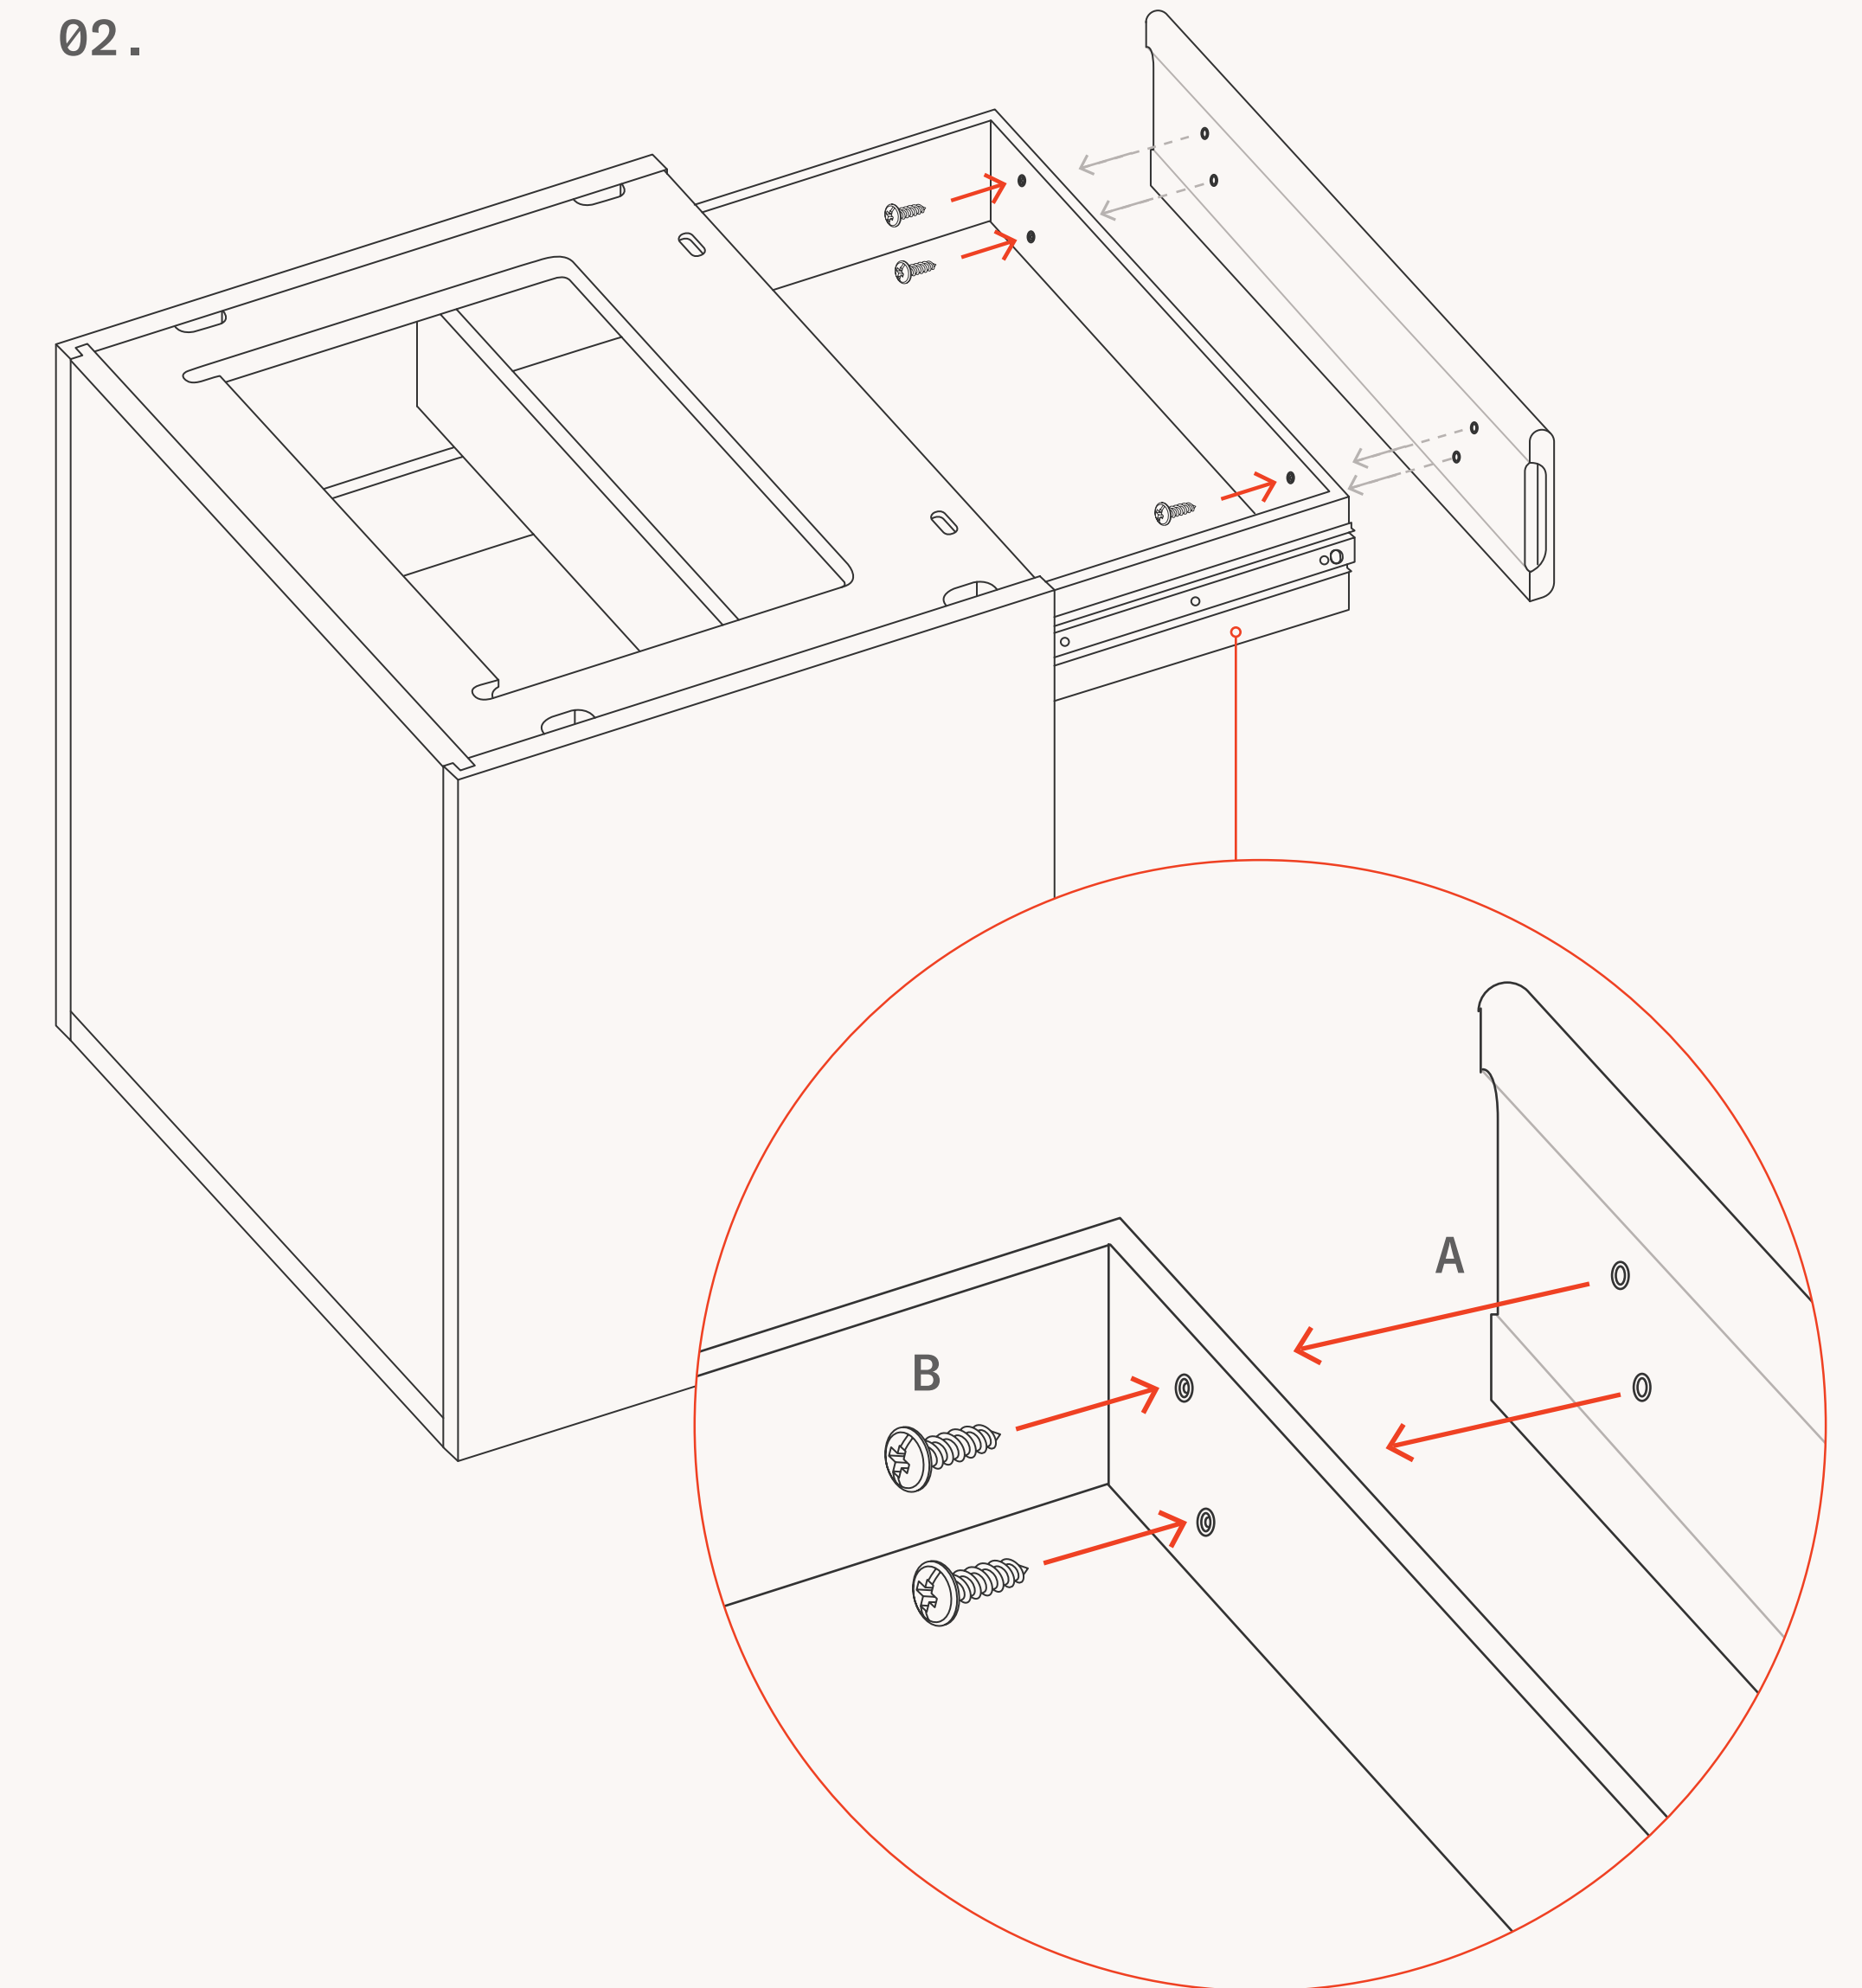


NOTE: For this step, you'll need a #2 Phillips-Head Screwdriver (not provided).

FLOYD

Shelf Units

Components
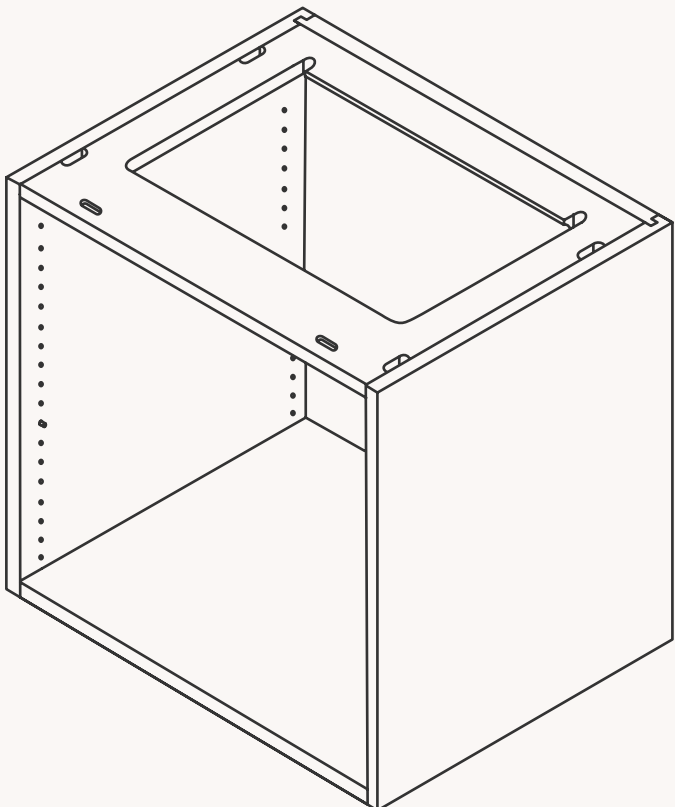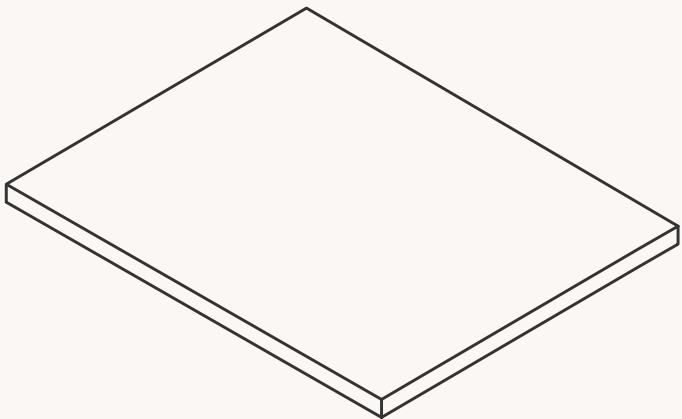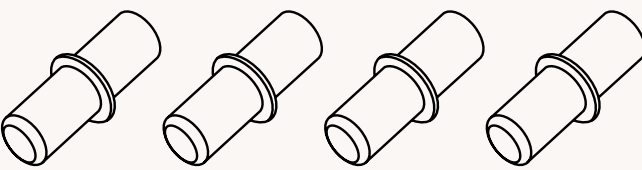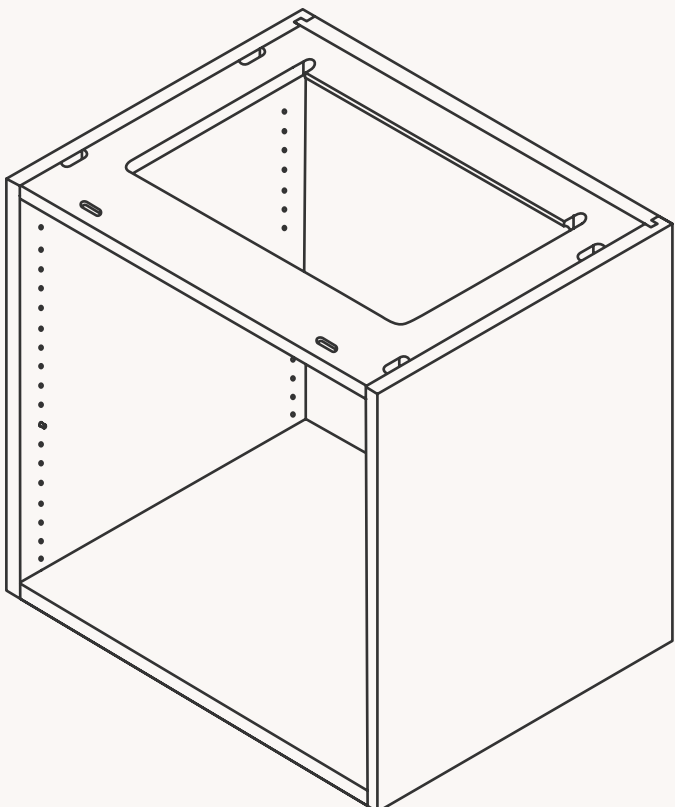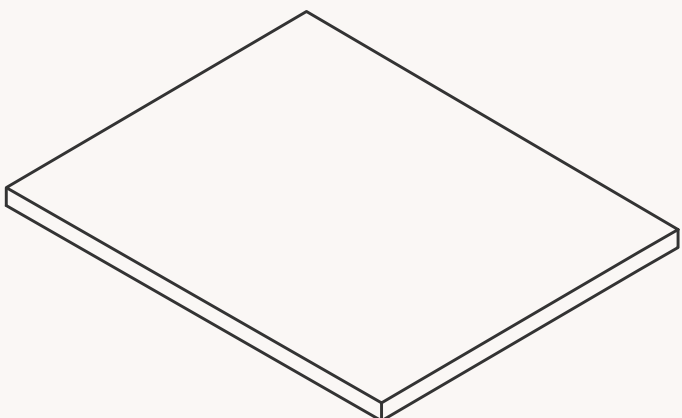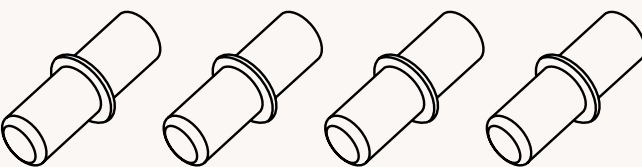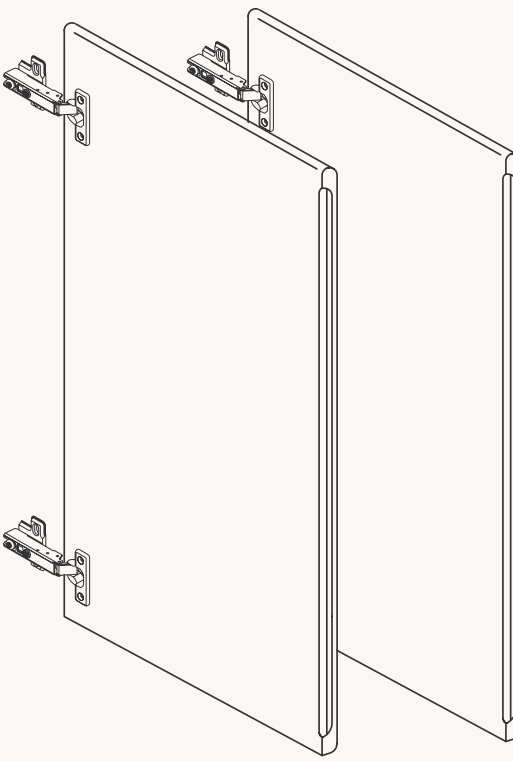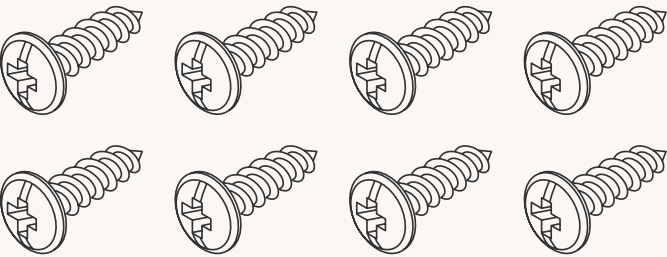
<div>Open Shelf Unit</div> <div></div>	<div>1x Shelf</div> <div></div>	<div>4x Shelf Pins</div> <div></div>
<div>2 Door Unit</div> <div></div>	<div>1x Shelf</div> <div></div>	<div>4x Shelf Pins</div> <div></div>
	<div>2x Doors</div> <div></div>	<div>8x Screws</div> <div></div>



NOTE: To assemble the 2 Door Unit, you'll need a #2 Phillips-Head Screwdriver (not provided).

FLOYD

Open Shelf Units

Align the 4 Shelf Pins to the desired position.

Place the Shelf atop the Shelf Pins.

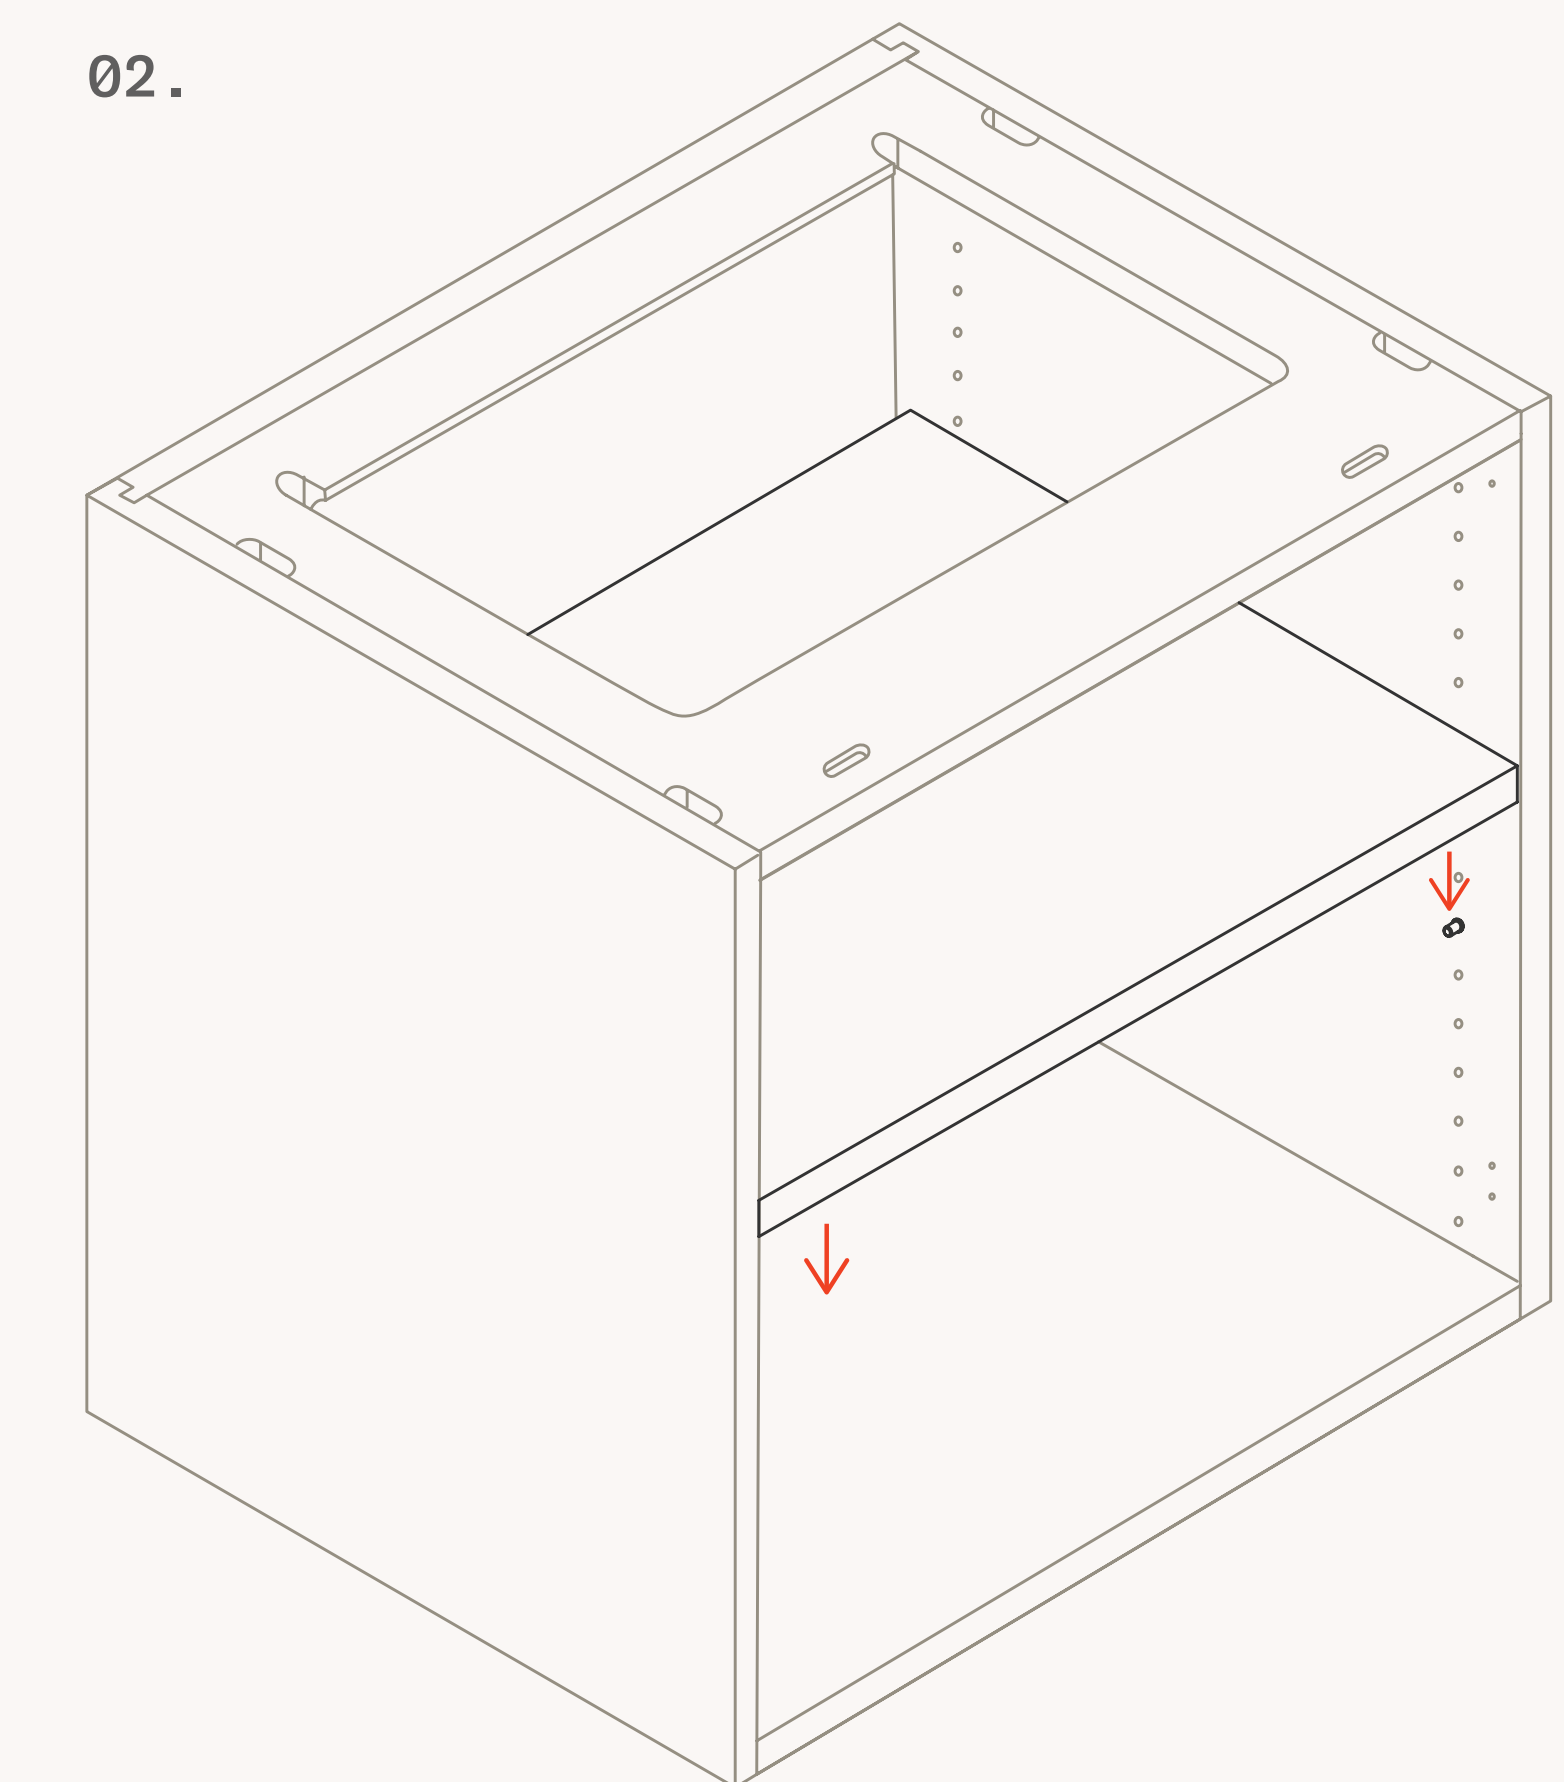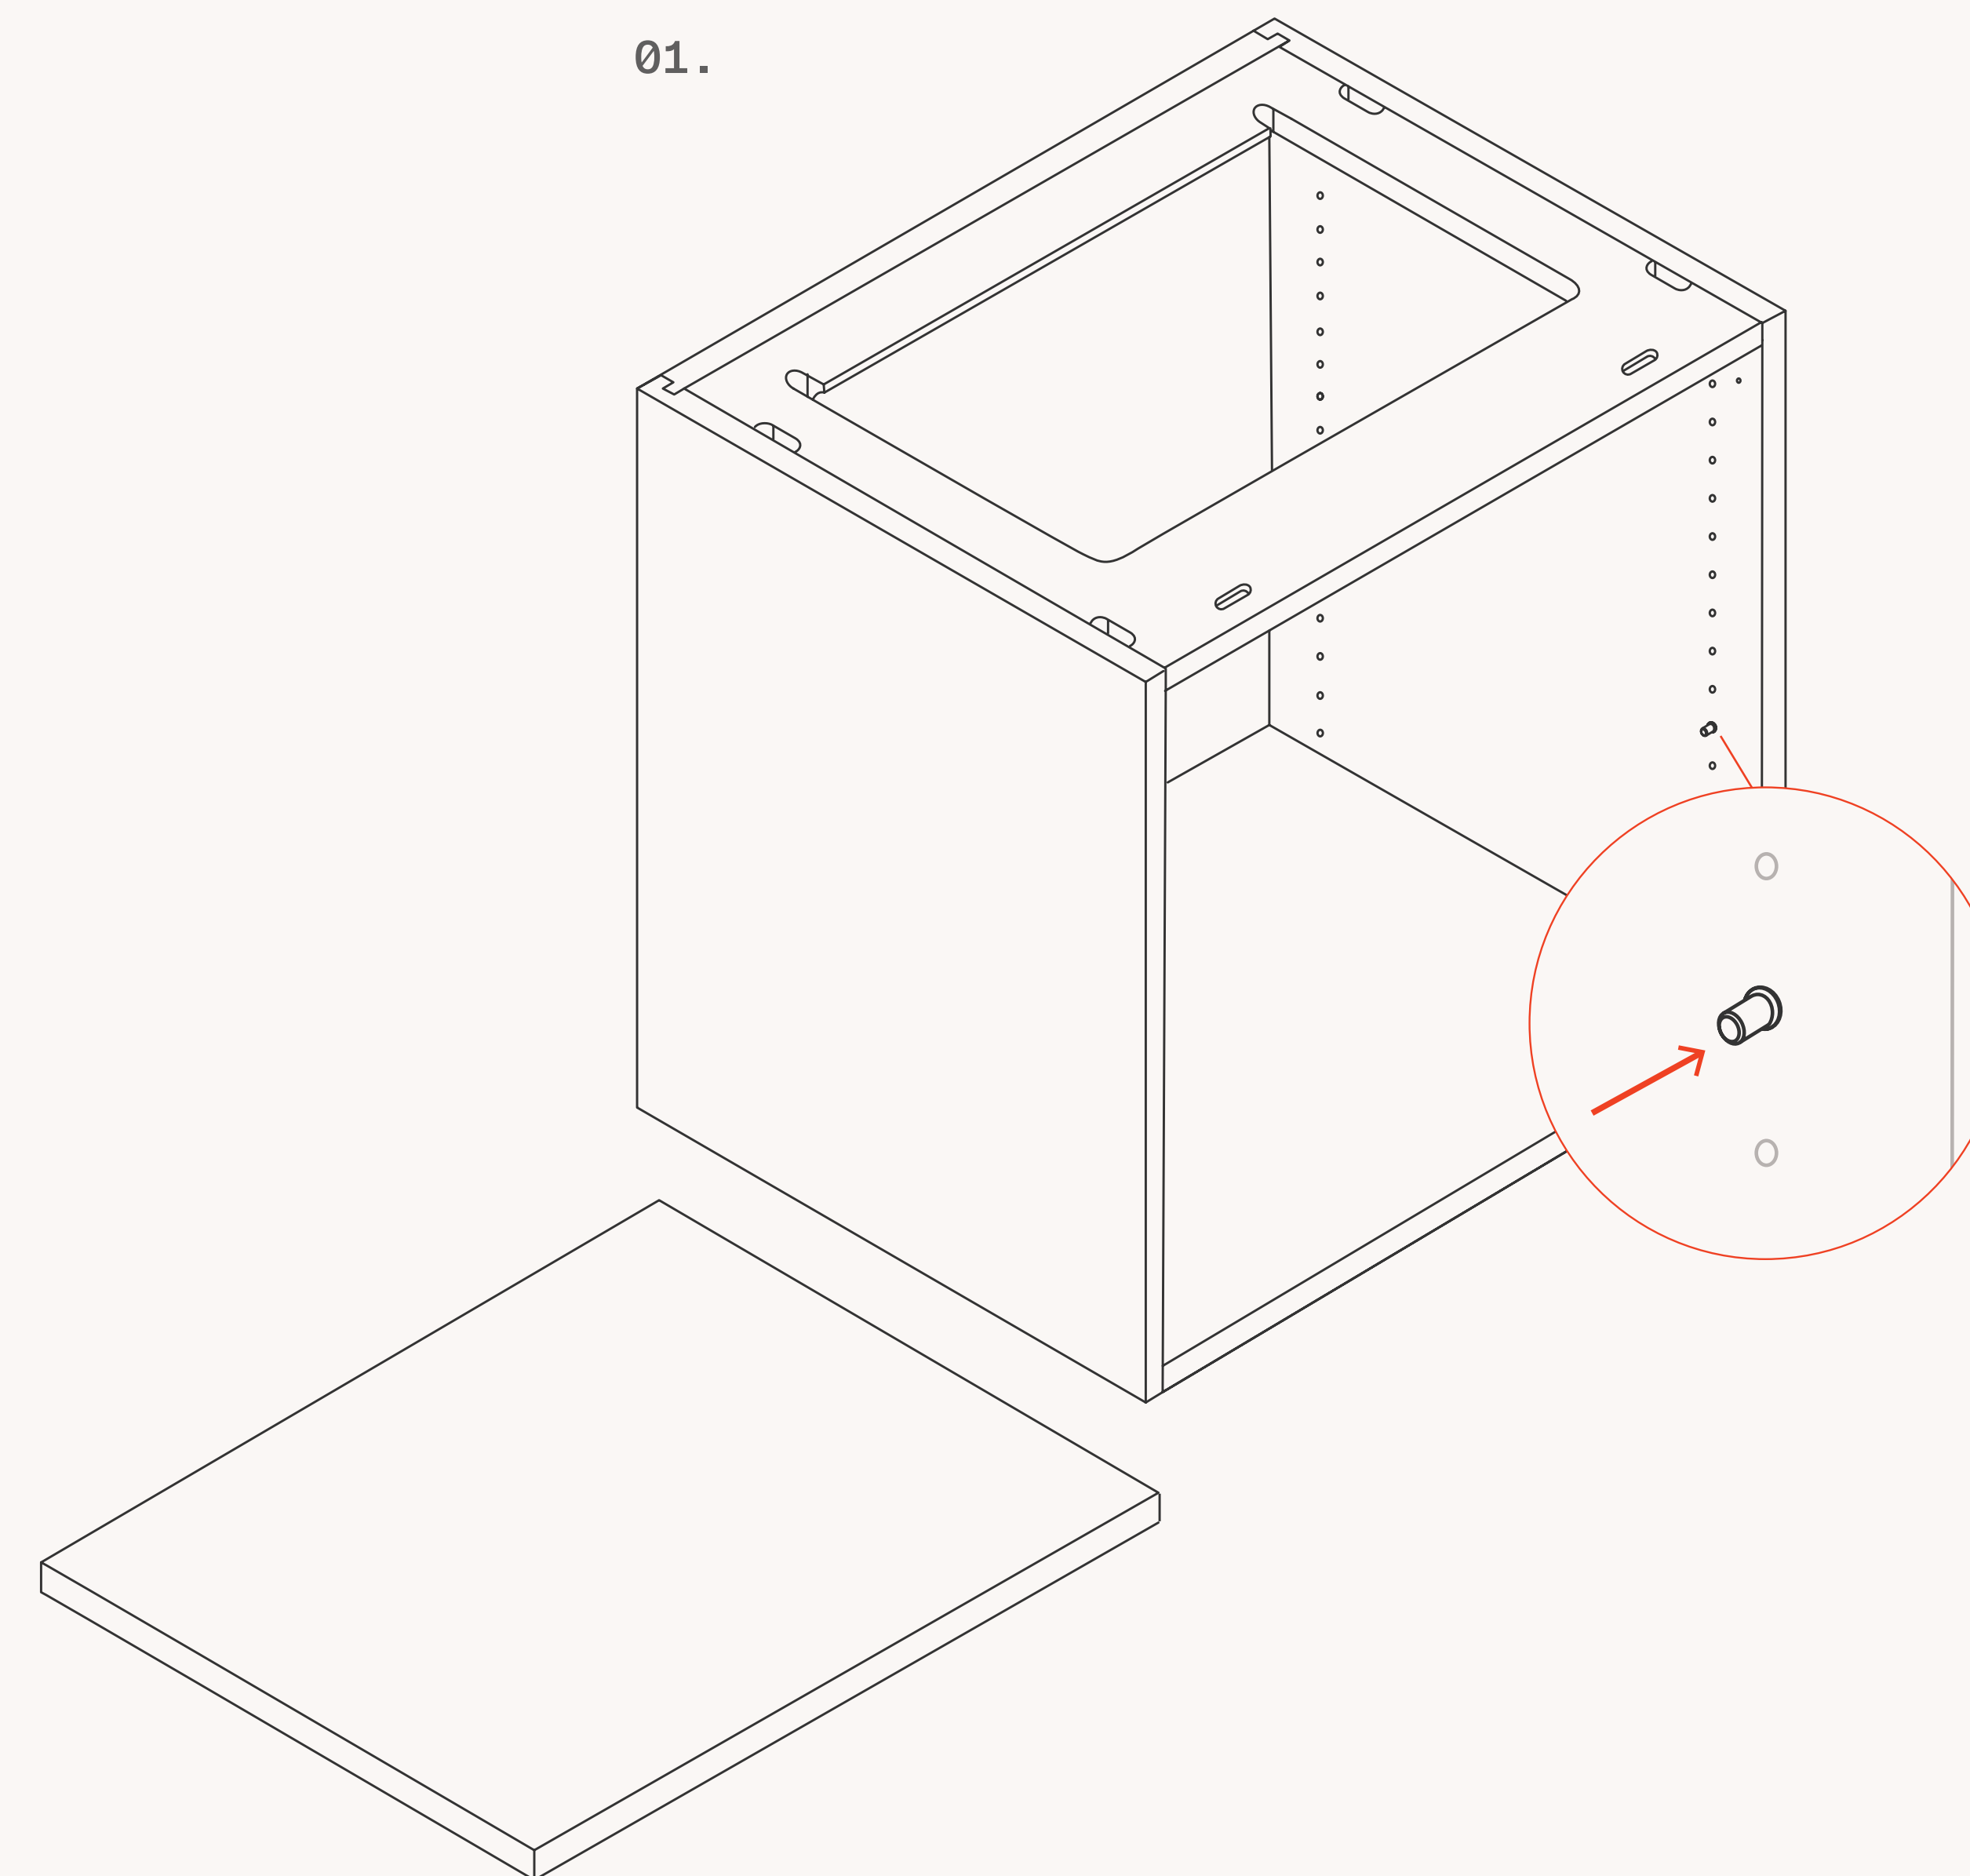



FLOYD

2 Door Unit

Open the hinges and align their plates to the appropriate holes on the inside of the case — making sure that the bullnosed edge of the door faces the top of the Unit and that the bottom of the Door is aligned to the base of the Unit.

Screw both hinge plates to the side of the case with the 4 provided Screws and tighten using a #2 Phillips-Head Screwdriver.

Repeat on opposite door to finish.

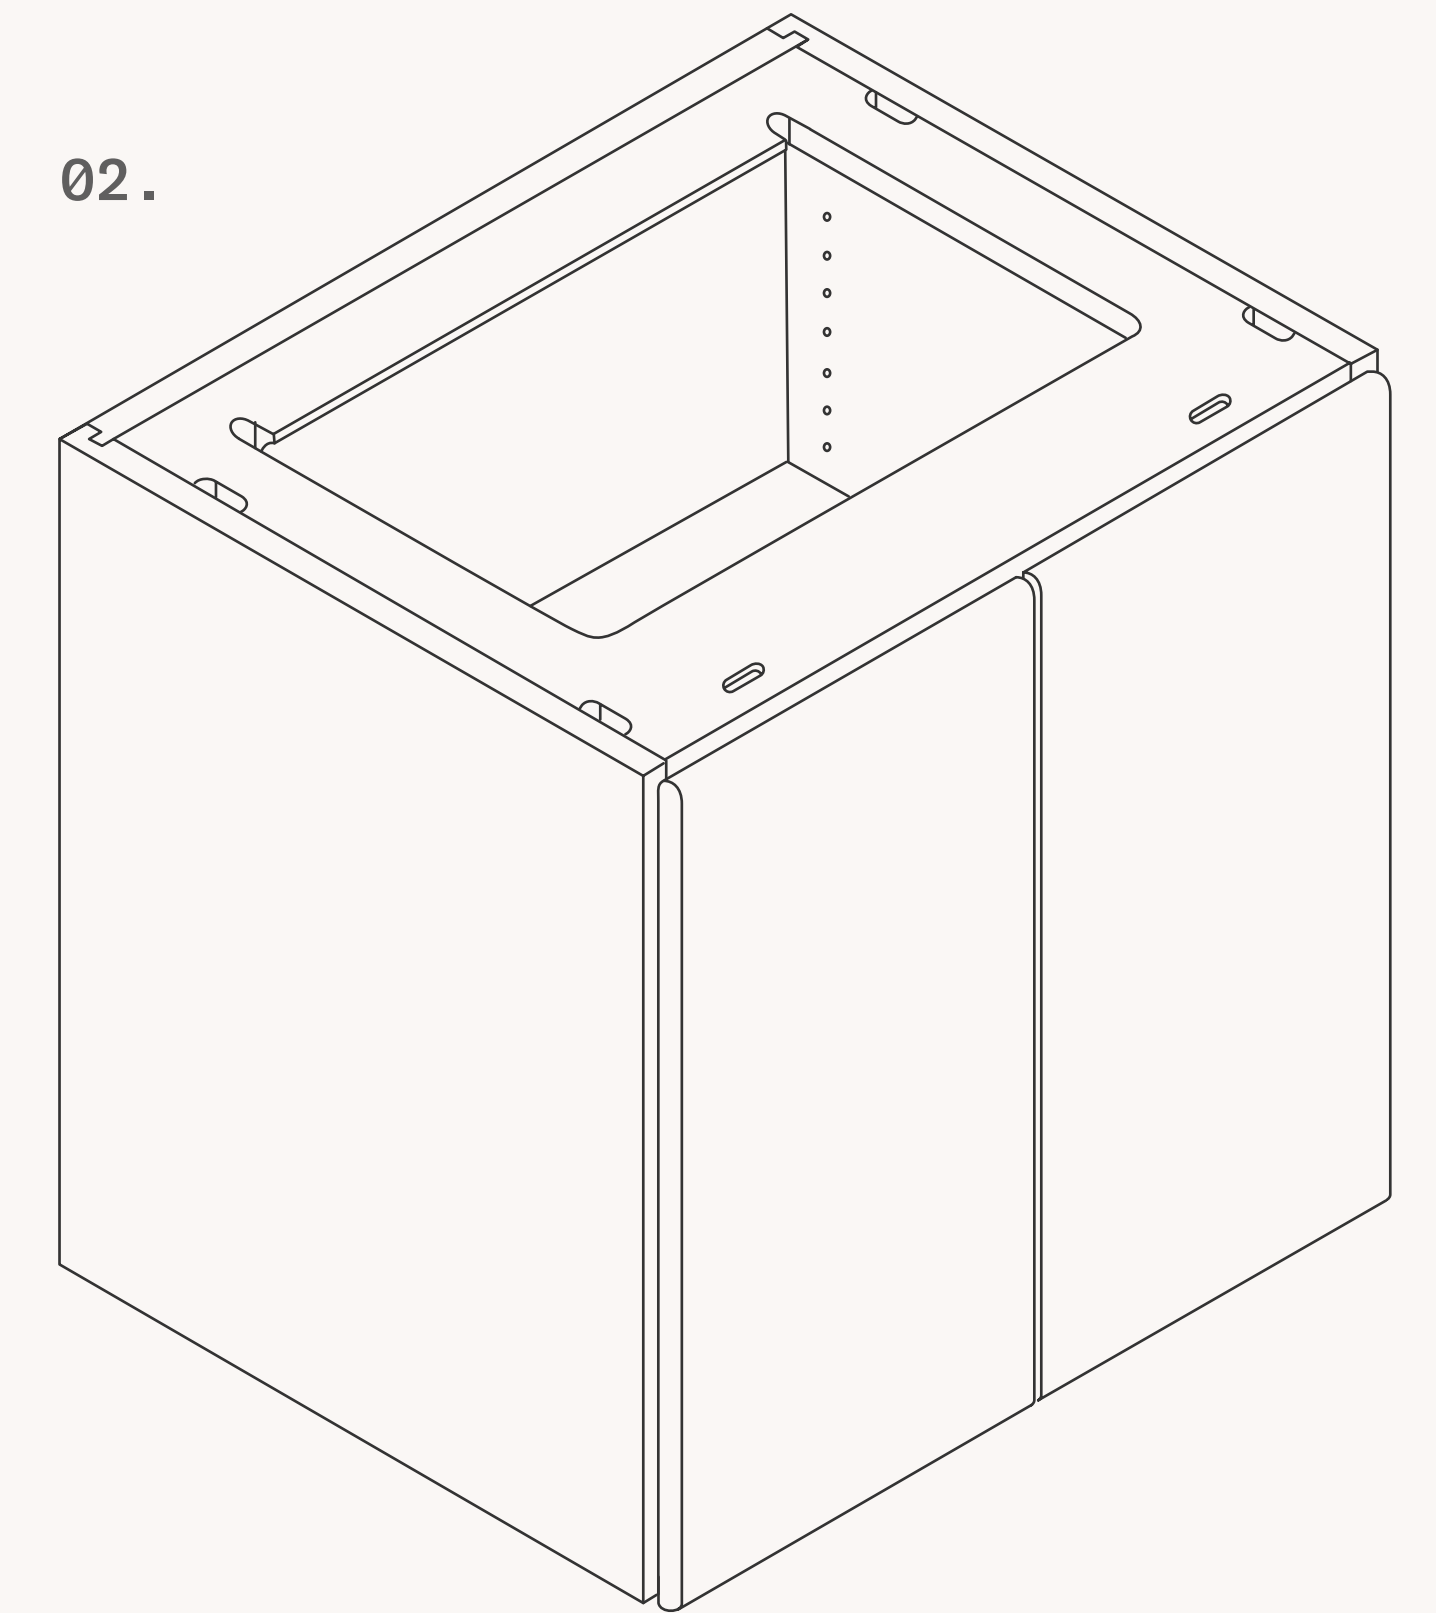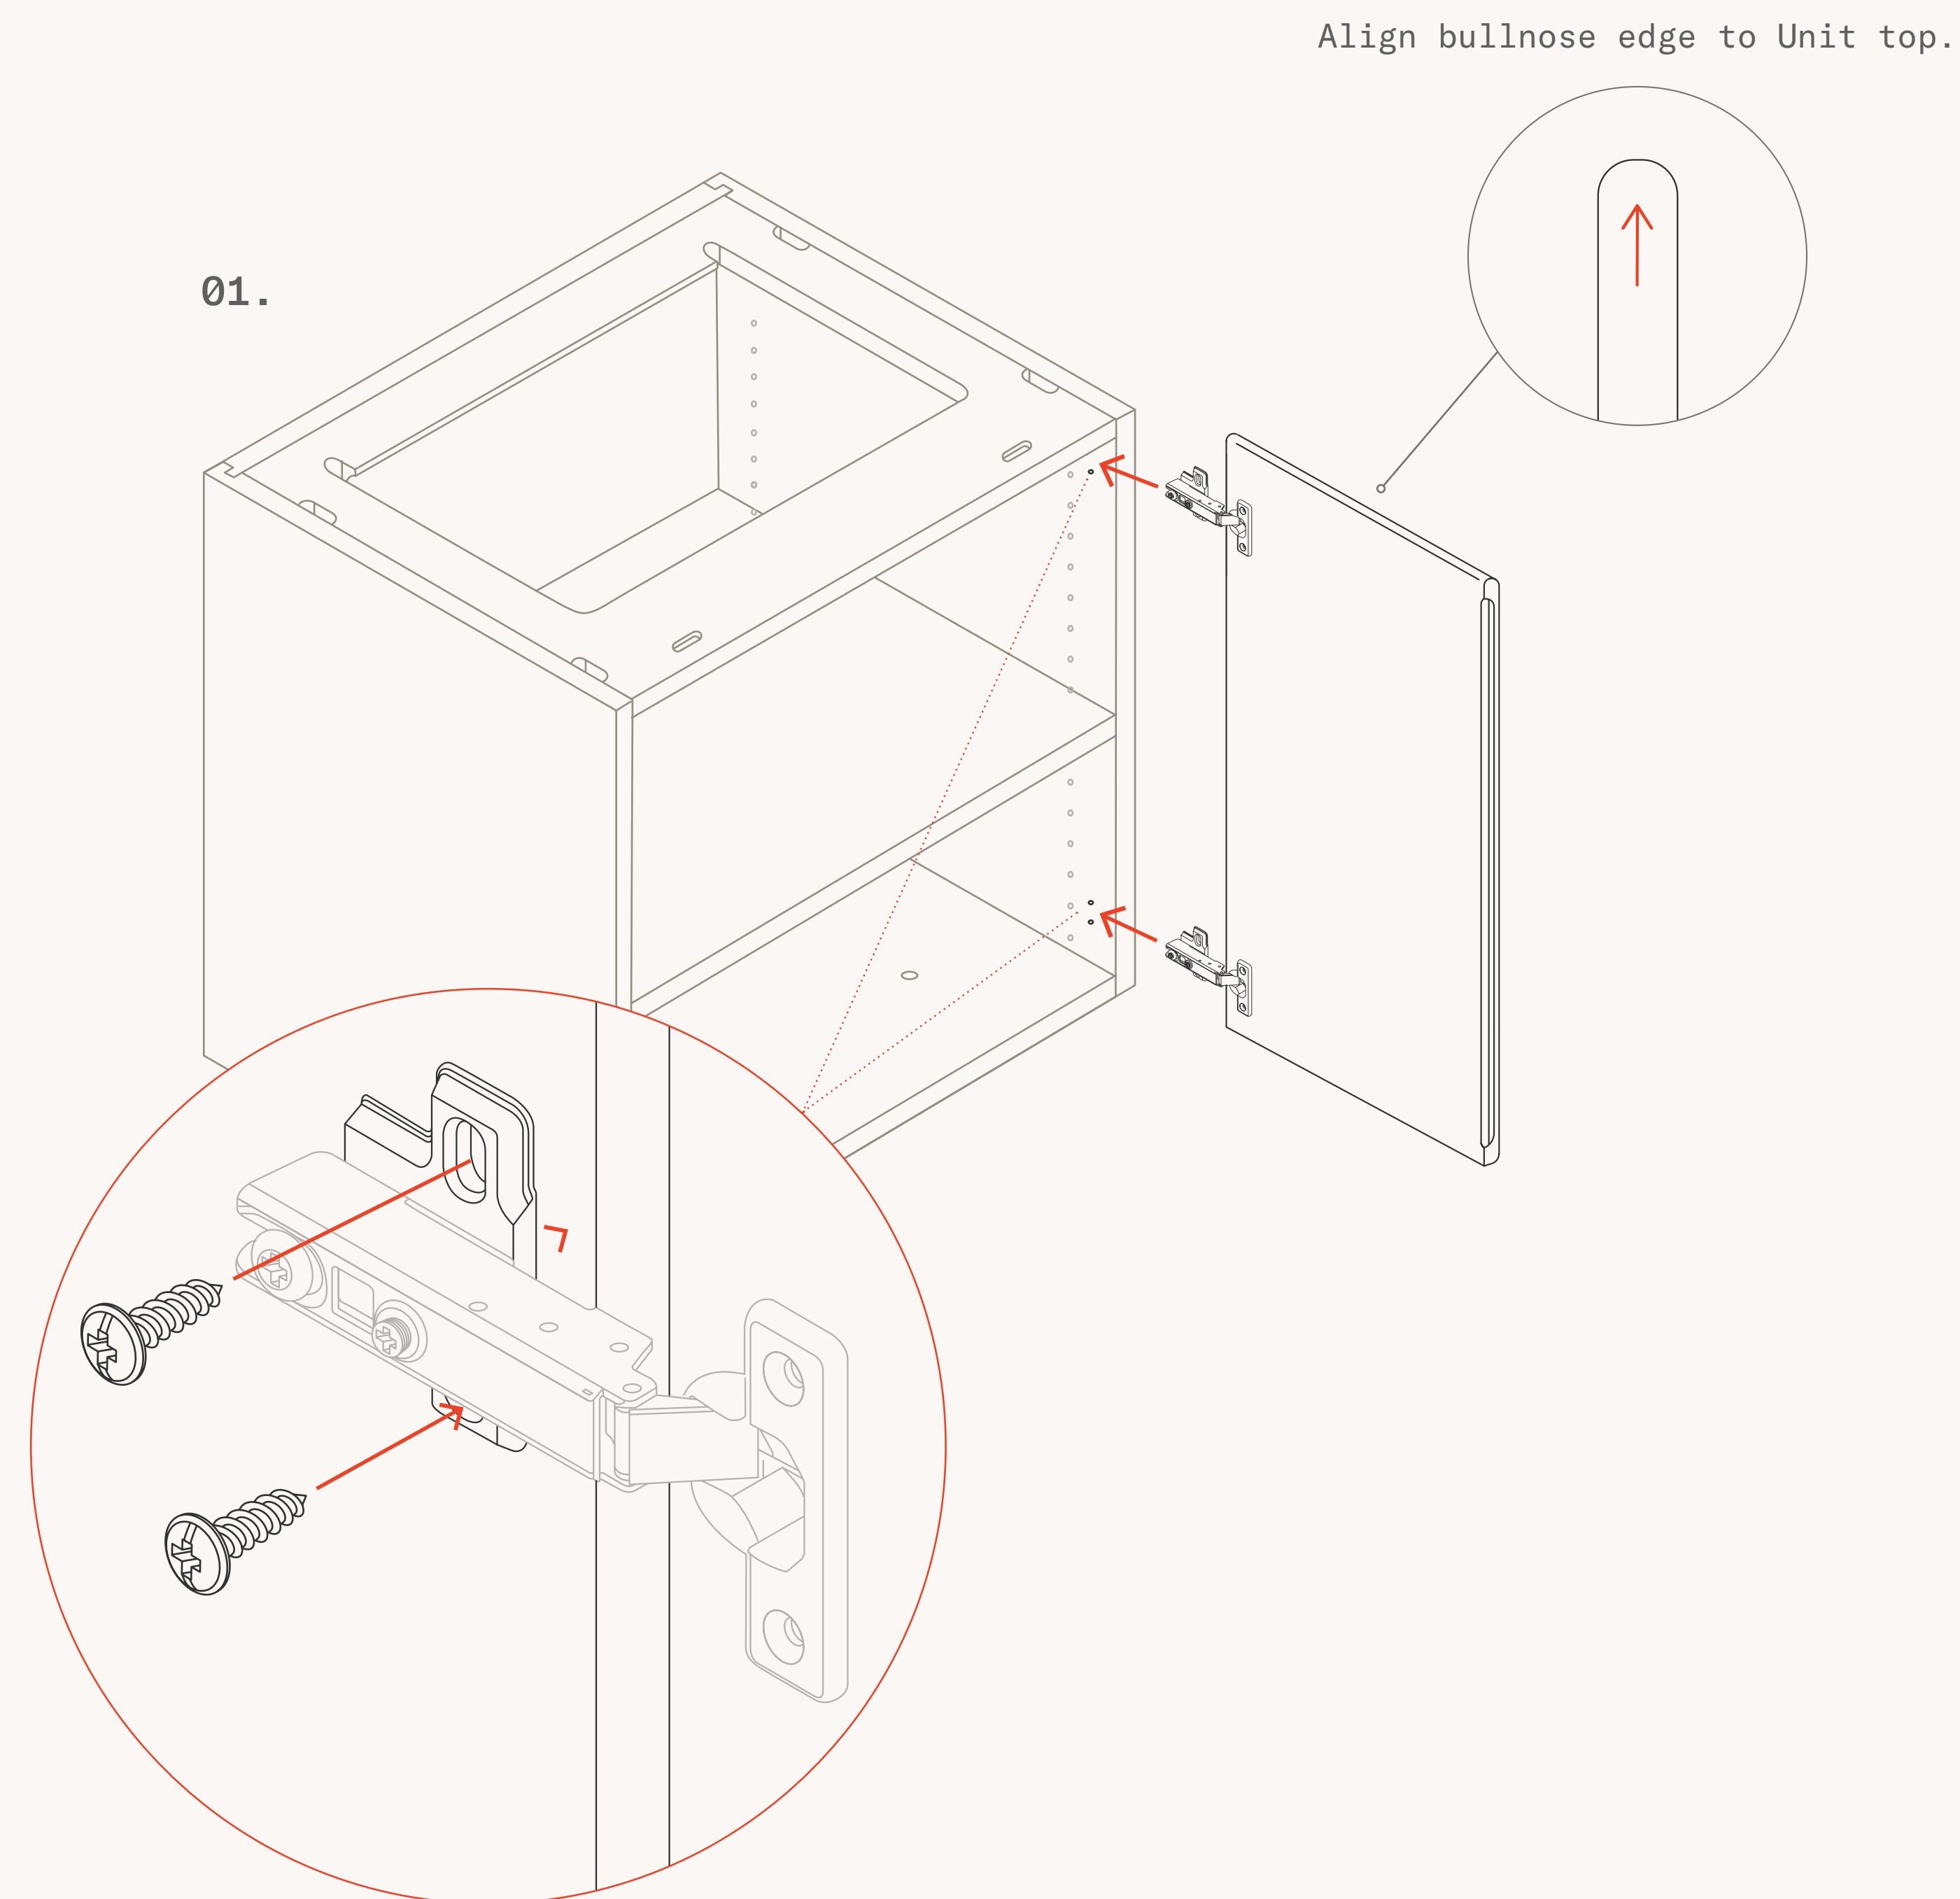


NOTE: For this step, you'll need a #2 Phillips-Head Screwdriver (not provided).

FLOYD

You're done!

With a partner, adjust your Dresser into its final position (if necessary), ensure all screws and bolts are firmly in place, and enjoy your new furniture.

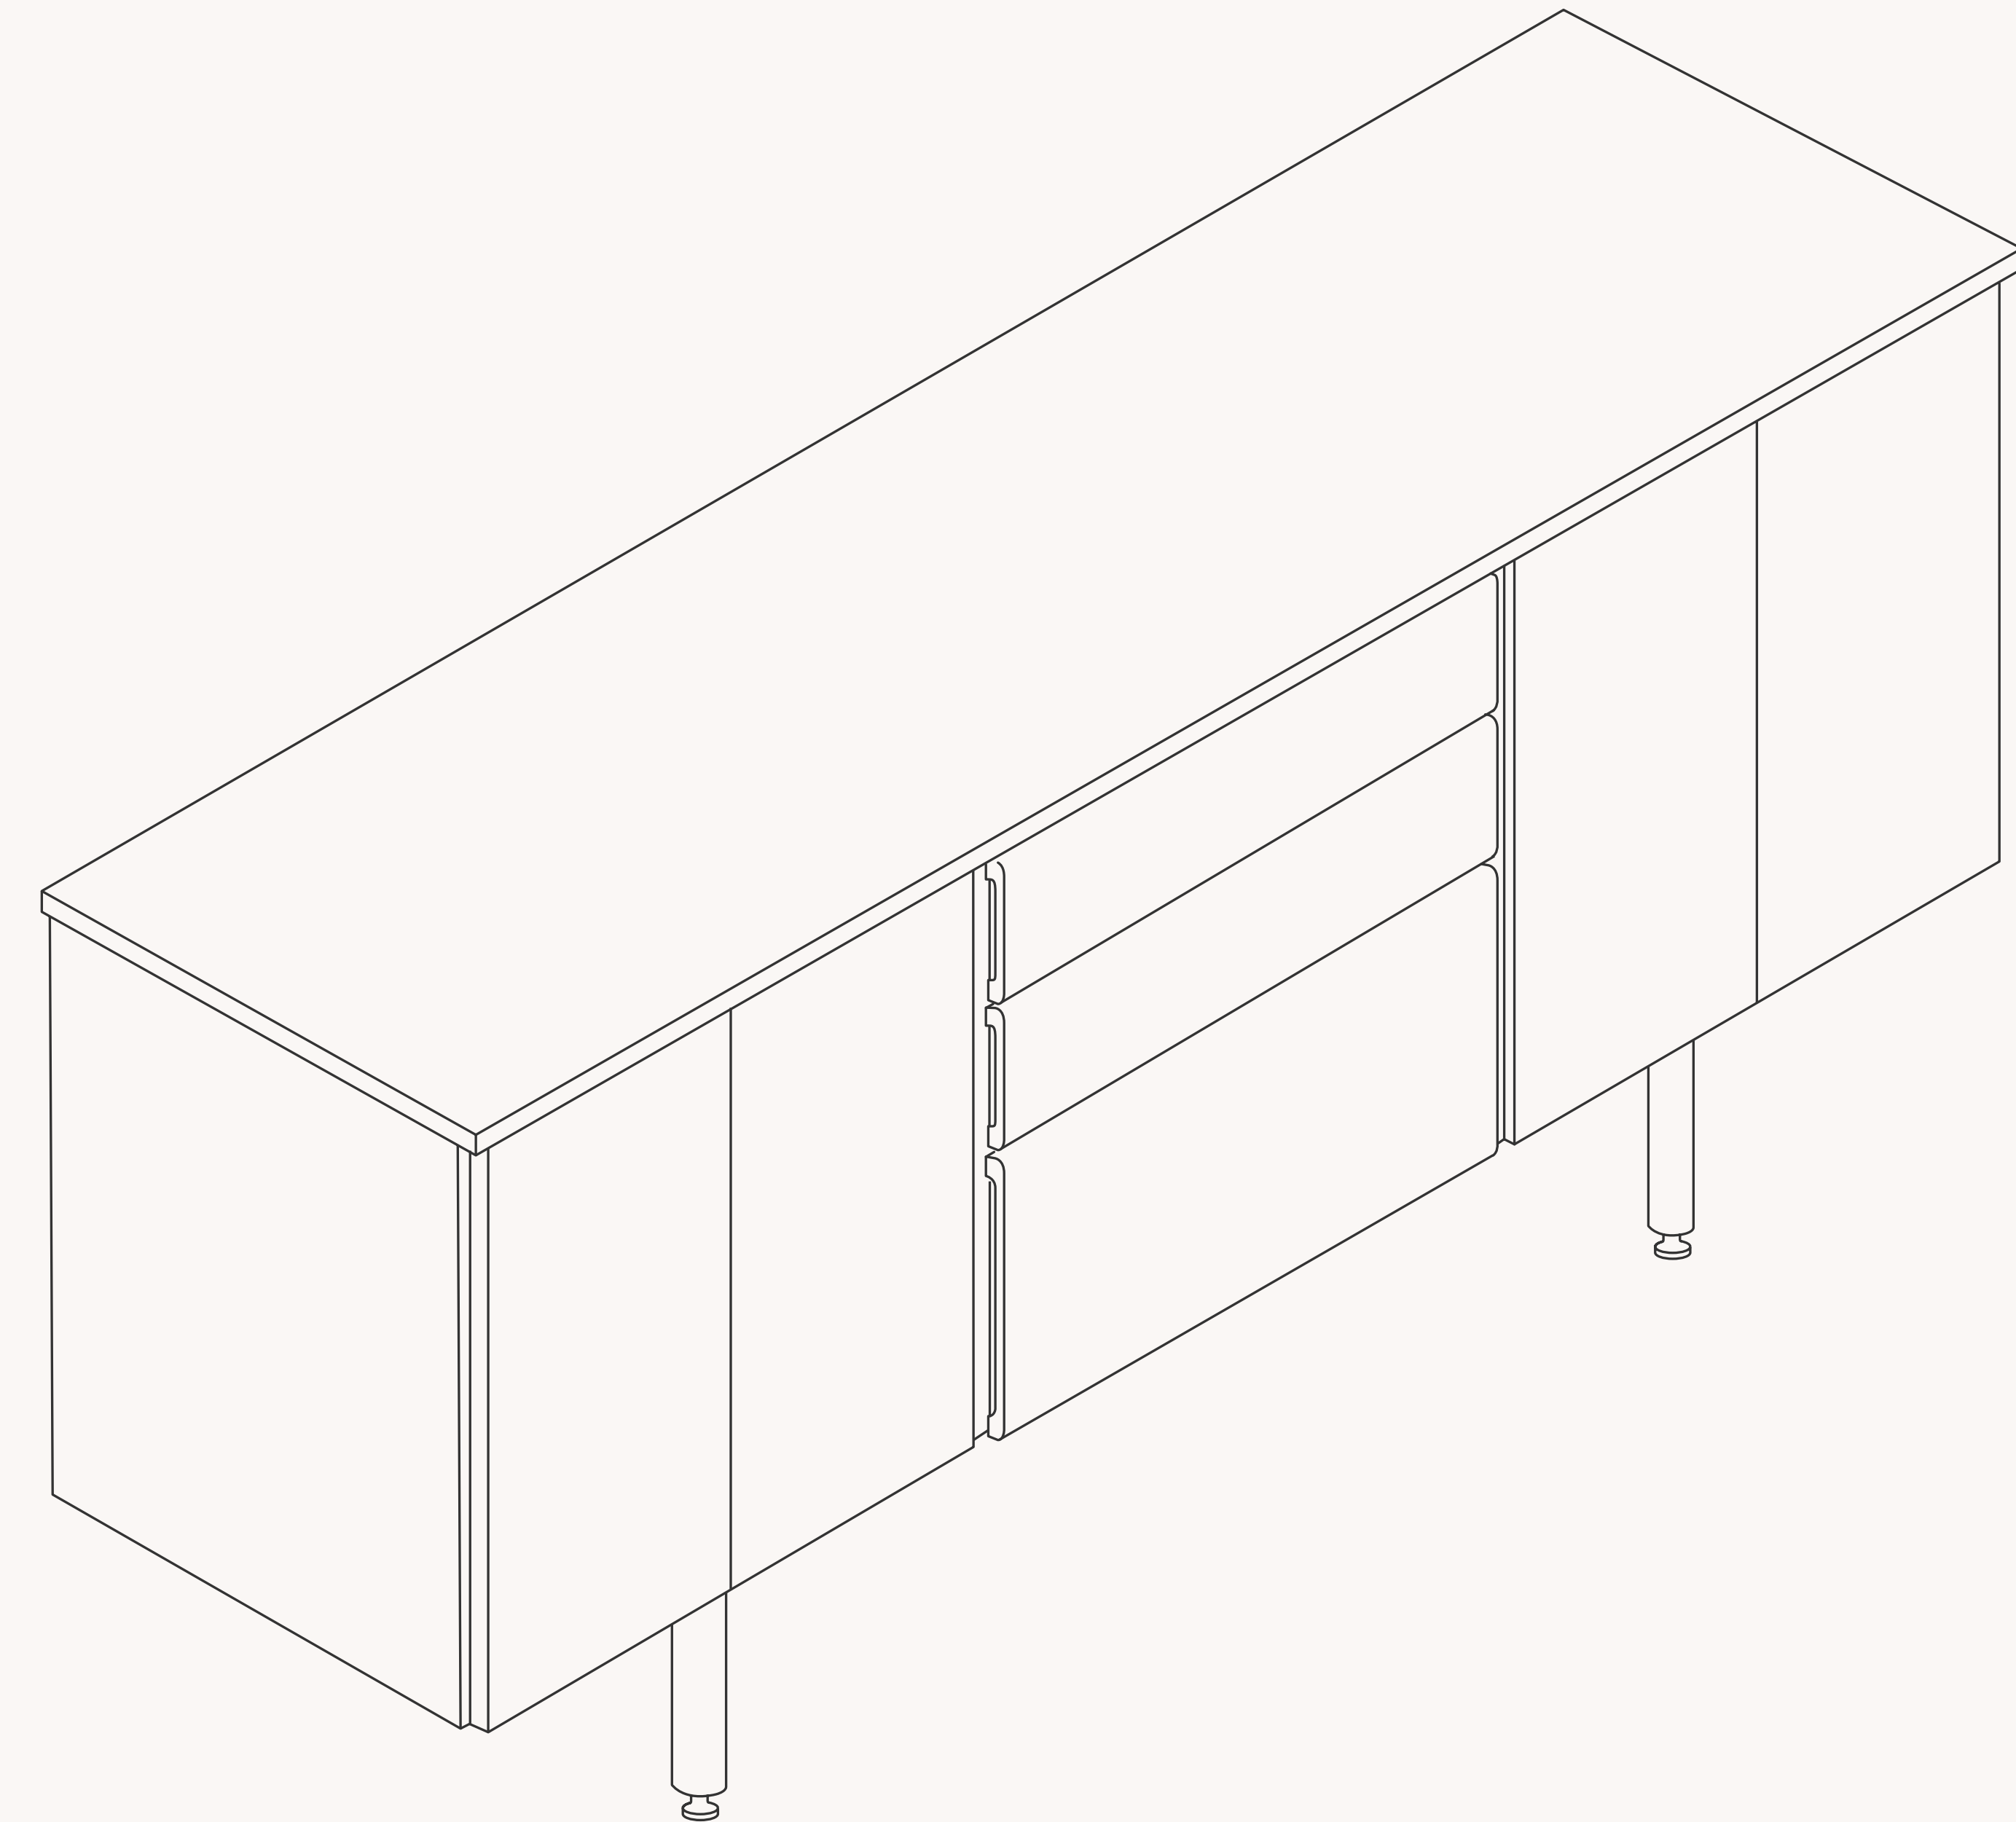

WARNING ⚠

READ ALL INSTRUCTIONS **BEFORE** ASSEMBLY & USE. ADULT ASSEMBLY REQUIRED. KEEP SMALL PARTS AND PACKAGING AWAY FROM CHILDREN.

NOTES ON USE:

Keep children and others safe by following these simple rules:

- Do not** allow any child to play on furniture
- Do not** allow climbing on any piece of furniture
- Do not** allow hanging from any piece of furniture

Assembly:

Use caution when assembling. Do not change the specifications or modify this product. Incorrect assembly can cause product to fail and cause damage or personal injury. Double check that product is assembled correctly and all components are properly tightened before use. Periodically re-tighten hardware.

Usage:

Remove all packaging before first use.
Only meant for indoor use.

Cleaning/Care:

Clean The Dresser with a dry or damp lint free cloth.

WARNING ⚠

Children have died from furniture tipover.

Serious or fatal crushing injuries can occur from furniture tip-over.

To reduce the risk of furniture tip-over:

ALWAYS install tip-over restraint provided.

NEVER put a TV on this product.

NEVER allow children to climb or hang on drawers, doors, or shelves.

NEVER open more than one drawer at a time.

Place heaviest objects in the lower drawers.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.



FLOYD