


FLOYD

How to Assemble:


The Upholstered Headboard Add-On

Components


1x Headboard Add-On
Queen or King

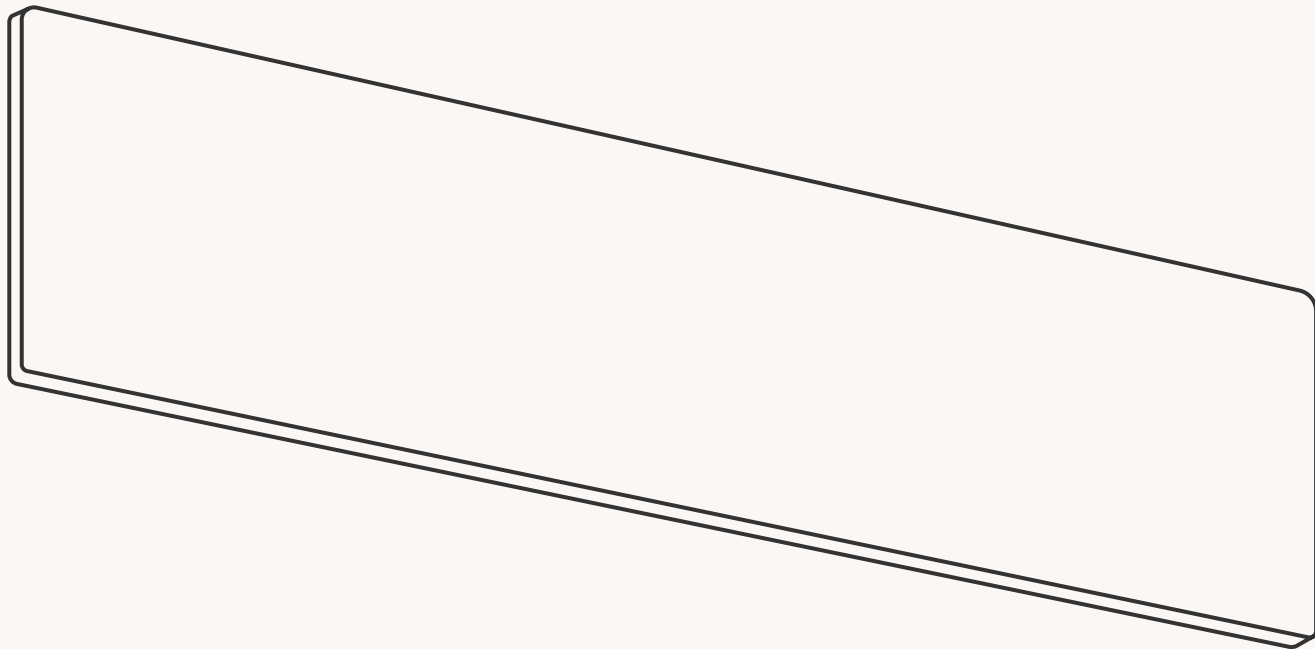


2x Metal Hooks

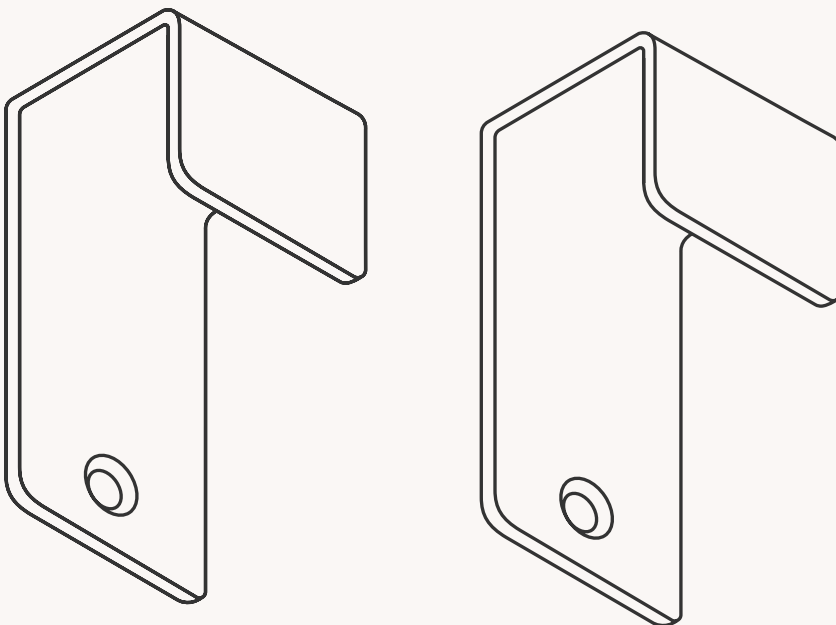


2x Adhesive-Backed Cork Pads

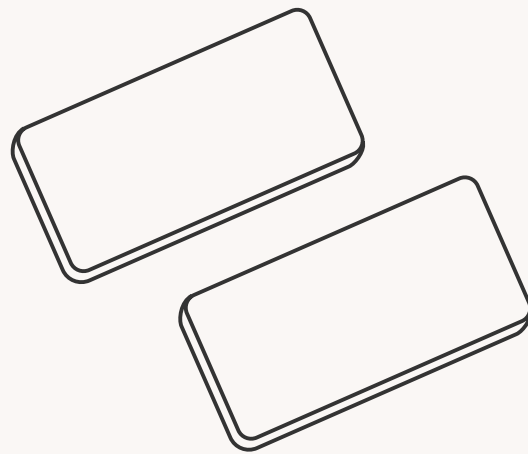

2x Bolts

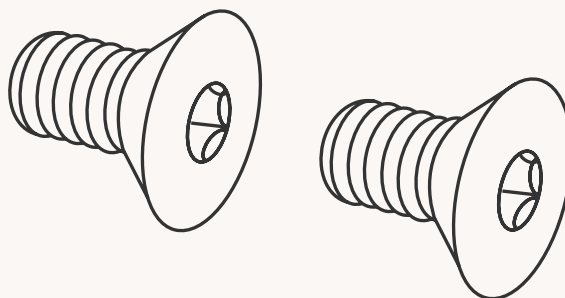


1x Hex Tool

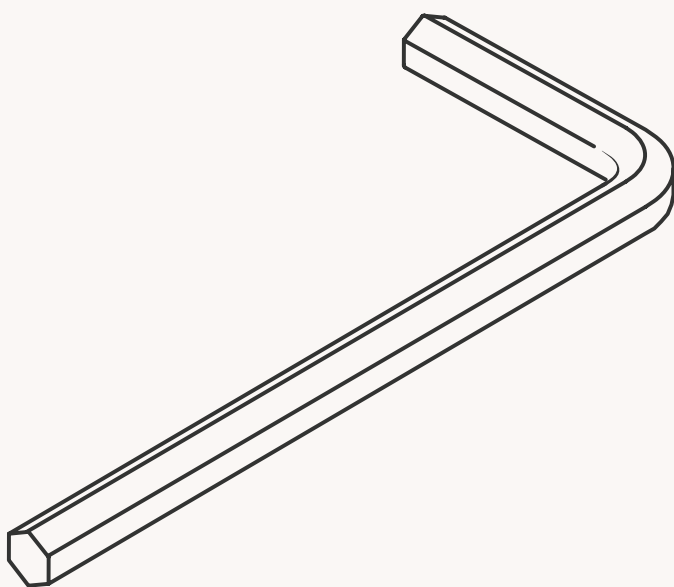

Pro Tip: If you're considering a return, save your packaging!


Step: 1 of 3

Remove the adhesive backing and adhere Cork Pads to the underside of the Metal Hooks.

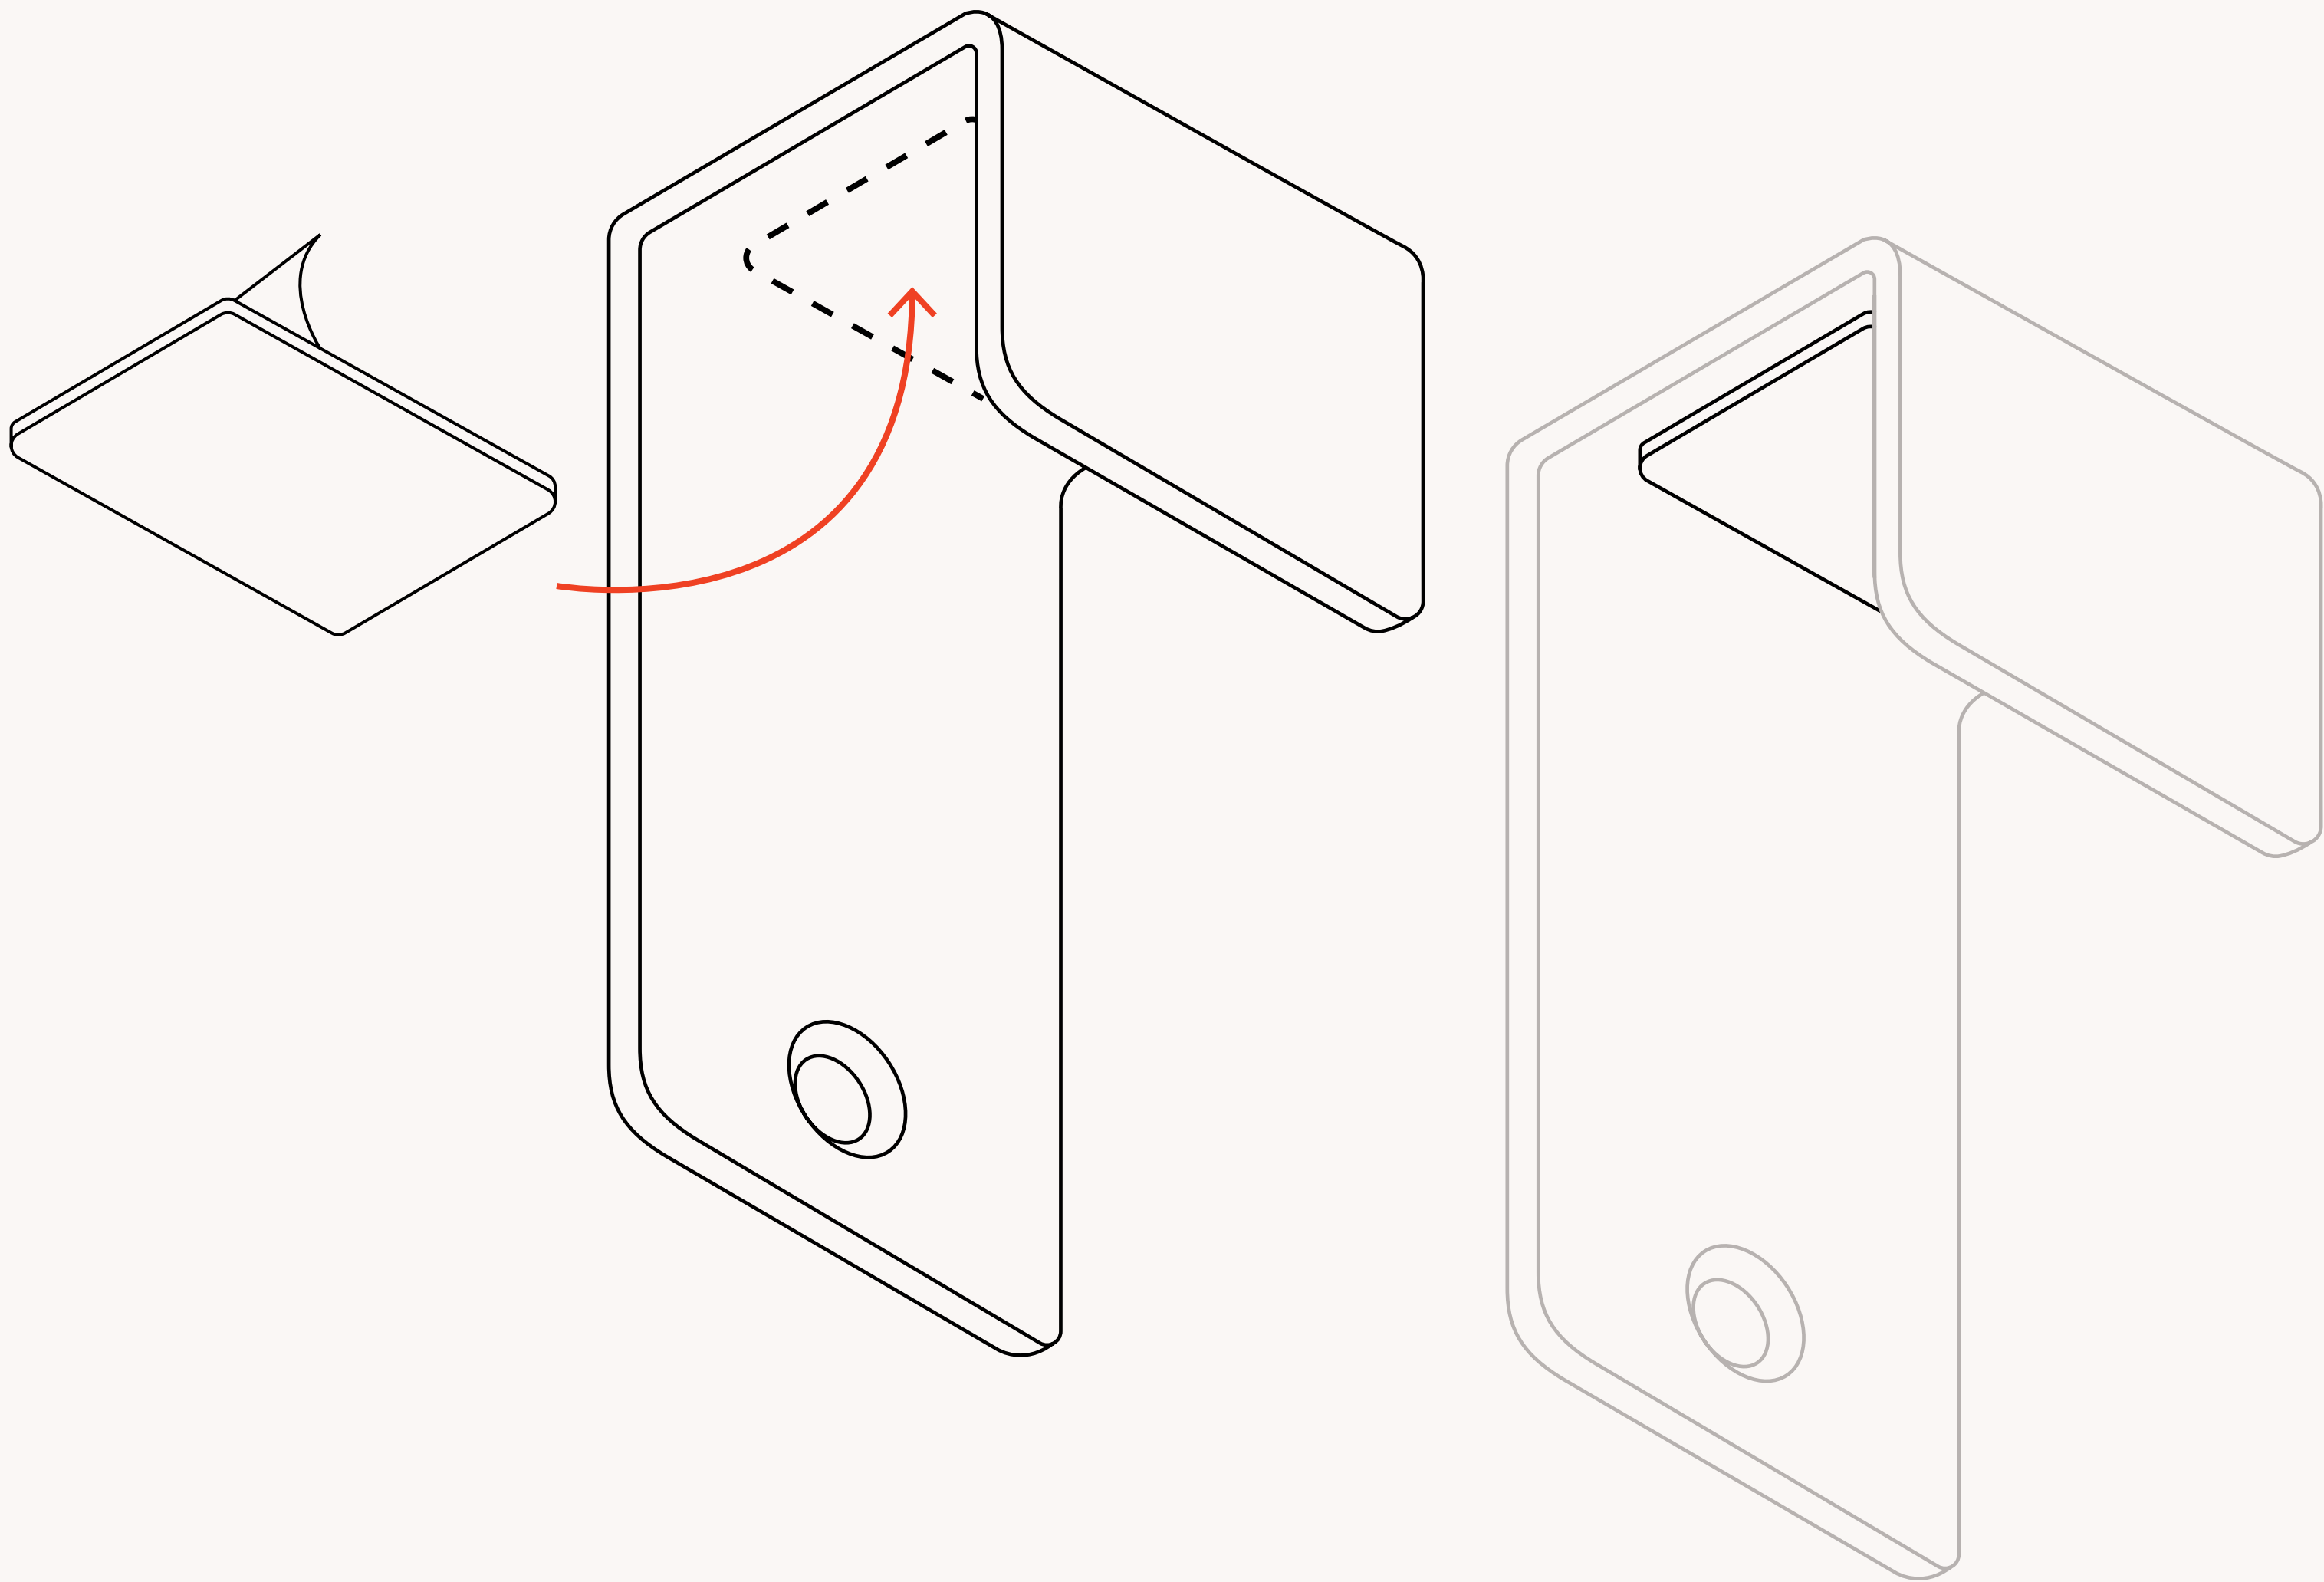


Step: 2 of 3

Attach the metal hooks to the back of the Headboard Add-On with the provided Bolts. Use the Hex Tool to fully tighten each Bolt.

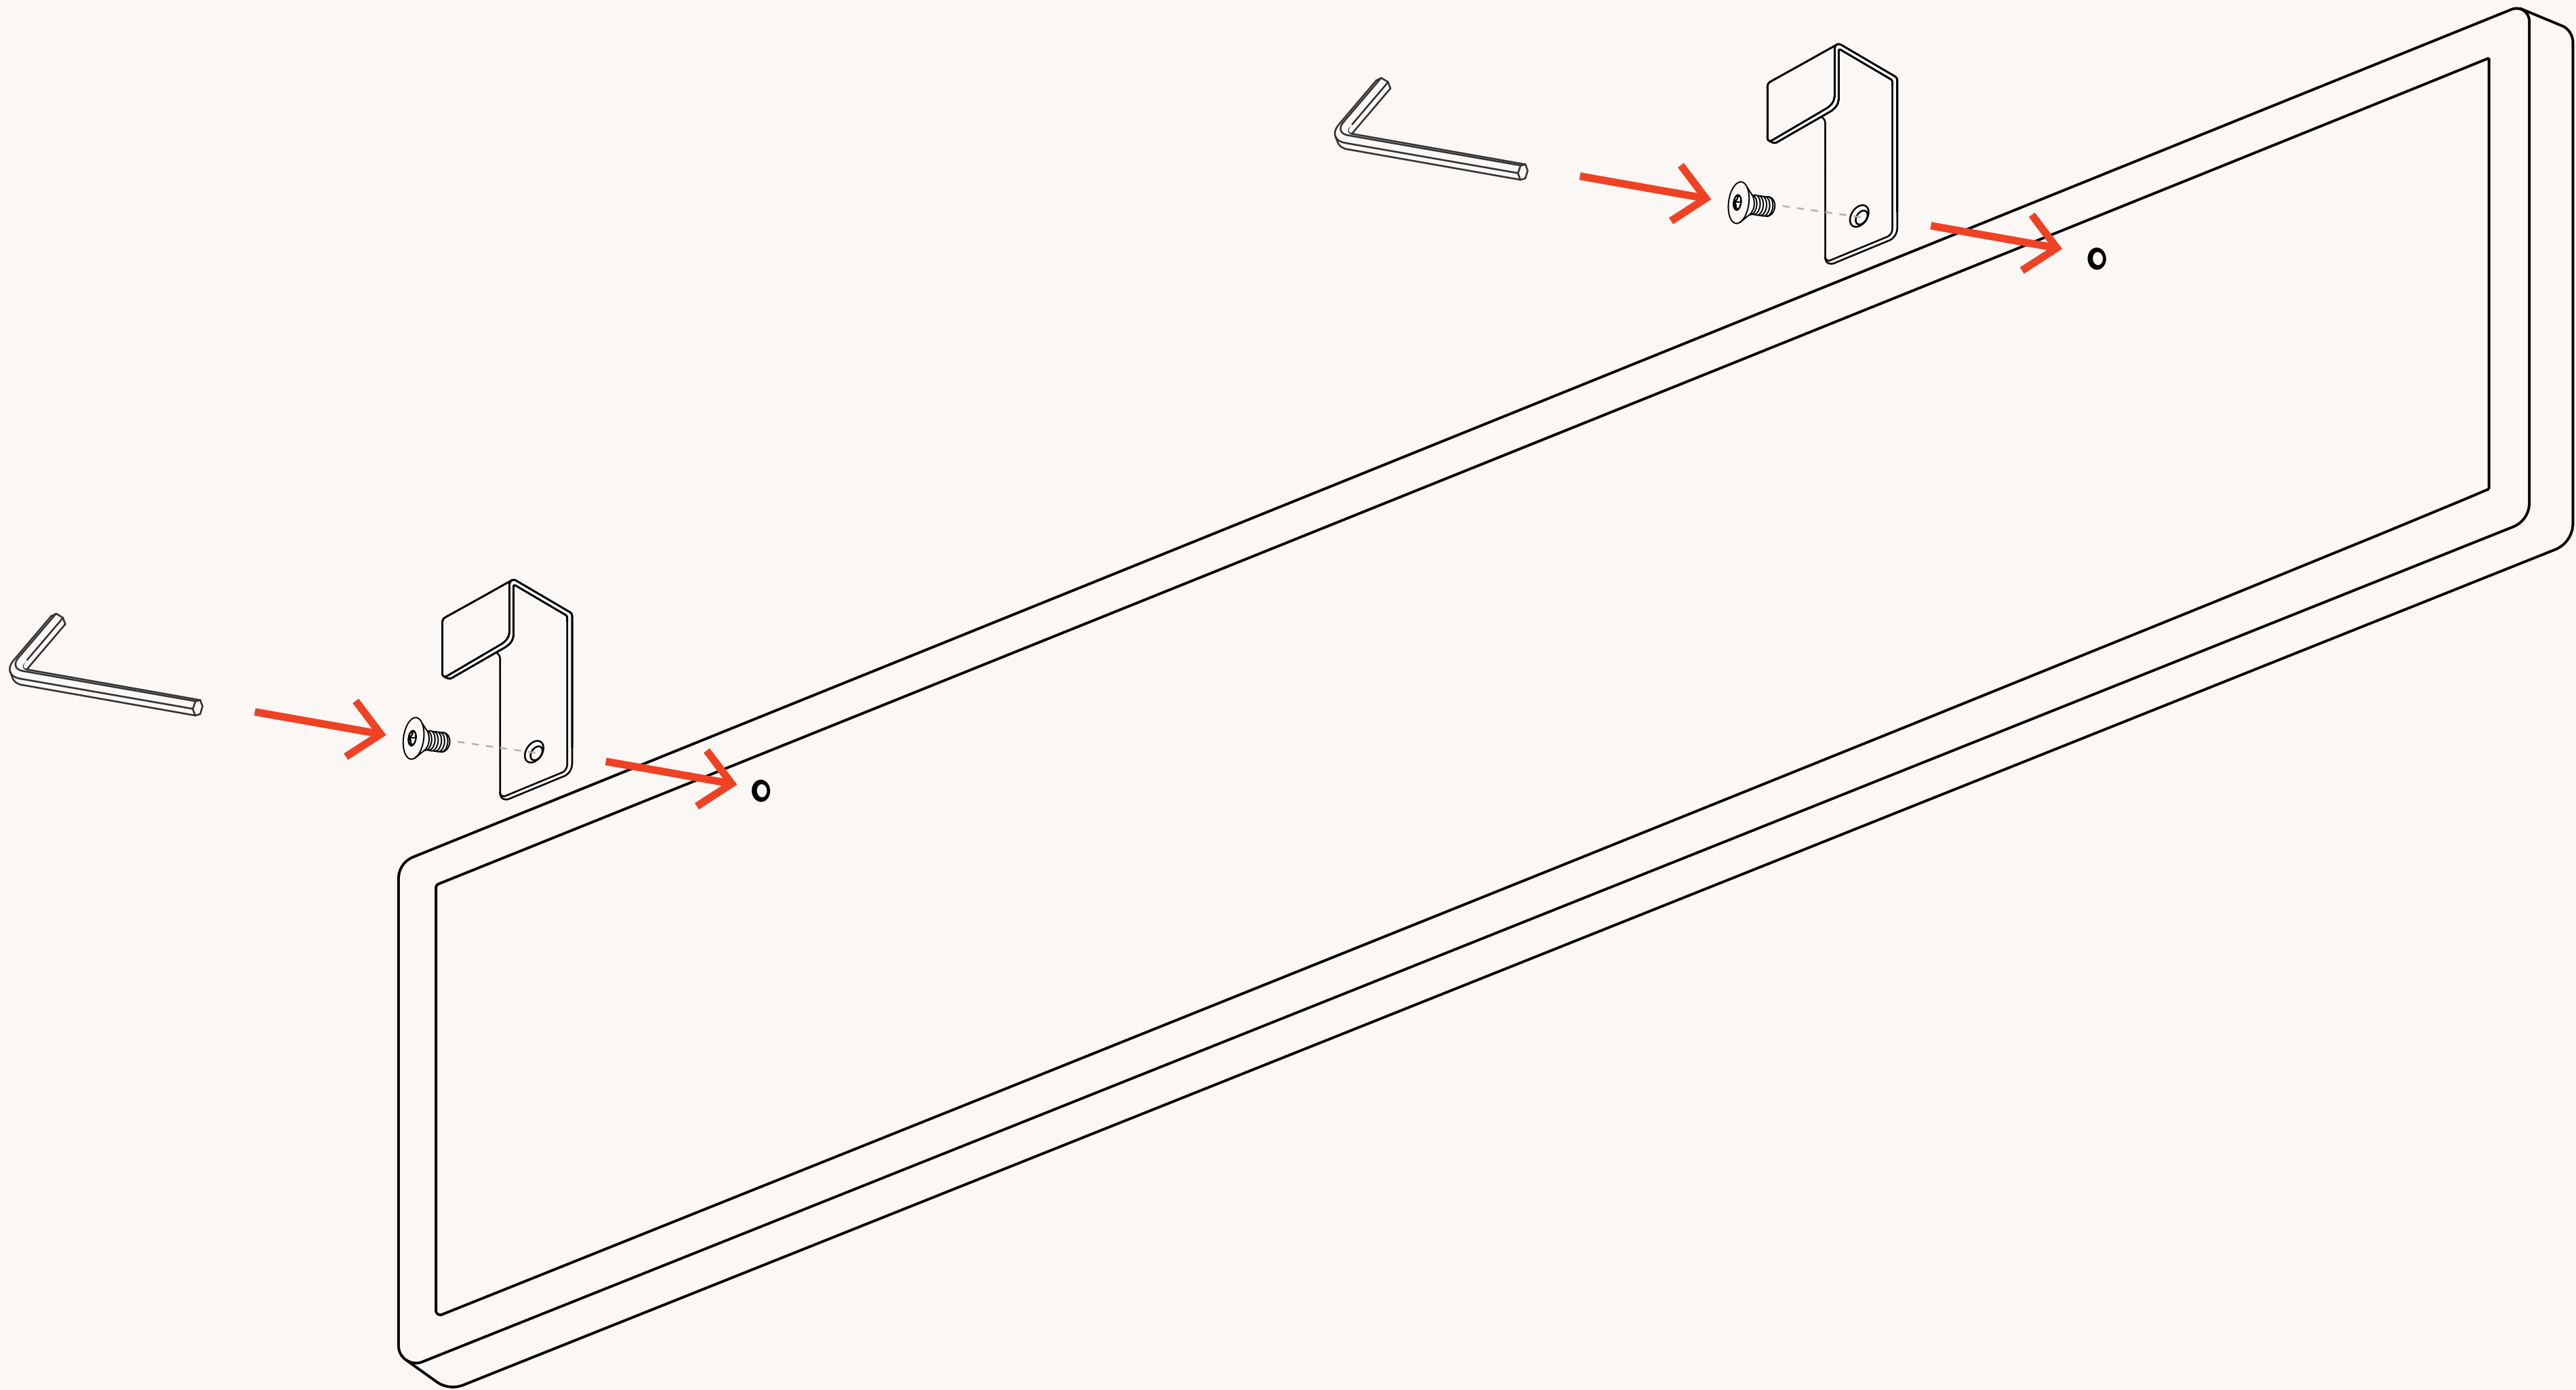


Step: 3 of 3

Hang the Headboard Add-On over the back of the existing Headboard.

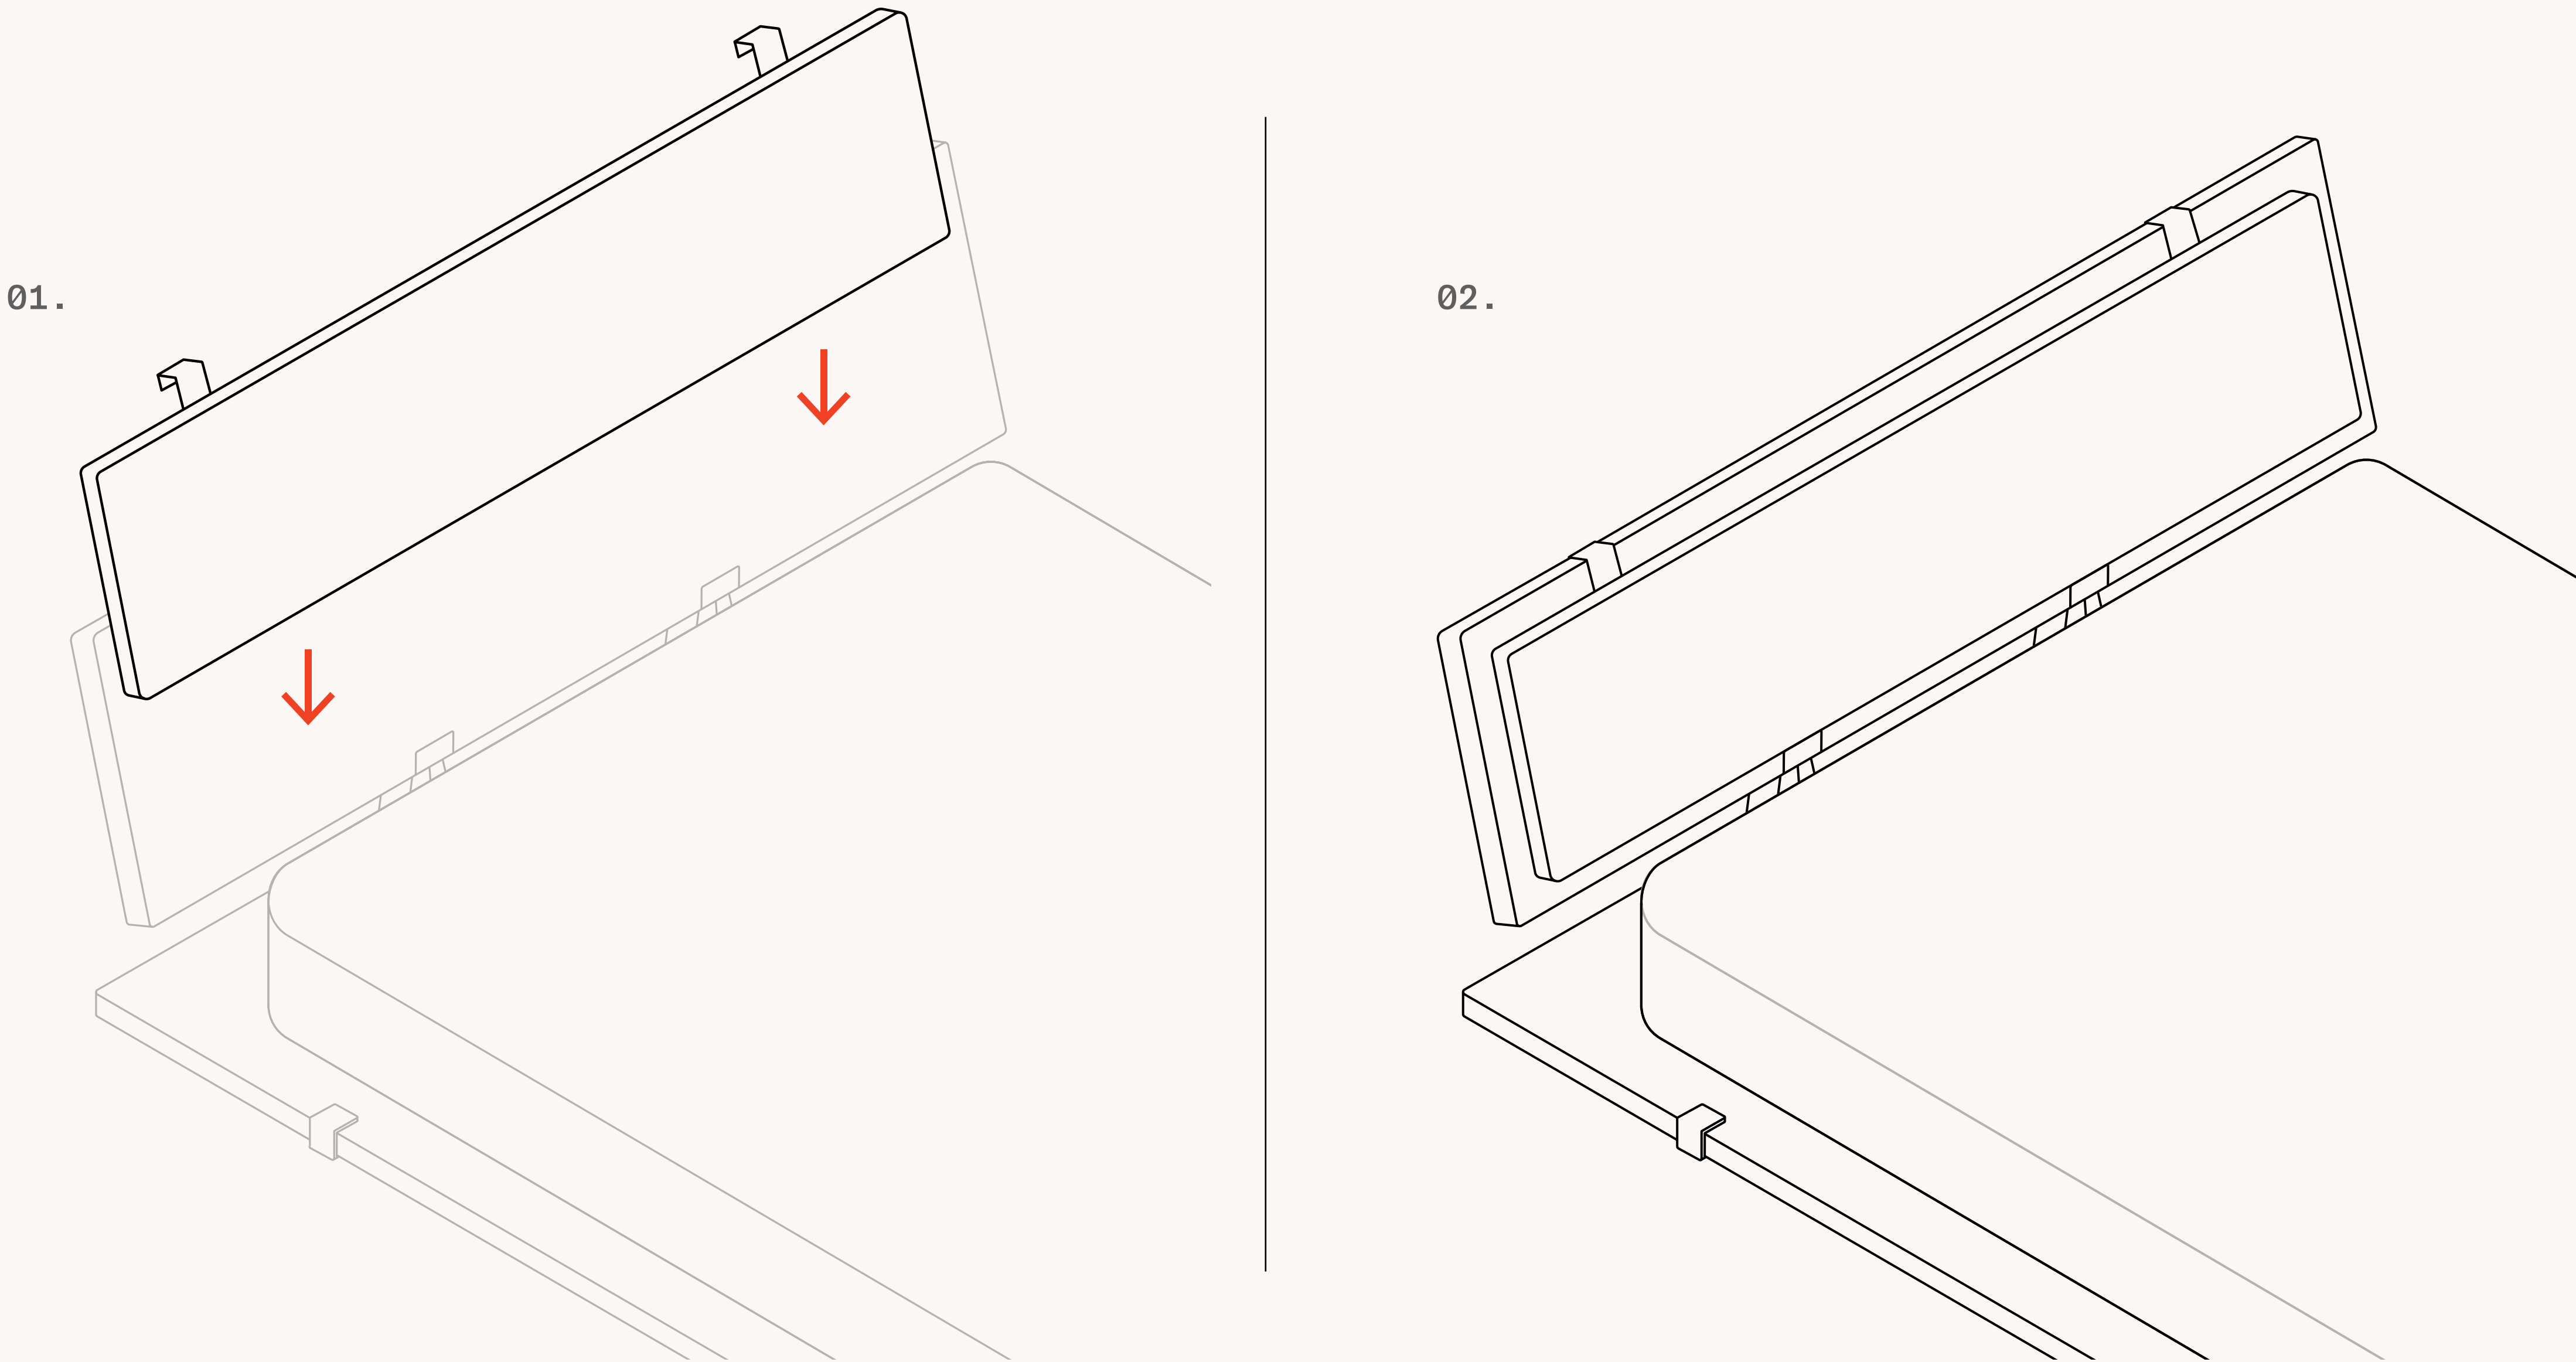

You're done! Enjoy the new addition to your Floyd Bed.

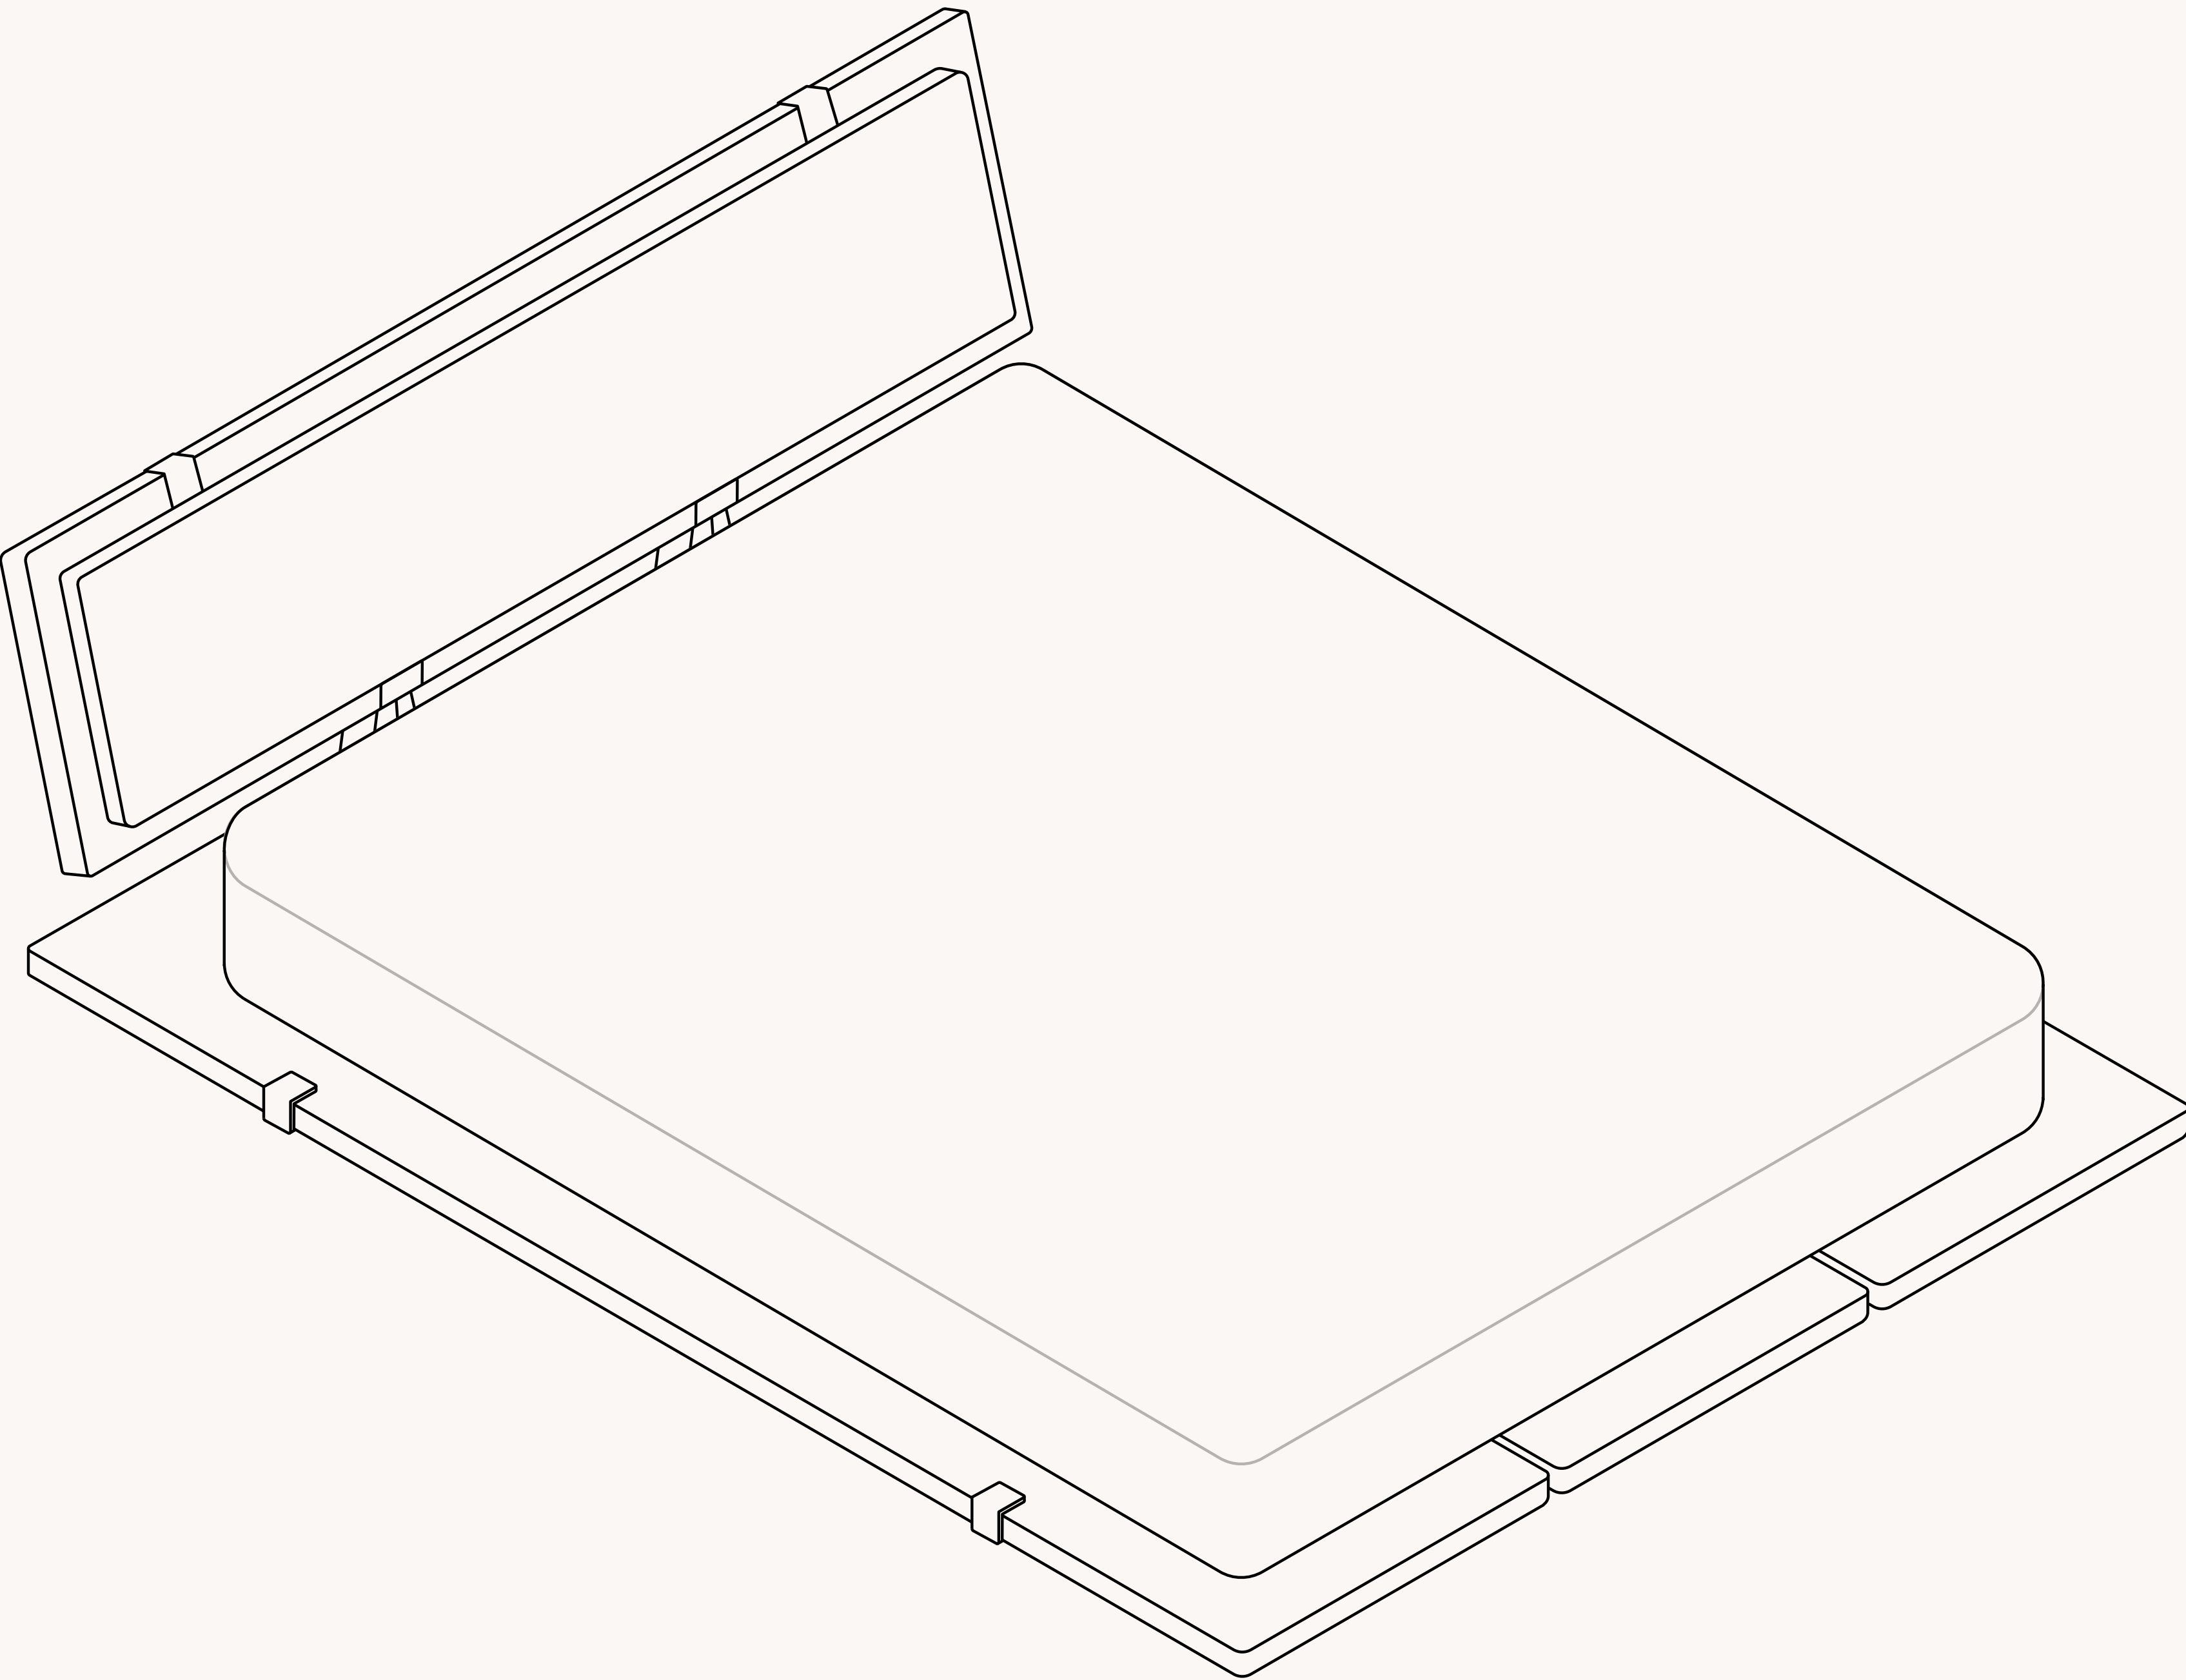

WARNING ⚠

READ ALL INSTRUCTIONS BEFORE ASSEMBLY & USE. ADULT ASSEMBLY REQUIRED. KEEP SMALL PARTS AND PACKAGING AWAY FROM CHILDREN

NOTES ON USE:

Keep children and others safe by following these simple rules:
Do not allow any child to play on furniture.
Dispose of plastic packaging, children can crawl inside and suffocate.

Notice:

This article meets the flammability requirements of California Bureau of Household Goods and Services technical bulletin 117-2013. Care should be exercised near open flame or with burning cigarettes. The upholstery materials in this product contain no added flame retardant chemicals.

The state of California has updated the flammability standard and determined that the fire safety requirements for this product can be met without adding flame retardant chemicals. The state has identified many flame retardant chemicals as being known to, or strongly suspected of, adversely impacting human health or development.

Usage:

Remove all packaging before first use.
Only meant for indoor use.

Cleaning/Care:

Spot clean only. Brush off loose dirt and wipe with a damp cloth using soap and water or use proprietary upholstery shampoo. For deeper cleaning, steam clean with water only.

FLOYD