FLOYD

HOW TO ASSEMBLE:


The Upholstered Bed Add-On

COMPONENTS

1x LEFT SIDE



1x RIGHT SIDE

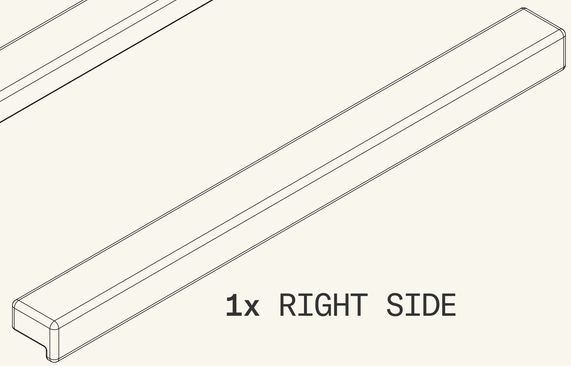


*** 1x** BACK




1x FRONT

***** BACK MAY OR MAY NOT BE INCLUDED DEPENDING ON CONFIGURATION

2x LARGE BRACKETS

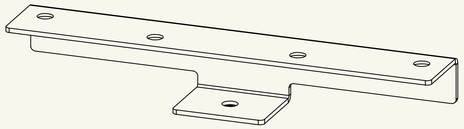


2x SMALL BRACKETS




1x HEX KEY




16x M8 BOLTS

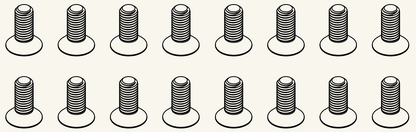


***** ONLY 12x** M8 BOLTS PROVIDED
FOR BEDS WITH HEADBOARD ASSEMBLY

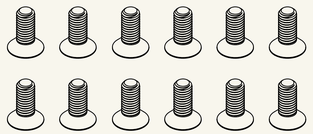


6x THUMB SCREWS

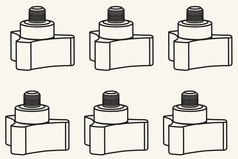

***** ONLY 4x** THUMB SCREWS PROVIDED
FOR BEDS WITH HEADBOARD ASSEMBLY

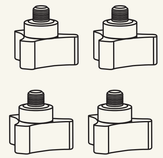

****1x** HEADBOARD

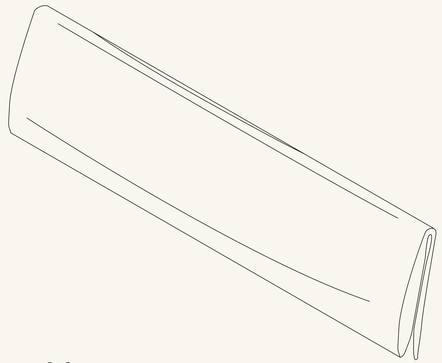

****** BACK MAY OR MAY NOT BE INCLUDED
DEPENDING ON CONFIGURATION

Step: 1

Attaching your Upholstered Bed Add-On


1A

Preparing your Upholstered Bed Add-On.

First, start by attaching 1 large bracket and 1 small bracket to the left and right side add-ons using 2 bolts for each bracket via the hex key.

*** For queen bed configurations attach the brackets to the inner set of holes.

*** For king bed configurations attach the brackets to the outer set of holes.

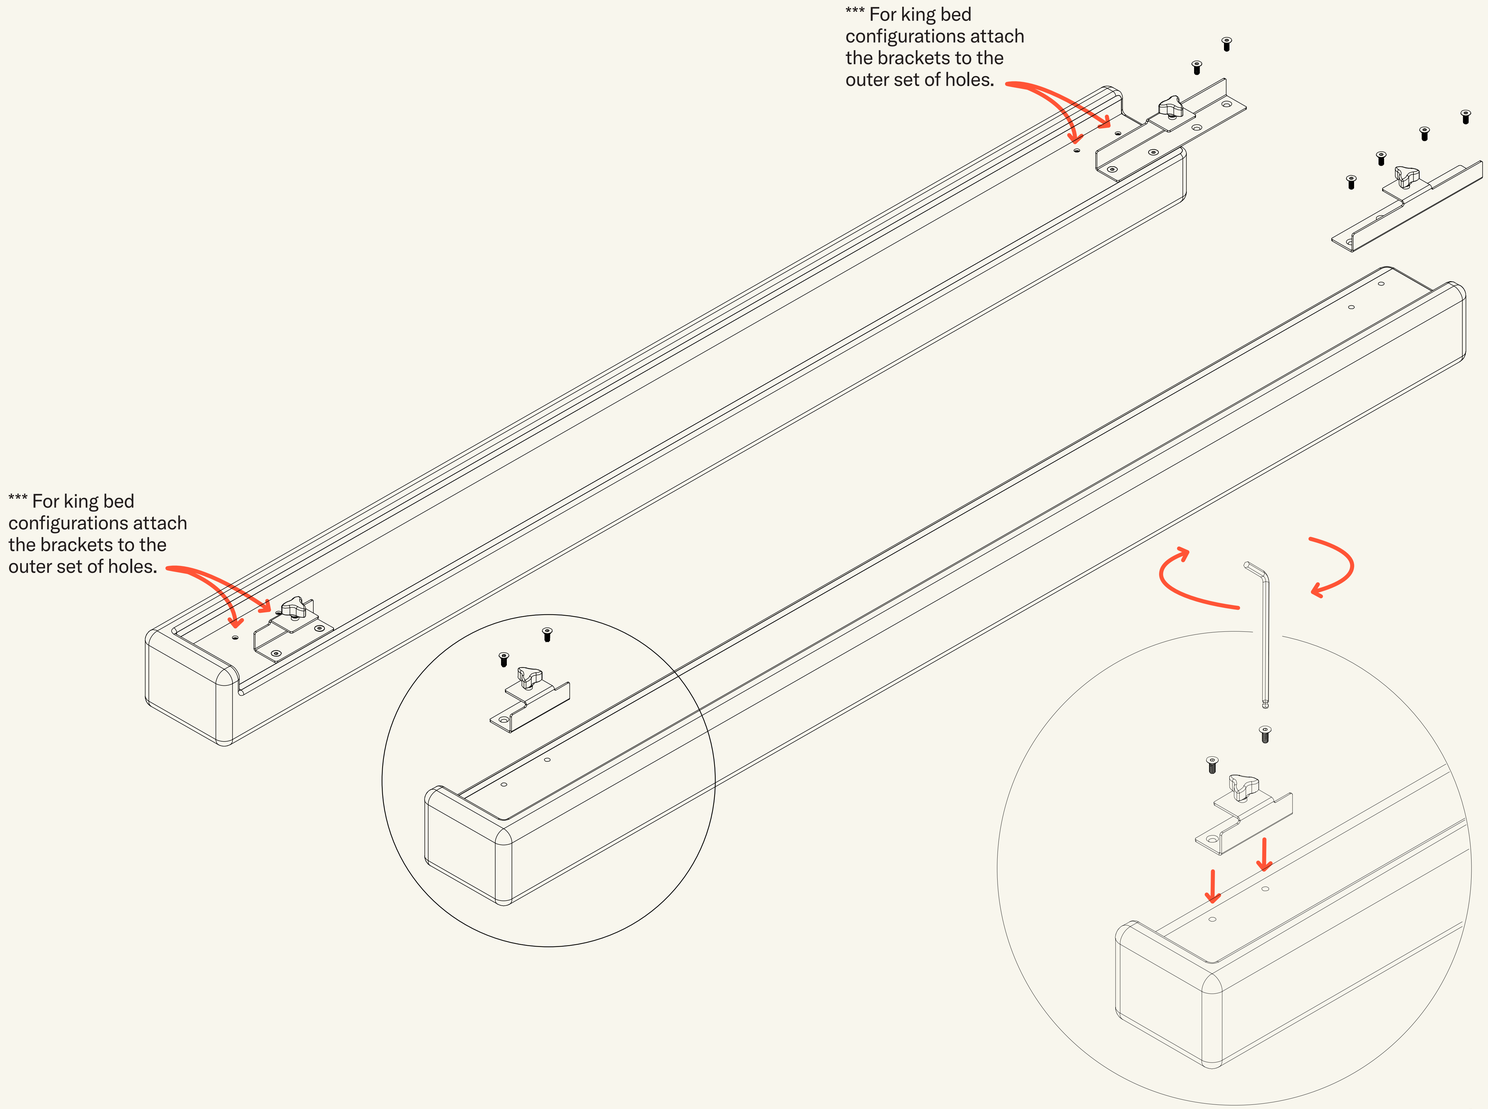


1B

Inserting thumbscrews.

Screw thumbscrews into all brackets but DO NOT screw all the way in.

Only turn them 2 - 3 times so that the brackets can still slide on to bed panels.

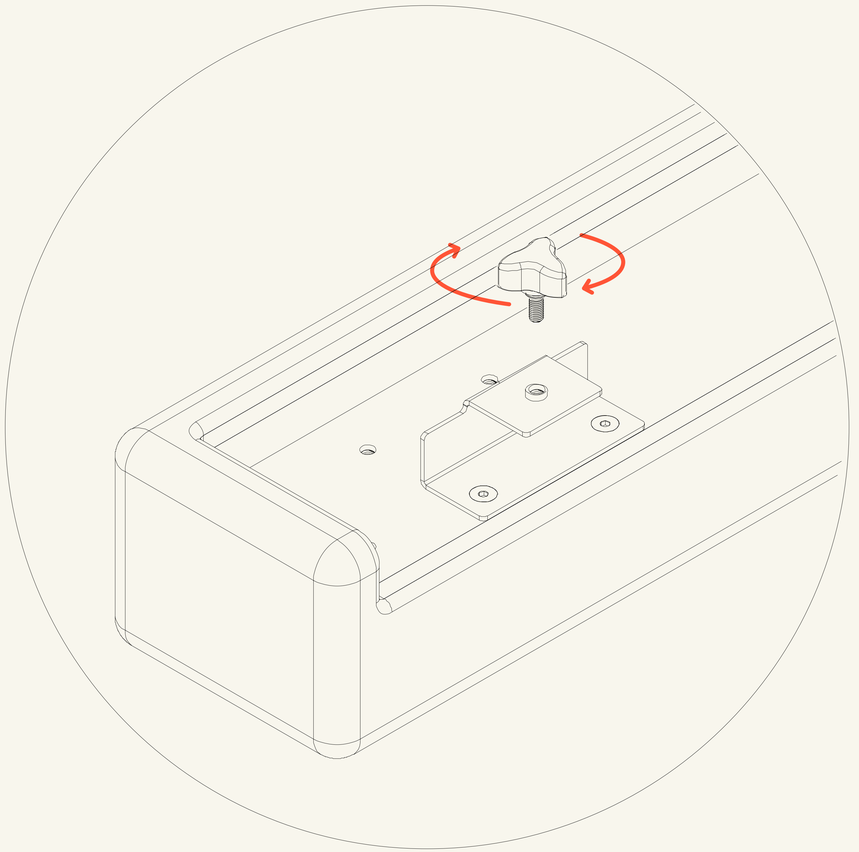

Step: 2


Adding the Upholstered Bed Add-On


2A

Attaching your Upholstered Bed Add-Ons

Slide sides onto either side of bed.

Ensure the back of the sides abutt the back of the bed.

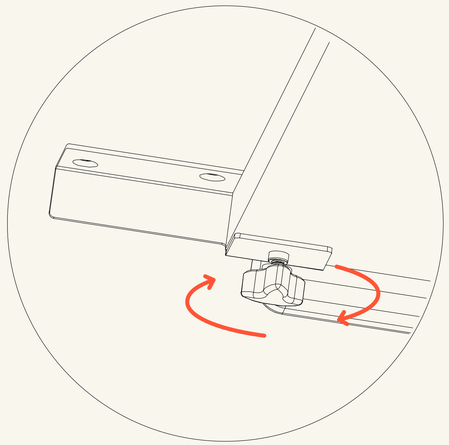

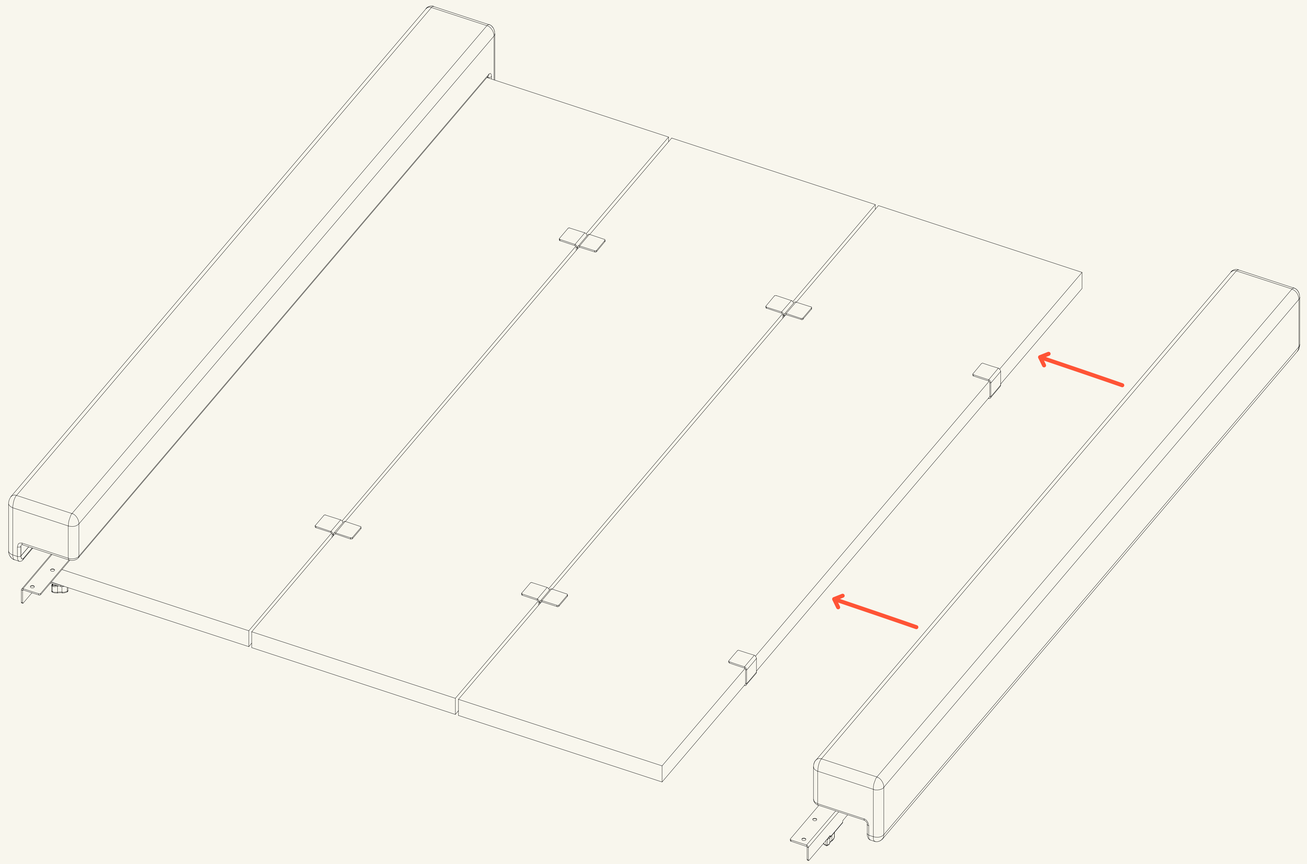


2B


Attaching your Upholstered Bed Add-Ons.

Place the front upholstered bed add-on onto of the larges brackets.

Center the front and align the holes in brackets with the threaded holes in the underside of the front add-on.

Reach under bed, insert bolts and tighten with hex key.

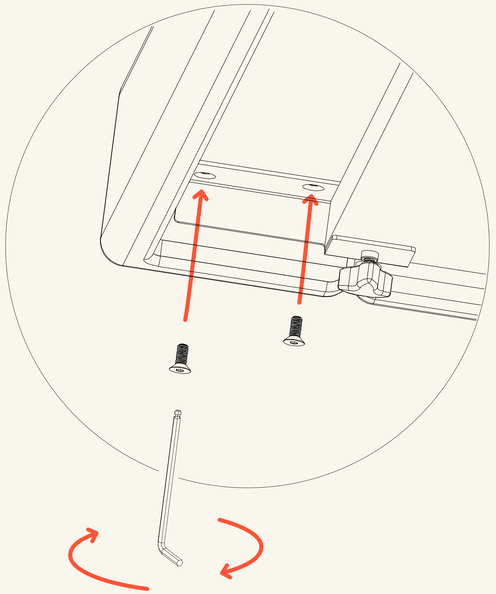

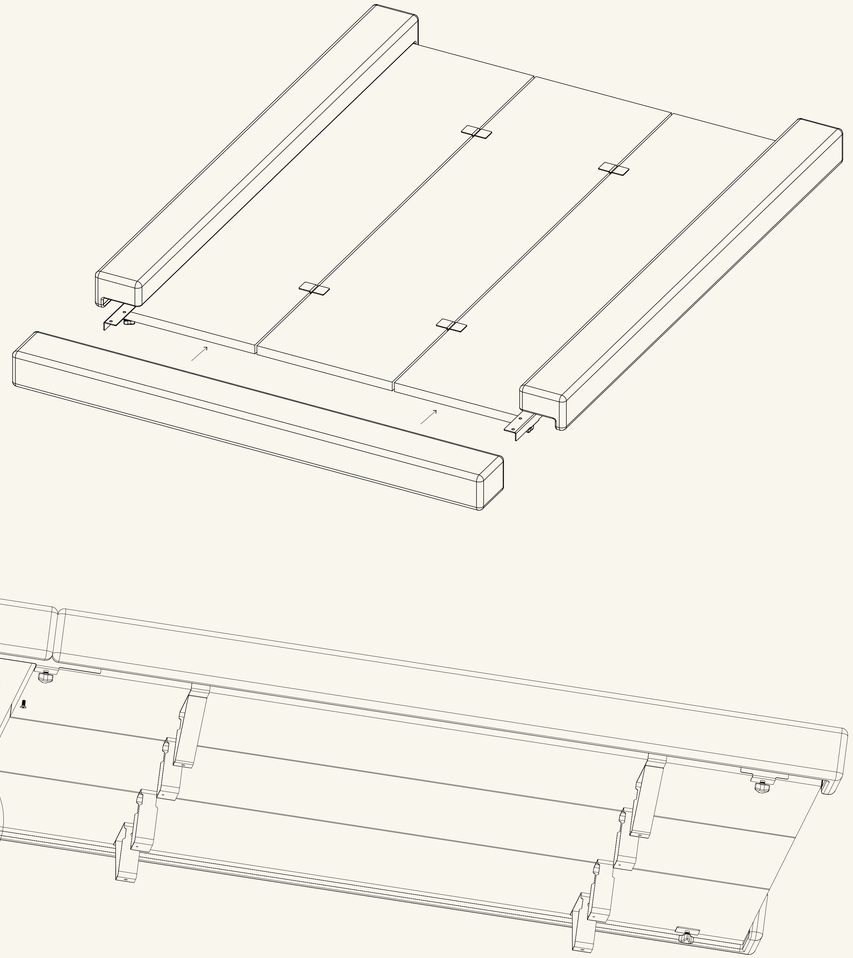

Step: 3


Adding the Upholstered Headboard.


3A

Adding the Upholstered Headboard.

Confirm your existing headboard is attached securely and at the desired height.

Then slide your upholstered headboard on top of the existing wood headboard.

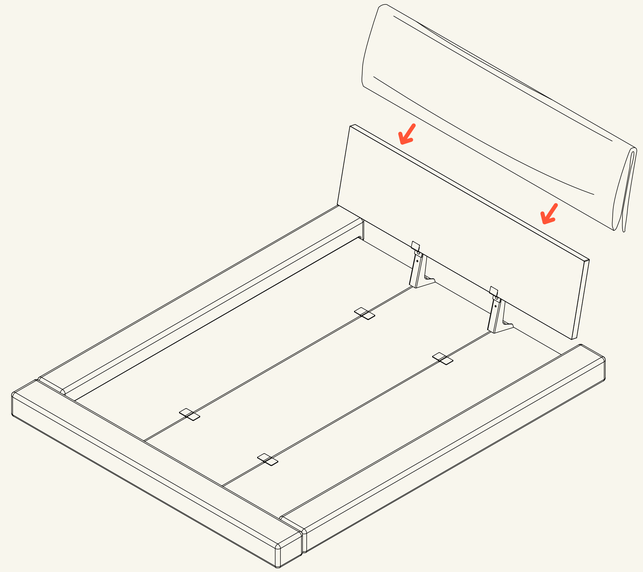

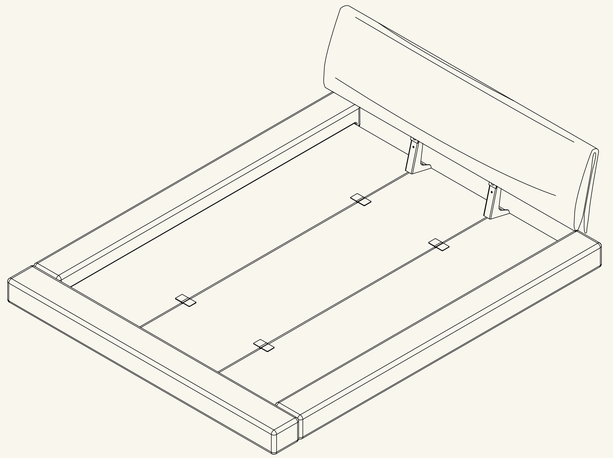

Step: 4

Installing the Back Upholstered Add-On


4A


Installing the Back Upholstered Add-On.


If your using the bed without headboard, install the back upholstered bed add-on the same as sides.

Ensure brackets are attached and slide on to back of bed (between sides).

Reach underneath and tighten thumb screws to secures.

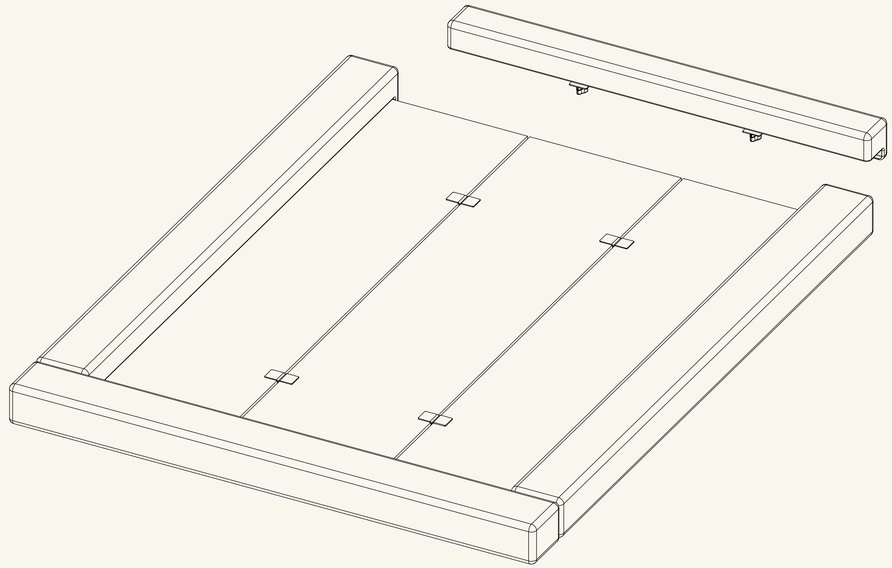

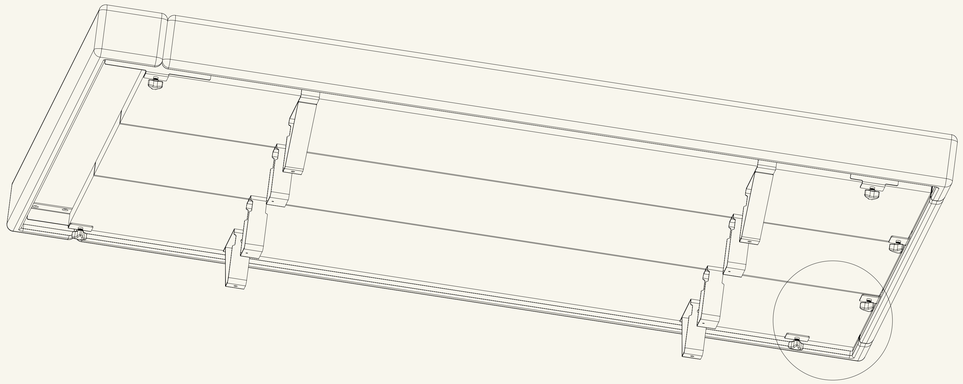

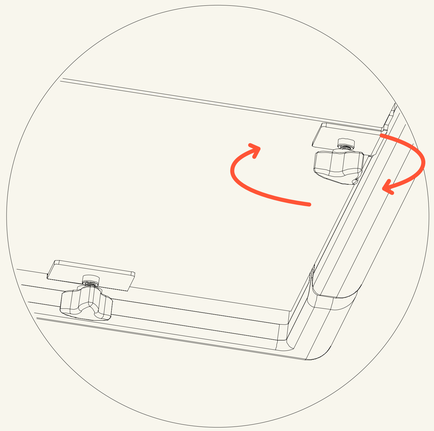



4B


Fin.

Check that all thumbscrews are tight and add-ons are secure.

Place mattress in center and enjoy!

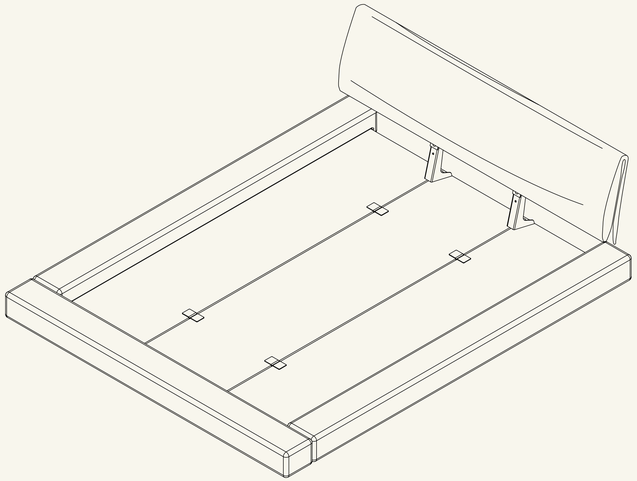

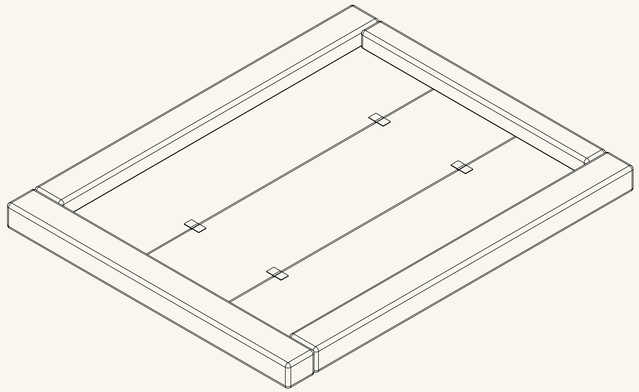

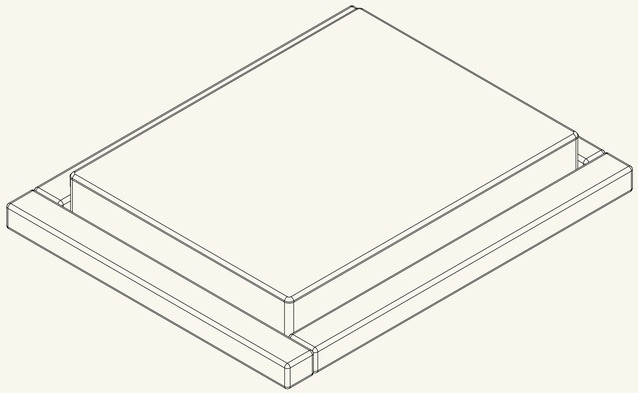

FLOYD